

PRIMERGY TX200 S4

Operating manual

Comments... Suggestions... Corrections...

The User Documentation Department would like to know your opinion of this manual. Your feedback helps us optimize our documentation to suit your individual needs.

Feel free to send us your comments by e-mail to manuals@fujitsu-siemens.com.

Certified documentation according to DIN EN ISO 9001:2000

To ensure a consistently high quality standard and user-friendliness, this documentation was created to meet the regulations of a quality management system which complies with the requirements of the standard DIN EN ISO 9001:2000.

cognitas. Gesellschaft für Technik-Dokumentation mbH
www.cognitas.de

Copyright and Trademarks

Copyright © 2008 Fujitsu Siemens Computers GmbH.

All rights reserved.

Delivery subject to availability. The right to technical modification is reserved.

All hardware and software names used are trade names and/or trademarks of their respective manufacturers.

Contents

1	Preface	7
1.1	Concept and target groups for this manual	7
1.2	Documentation overview	8
1.3	Features	10
1.4	Notational conventions	20
1.5	Technical data	21
2	Installation steps, overview	25
3	Important information	27
3.1	Safety instructions	27
3.2	CE conformity	34
3.3	FCC Class A Compliance Statement	34
3.4	Transporting the server	35
3.5	Notes on installing in the rack	36
3.6	Environmental protection	37
4	Hardware installation	39
4.1	Unpacking the server	40
4.2	Setting up the floorstand model	41
4.2.1	Mounting the anti-tilt bracket	42
4.3	Installing/removing the rack model	43
4.3.1	Installation in PRIMECENTER/DataCenter rack	47
4.3.2	Installation in 3rd party racks	49
4.3.3	Inserting the server	50

Contents

4.4	Connecting devices to the server	53
4.5	Connecting the server to the mains	54
4.5.1	Using the cable clamp	55
4.6	Notes on connecting/disconnecting cables	57
5	Starting up and operation	59
5.1	Access to the accessible drives (floorstand model)	59
5.2	Access to the HDD modules (floorstand model)	61
5.3	Controls and indicators	62
5.3.1	Front of server	62
5.3.2	Rear of server	67
5.4	Switching the server on and off	71
5.5	Configuring the server	73
5.5.1	Configuring the onboard SATA controller	73
5.5.2	Configuring the PCI SAS controller with "Integrated Mirroring Enhanced"	73
5.5.3	Configuring the PCI SAS controller with RAID functionality	74
5.5.4	Configuration with ServerStart	75
5.5.5	Configuration without ServerStart	76
5.6	Cleaning the server	77
6	Property and data protection	79
6.1	BIOS Setup security functions	79
7	Troubleshooting and tips	81
7.1	Power-on indicator remains unlit	81
7.2	Server switches itself off	82
7.3	Screen remains blank	82
7.4	Flickering stripes on monitor screen	83
7.5	No screen display or display drifts	83
7.6	No mouse pointer displayed on screen	83

7.7	Unable to read from / write to floppy disk	84
7.8	Incorrect date and time	84
7.9	Drives reported as “dead” when starting system	85
7.10	Added drive reported as defective	85
7.11	Error message on screen	85
8	CSS components	87
8.1	Hot-plug components	87
8.1.1	Hot-plug power supply units	88
8.1.1.1	Replacing the hot-plug power supply unit	88
8.1.2	Hot-plug hard disk drives	89
8.1.2.1	HDD module and dummy module	90
8.1.2.2	Handling hard disk drives and HDD modules	92
8.1.2.3	Floorstand: removing the hard disk cover	93
8.1.2.4	Removing/installing the dummy module	94
8.1.2.5	Installing the HDD module	95
8.1.2.6	Removing the HDD module	98
8.2	Replacement of non-hot-plug components	100
8.2.1	Opening the server and identifying the defective CSS component	100
8.2.1.1	Opening the housing	100
8.2.1.2	Removing system fan 1	102
8.2.1.3	Removing system fan 2	103
8.2.1.4	Removing the traverse with the air duct	104
8.2.1.5	Removing system fan 3	105
8.2.1.6	Identifying a CSS component	106
8.2.2	Replacing a memory module	106
8.2.2.1	Removing a defective memory module	106
8.2.2.2	Installing a new memory module	107
8.2.3	Replacing the system fan	108
8.2.3.1	Replacing system fan 1	108
8.2.3.2	Replacing system fan 2	108
8.2.3.3	Replacing system fan 3	109
8.2.4	Replacing an expansion card	110
8.2.4.1	Removing a defective expansion card	110
8.2.4.2	Installing a new expansion card	111

Contents

- 8.2.5 Closing the server 113
- 8.2.5.1 Installing system fan 3 113
- 8.2.5.2 Installing the traverse with the air duct 114
- 8.2.5.3 Installing system fan 2 115
- 8.2.5.4 Installing system fan 1 116
- 8.2.5.5 Closing the housing 118

Abbreviations 119

Index 125

1 Preface

The PRIMERGY TX200 S4 server is an Intel-based server for mid-size and large companies. The server is suitable for use as a file server and also as an application, information or Internet server. It is available as a floorstand or rack model. The floorstand model can be converted to a rack model using an optional conversion kit.

Due to its advanced hardware and software components, the PRIMERGY TX200 S4 server offers a high level of data security and availability. These components include hot-plug HDD modules and power supply units, optional redundant system fans, the Server Management ServerView Suite, Prefailure Detection and Analysis (PDA) and Automatic Server Reconfiguration and Restart (ASR&R).

Security functions in the BIOS-Setup and on the system board protect the data on the server against manipulation. Additional security is provided by the intrusion detection and the lockable drive cover on the floorstand model and the lockable rack door.

The rack model occupies 5 height units in the rack.

1.1 Concept and target groups for this manual

This operating manual describes how to install, set up and operate your server.

This operating manual is intended for those responsible for installing the hardware and ensuring that the system runs smoothly. It contains all the information you need to put your PRIMERGY TX200 S4 into operation.

To understand the various expansion options, you will need to be familiar with the fields of hardware and data transmission and you will require a basic knowledge of the underlying operating system.

1.2 Documentation overview

More information on your PRIMERGY TX200 S4 can be found in the following documents:

- “Quick Start Hardware - PRIMERGY TX200 S4” leaflet (only included as a printed copy)
- “Quick Start Software - Quick Installation Guide” leaflet (only included as a printed copy)
- “Safety notes and other important information” manual
- “Warranty” manual
- “Customer Self Service (CSS)” manual
- “Ergonomics” manual
- “Returning used devices” manual
- “Helpdesk” leaflet
- Technical manual for the system board D2509
- “PRIMERGY TX200 S4 Server Operating Manual”
- “PRIMERGY TX200 S4 Server Options Guide”
- “BIOS Setup V4.06 / FirstBIOS Desktop Pro V5.0 /TrustedCore™ V6.0” manual
- "iRMC S2 - integrated Remote Management Controller" manual
- "LSI SATA Software RAID User's Guide"
- "Integrated RAID for SAS User's Guide"
- “SAS/SATA Controller MegaRAID 1064 / 1068 / 1078 Installation Guide”



PRIMERGY manuals are available in PDF format on the ServerBooks DVD. The ServerBooks DVD is part of the ServerView Suite supplied with every server.

The PDF files of the manuals can also be downloaded free of charge from the Internet. The overview page showing the online documentation available on the Internet can be found using the URL:

<http://manuals.fujitsu-siemens.com>. The PRIMERGY server documentation can be accessed using the *Industry standard servers* navigation option.

If you need a replacement copy of the ServerBooks DVD, send the details of your server to the following e-mail address: Reklamat-PC-LOG@fujitsu-siemens.com

Further sources of information:

- Manual for the monitor
- Documentation for boards and drives
- Documentation for your operating system
- Information files on your operating system

1.3 Features

Customer Self Service (CSS)

The Fujitsu Siemens Computers Customer Self Service (CSS) concept enables you to identify and replace the affected component yourself in the case of certain error scenarios.

In the CSS concept, you can replace the following components yourself in the event of an error:

- Hot-plug hard disk drives
- Hot-plug power supply units
- Memory modules
- System fans
- Expansion cards

For information on replacing these components, see chapter [“CSS components” on page 87](#).

CSS indicators on the control panel and on the back of the PRIMERGY server provide you with information if a CSS event arises (for more information on the behavior of these indicators, see chapter [“Starting up and operation” on page 59](#) and the "Customer Self Service (CSS)" manual on the ServerBooks DVD).

You can also fit your server with a ServerView Local Service Panel, which enables you to identify the type of component affected by the error directly on the server (for more information, see the "Customer Self Service (CSS)" manual on the ServerBooks DVD).

In addition, CSS errors are displayed in ServerView S2, the server management software from Fujitsu Siemens Computers.

In the event of errors, ServerView S2 refers you directly to the affected component and its order information in the Illustrated Spares catalog of the server in question.

System board

The features of the system board are described in the technical manual for the system board D2509 for the hardware and in the “BIOS Setup” for the firmware.

Hard disk drives

The server is shipped with one of the following drive cages:

- For up to four 3.5-inch SAS/SATA hard disk drives:

Up to four SAS/SATA HDD modules can be used in the drive cage. Each HDD module can accommodate a SAS/SATA hard disk drive with a maximum height of 1 inch. The module is connected to the SAS/SATA backplane wirelessly. This allows HDD modules to be plugged in and pulled out easily.

A hard disk extension box (with a maximum of two SAS HDD modules) can be installed as an option for the SAS variant (see section [“Accessible drives” on page 13](#)).

SATA hard disk drives are controlled by the onboard SATA controller. An additional SAS controller must be installed to control SAS hard disk drives.

Hybrid configurations of SAS and SATA HDD modules in one drive cage are not supported.

If you need a hybrid configuration of SAS and SATA HDD modules, you can install an extension box with up to two SATA HDD modules in the SAS server variant.

- For up to eight 2.5-inch SAS/SATA hard disk drives:

Up to eight SAS HDD modules can be used in the drive cage. Each HDD module can accommodate an SAS hard disk drive with a 2.5-inch format. The modules are connected to the SAS backplane wirelessly. This allows HDD modules to be plugged in or pulled out easily.

A hard disk extension box (with a maximum of eight SAS HDD modules) can also be installed as an option (see section [“Accessible drives” on page 13](#)).




The hard disk extension box for 2.5-inch SAS hard disk drives requires a specific controller: LSI Mega RAID SAS 1068 or LSI Mega RAID SAS 1078.

The SAS hard disk drives are controlled by an integrated SAS PCI controller.

If the server has the corresponding RAID configuration, HDD modules can also be replaced during operation.

Onboard SATA controller

A SATA controller is integrated on the system board; up to four SATA hard disk drives can be connected to the controller. The LSI SATA RAID software supports RAID levels 0 and 1.

 The controller has its own configuration utility. More detailed information may be found in the "LSI SATA Software RAID User's Guide" (on the ServerBooks DVD under "Controllers").


If required, RAID-Level 5 can be added to the RAID functionality using an activation key. If the server is ordered with this RAID option, the activation key is included on the system board by the manufacturer. As a result, RAID levels 0, 1 and 5 are available.

PCI SAS controller

To run a maximum of eight SAS hard disk drives, the server is shipped with one of the following two PCI SAS controllers:


- PCI SAS controller with "Integrated Mirroring Enhanced" (IME)

IME supports RAID level 0, 1 and 1E configuration of the internal hard disk drives.


 The controller makes a separate utility available for IME configuration. Further information is included in the "Integrated RAID for SAS User's Guide" (on the ServerBooks DVD under "Controllers").

- PCI SAS controller with MegaRAID functionality

RAID levels 0, 1, 10, 5, 50, 6 and 60 are supported. As an option, a battery backup unit (BBU) can save the memory content even if the power fails.

 The controller makes a separate utility available for RAID configuration. For further information, refer to the "SAS/SATA Controller MegaRAID 1064 / 1068 / 1078 Installation Guide" on the ServerBooks DVD (select "Controllers" from the menu).

If you wish to operate more than eight SAS hard disk drives using the hard disk extension box, you will have to install an additional controller (see section ["Accessible drives" on page 13](#)).

 The hard disk extension box for 2.5-inch SAS hard disk drives requires a specific controller: LSI Mega RAID SAS 1068 or LSI Mega RAID SAS 1078.

Accessible drives

The server has three 5.25-inch bays that can be used in various ways:

The individual bays can be equipped with any 3.5-inch drives (height: 1.6 inch).

You can install a Multibay (DVD-LSD/FDD) in the bottom bay (floorstand) or the bay on the extreme right (rack). The Multibay (DVD-LSD/FDD) can accommodate a Slimline DVD drive and either the ServerView Local Service Display or a Slimline floppy disk drive.

The following expansion boxes are also available depending on the hard disk configuration selected:

- With one drive cage for up to four 3.5-inch SAS hard disk drives:

You can install an expansion box for up to two 3.5-inch SAS hard disk drives in the two top bays (floorstand) or the bays on the right in the rack model. This box has bays for a Slimline DVD drive, the ServerView Local Service Display, and up to two 3.5-inch SAS hard disk drives.

- With a drive cage for up to eight 2.5-inch SAS hard disk drives:

You can install an expansion box for up to eight 2.5-inch SAS hard disk drives in the two top bays (floorstand) or the bays on the right in the rack model.



The hard disk extension box for 2.5-inch SAS hard disk drives requires a specific controller: LSI Mega RAID SAS 1068 or LSI Mega RAID SAS 1078.



Please note the following:

- A DVD drive must have been installed in order to operate the server.
- The accessible drives cannot be replaced during operation.
- Access to the accessible drives may have to be free in order to operate tape drives (see [“Access to the accessible drives \(floorstand model\)”](#) on page 59).

Power supply

In its basic configuration the server has a permanently installed power supply unit or a hot-plug power supply unit that adjusts automatically to any mains voltage in the range 100 V - 127 V or 200 V - 240 V. Besides the hot-plug power supply unit, a second hot-plug power supply unit can be installed optionally to serve as a redundant power supply. If one power supply unit fails, the second power supply unit in the redundant configuration ensures operation can continue uninterrupted. The faulty power supply unit can be replaced during operation (for further details see section [“Hot-plug power supply units” on page 88](#)).

Cooling

In the standard configuration the server is cooled by three system fans and one or two power supply fans.

In the optional, redundant configuration the server is cooled by four system fans and one or two power supply fans. If one of the four system fans fails, one of the two predetermined fans (system fan 3 and system fan 4, see the "Options Guide" for the system) increases its power to ensure that the server is cooled properly.

High level of availability and data security

When memory data is accessed, 1-bit errors are identified in the main memory and automatically corrected with the error correcting code (ECC) method. The patented memory scrubbing function regularly starts up the EDC mechanism, ensuring continuous data integrity.

The memory modules used support SDDC technology (Chipkill™), which further increases the effectiveness of memory error monitoring and correction.

Hot-spare memory technology is also supported; a memory bank is used as a replacement bank (provided all occupied memory banks have exactly the same memory configuration). If a memory module fails, the bank with the defective memory is automatically deactivated and the replacement bank is activated (provided it has been configured for appropriately in the BIOS). The deactivated memory bank is no longer used and the faulty memory module can be replaced at the next opportunity.

ASR&R (Automatic Server Reconfiguration and Restart) restarts the system in the event of an error and automatically "hides" the defective system components.

The PDA (Prefailure Detection and Analysis) technology from Fujitsu Siemens Computers analyzes and monitors all components that are critical for system reliability.

Optional RAID controllers support RAID levels 0, 1 and 5 and increase system availability.

The hot-plug HDD modules provide additional availability.

iRMC S2 with integrated service LAN port



The features of the iRMC S2 Advanced Video Redirection and Remote Storage are available as an option.

The iRMC S2 (integrated **R**emote **M**anagement **C**ontroller) is a BMC with integrated service LAN port and expanded functionality that was previously only available with additional plug-in cards. In this way, the iRMC S2 enables complete control of PRIMERGY servers, regardless of system status, and thus particularly the control of PRIMERGY servers that are in the “out-of-band” system status.

Major functions supported by the iRMC S2 include the following:

- Browser access via iRMC's own Web server
- Secure communication (SSH, SSL)
- Power Management for the managed server (depending on its system status)
- Power Consumption Management
- Connecting virtual drives as remote storage
- Text-based and graphic console bypass (Advanced Video Redirection)
- Command Line Interface (CLP)
- Simple, interactive or script-based iRMC S2 configuration
- Customer Self Service (CSS)
- iRMC-s own user management
- Multi-computer, global iRMC user administration using an LDAP Directory Service
- Automatic network configuration via DNS / DHCP
- Power supply of the iRMC S2 via the system standby supply
- Full-coverage alarm management
- System Event Log (SEL) reading and processing

More information about the iRMC S2 can be found in the “iRMC S2 - integrated Remote Management Controller” manual.

Server management

Server management is implemented using the supplied ServerView software in conjunction with PDA (Prefailure Detection and Analysis) technology from Fujitsu Siemens. PDA reports the threat of a system error or overload at an early stage, allowing preventive measures to be taken.

ServerView enables the management of all PRIMERGY servers in the network via a central console. ServerView supports the following functions:

- Round-the-clock monitoring, regardless of server status
- High-performance, graphical console bypass (AVR) protected by HTTPS/SSL (128-bit)
- Remote storage via USB
- Remote power on (Wake On LAN)
- Intrusion detection in the floorstand model
- Temperature monitoring of the CPU and the surrounding area
- Monitoring of PCI bus loading
- Detailed status and error reports for bus systems, processors and main memory
- Watchdog timer for Automatic Server Reconfiguration and Restart (ASR&R) in the event of failure of memory modules or processors
- Power monitoring
- End-of-life monitoring of fans with prompt notification before failure
- Watchdog timer for monitoring the operating system and applications with ASR&R

Further information on the ServerView server management is provided in the associated documentation.

ServerStart

You can configure the PRIMERGY server quickly and precisely with the ServerStart software provided. User-guided menus are available for installing the server operating system (for further details see section [“Configuring the server” on page 73](#)).

Service and support

PRIMERGY servers are service-friendly and modular, enabling quick and easy maintenance.

The handles and locks (touch point) on the various hot pluggable components are colored green to ensure simple and immediate recognition.

In order to prevent the components from being damaged by incorrect handling when they are being installed and removed, the areas of all components that can be touched without damaging them are also marked green.

PRIMERGY diagnostic LEDs fitted on the system board show which component on the system board (memory module, CPU, fan) is not functioning properly.

The Flash EPROM program supplied with the Fujitsu Siemens Computers utilities supports a fast BIOS update.

With the iRMC S2 (integrated Remote Management Controller) on the system board and the optional remote testing and diagnostic system ServerView Remote Management, the PRIMERGY TX200 S4 server can also be maintained and serviced remotely. This enables remote diagnosis for system analysis, remote configuration and remote restart should the operating system or hardware fail.

ServerView Remote Management

ServerView Remote Management is the remote management solution from Fujitsu Siemens Computers for PRIMERGY servers. ServerView Remote Management and the relevant hardware components integrated on the system board allow remote monitoring and maintenance as well as fast restoration of operation in the event of errors.

Remote monitoring and maintenance avoids time-consuming and costly on-site repairs and reduces service costs. This leads to a reduction in the total cost of ownership and an excellent return on investment for the remote management solution.



The administrator can access all system information and information from the sensors such as fan speeds or voltages via the iRMC S2's Web interface (see section [“iRMC S2 with integrated service LAN port” on page 16](#)). He can also start the text-based or graphic console bypass (Advanced Video Redirection, AVR) and get information about remote storage.



The features of the iRMC S2 Advanced Video Redirection and Remote Storage are available as an option.

1.4 Notational conventions

The following notational conventions are used in this manual:

<i>Text in italics</i>	indicates commands or menu items.
“Quotation marks”	indicate names of chapters and terms that are being emphasized.
▶	describes activities that must be performed in the order shown.
 CAUTION!	pay particular attention to texts marked with this symbol. Failure to observe this warning may endanger your life, destroy the system or lead to the loss of data.
	indicates additional information, notes and tips.

1.5 Technical data

Electrical data (power supply)

	Standard power supply unit	Hot-plug power supply unit
Rated voltage range	100 V - 127 V or 200 V - 240 V	
Frequency	50 Hz - 60 Hz	
Max. rated current	100 V - 127 V or 200 V - 240 V / 9.0 A - 4.5A	
Main power fuse	16 A	
Protection class	I	

Power consumption

	Standard power supply unit	Hot-plug power supply unit
Rated current in the basic configuration	100 V or 230 V / 2.0 A - 0.86 A	
Rated current with max. configuration	100 V or 230 V / 5.4 A - 2.31 A	
Active power with max. configuration	512 W	
Apparent power with max. configuration	531 VA	
Heat dissipation with max. configuration	1843 kJ/h (1746 btu/h)	

Compliance with regulations and standards

Product safety and ergonomics	IEC 60950-1 / EN 60950-1, UL/CSA 60950-1, CNS 14336 / GB 4943 / EN 50371
Electromagnetic compatibility	FCC class A CNS 13438 class A; VCCI class A AS/NZS CISPR 22 class A / GB 9254 class A GB 17625
Interference emissions	EN 55022 class A
Harmonic current	EN 61000-3-2
Flicker	EN 61000-3-3
Interference immunity	EN 55024, EN 300386
CE marking to EU directives	Low Voltage Directive 2006/95/EC (Product Safety) Electromagnetic Compatibility 2004/108/EC

Mechanical values

	Floorstand	Rack
Width (with anti-tilt bracket)	372 mm	486 mm
Total depth	Standard power supply unit: 657 mm hot-plug power supply unit: 699 mm	777 mm
Installation depth	-----	742 mm
Height	447 mm	5 HU

Weight

Max. 35 kg (depending on configuration).

Ventilation clearance

At least 200 mm on the front and rear.

Maintenance area for the floorstand model

1.2 m² on the left side. Emergency access must be assured.

Ambient conditions

Environment class 3K2	EN 60721 / IEC 721 Part 3-3
Environment class 2K2	EN 60721 / IEC 721 Part 3-2
Temperature:	
Operation (3K2)	10 °C 35 °C
Transport (2K2)	-25 °C 60 °C
Humidity	10% 85%

Condensation during operation must be avoided!

Noise level with standard fan and standard power supply units

Sound power level L_{WAd} (ISO 9296)	≤ 5.3 B (standby) ≤ 5.4 B (operating)
Sound pressure level at adjacent position L_{pAm} (ISO 9296)	≤ 35 dB (A) (standby) ≤ 37 dB (A) (operating)

Noise level with redundant system fans and redundant power supply

Sound power level L_{WAd} (ISO 9296)	≤ 5.6 B (standby) ≤ 5.7 B (operating)
Sound pressure level at adjacent position L_{pAm} (ISO 9296)	≤ 39 dB (A) (standby) ≤ 40 dB (A) (operating)

2 Installation steps, overview

This chapter contains an overview of the steps you need to carry out to install your server. Links take you to sections where you can find more detailed information about the respective steps:

- ▶ First of all, it is essential that you familiarize yourself with the safety information in chapter [“Important information” on page 27 ff.](#)
- ▶ Unpack the system, check the contents of the package for visible transport damage and check whether the items delivered match the details on the delivery note (see section [“Unpacking the server” on page 40](#)).
- ▶ Transport the server to the place where you want to set it up.
- ▶ Make sure that you have all necessary manuals (see [“Documentation overview” on page 8](#)); print out the PDF files if required.
- ▶ Components that have been ordered additionally may be delivered loose with the server. Install these in the server as described in the supplied documentation.
- ▶ Set up the floorstand model (see section [“Setting up the floorstand model” on page 41](#)) or install the rack model in the rack (see section [“Installing/removing the rack model” on page 43](#)).
- ▶ Wire the server. Follow the instructions in sections [“Connecting devices to the server” on page 53](#) and [“Notes on connecting/disconnecting cables” on page 57](#).
- ▶ Connect the server to the mains (see section [“Connecting the server to the mains” on page 54](#)).
- ▶ Familiarize yourself with the controls and indicators on the front and rear of the server (see section [“Controls and indicators” on page 62](#)).

- ▶ Configure the server and install the desired operating system and applications. The following options are available:

- Remote configuration and installation with ServerStart:

The ServerStart DVD supplied allows you to conveniently configure the server and install the operating system.

Details on how to operate ServerStart, as well as some additional information, are included in the "PRIMERGY ServerView Suite - ServerStart" manual.

Configuration information can also be found in section ["Configuration with ServerStart" on page 75](#).

- Local configuration and installation with or without ServerStart (see section ["Configuration with ServerStart" on page 75](#) or section ["Configuration without ServerStart" on page 76](#)).



You will find more information on installing the server remotely or locally in the ServerStart manual. This manual contains the installation steps ("Quick Step Guide"). A corresponding PDF file is included on the ServerBooks DVD.

3 Important information

In this chapter you will find essential information regarding safety when working on your server.

3.1 Safety instructions



The following safety instructions are also provided in the manual “Safety notes and other important information”.

This device meets the relevant safety regulations for IT equipment. If you have any questions about whether you can install the server in the intended environment, please contact your sales outlet or our customer service team.



CAUTION!

- The actions described in this manual should only be performed by technical specialists.
- Repairs to the device that do not relate to CSS failures must only be carried out by service personnel. Please note that unauthorized interference with the system will void the warranty and exempt the manufacturer from all liability.
- Any failure to observe the guidelines in this manual, and any improper repairs could expose the user to risks (electric shock, energy hazards, fire hazards) or damage the equipment.

Before starting up



CAUTION!

- During installation and before operating the device, observe the instructions on environmental conditions for your device (see [section “Technical data” on page 21](#)).

- If the server has been moved from a cold environment, condensation may form both inside and on the outside of the machine.

Wait until the server has acclimatized to room temperature and is absolutely dry before starting it up. Material damage may be caused to the server if this requirement is not met.

- Only transport the server in the original packaging or in packaging that protects it from impacts and jolts.

Installation and operation



CAUTION!

- This unit should not be operated in ambient temperatures above 35 °C.
- If the unit is integrated into an installation that draws power from an industrial power supply network with an IEC309 connector, the power supply's fuse protection must comply with the requirements for non-industrial power supply networks for type A connectors.
- The unit automatically adjusts itself to a mains voltage in a range of 100 V - 127 V or 200 V - 240 V. Ensure that the local mains voltage lies within these limits.
- This device must only be connected to properly grounded shock-proof sockets or insulated sockets of the rack's internal power supply with tested and approved power cables.
- Ensure that the device is connected to a grounded shockproof socket close to the device.

**CAUTION!**

- Ensure that the power sockets on the device and the grounded shock-proof sockets are freely accessible.
- The On/Off button or the main power switch (if present) does not isolate the device from the mains power supply. To disconnect it completely from the mains power supply, unplug all network power plugs from the grounded shockproof sockets.
- Always connect the server and the attached peripherals to the same power circuit. Otherwise you run the risk of losing data if, for example, the server is still running but a peripheral device (e.g. memory subsystem) fails during a power outage.
- Data cables must be adequately shielded.
- The EN 50173 and EN 50174-1/2 standards apply for LAN cabling. The minimum requirement is the use of a category 5 screened LAN cable for 10/100 Mbps Ethernet, or a category 5e cable for Gigabit Ethernet. The requirements from the ISO/IEC 11801 specification must also be met.
- Route the cables in such a way that they do not create a potential hazard (make sure no-one can trip over them) and that they cannot be damaged. When connecting the server, refer to the relevant instructions in this manual.
- Never connect or disconnect data transmission lines during a storm (risk of lightning strike).
- Make sure that no objects (e.g. jewelry, paperclips etc.) or liquids can get inside the server (risk of electric shock, short circuit).
- In emergencies (e.g. damaged casing, controls or cables, penetration of liquids or foreign bodies), switch off the server immediately, remove all power plugs and contact your sales outlet or customer service team.

**CAUTION!**

- Proper operation of the system (in accordance with IEC 60950-1/ EN 60950-1) is only ensured if the casing is completely assembled and the rear covers for the installation slots have been fitted (electric shock, cooling, fire protection, interference suppression).
- Only install system expansions that satisfy the requirements and rules governing safety and electromagnetic compatibility and those relating to telecommunication terminals. If you install other expansions, they may damage the system or violate the safety regulations. Information on which system expansions are approved for installation can be obtained from our customer service center or your sales outlet.
- The components marked with a warning notice (e.g. lightning symbol) may only be opened, removed or exchanged by authorized, qualified personnel. Exception: hot-plug power supply units/CCS components can be replaced.
- The warranty is void if the server is damaged during installation or replacement of system expansions.
- Only set screen resolutions and refresh rates that are specified in the operating manual for the monitor. Otherwise, you may damage your monitor. If you are in any doubt, contact your sales outlet or customer service center.

Batteries



CAUTION!

- Incorrect replacement of batteries may lead to a risk of explosion. The batteries may only be replaced with identical batteries or with a type recommended by the manufacturer (see the technical manual for the system board).
- Do not throw batteries into the trash can. They must be disposed of in accordance with local regulations concerning special waste.
- The battery must be disposed of in accordance with local regulations concerning special waste.
- Replace the lithium battery on the system board in accordance with the instructions in the technical manual for the system board.
- All batteries containing pollutants are marked with a symbol (a crossed-out garbage can). In addition, the marking is provided with the chemical symbol of the heavy metal decisive for the classification as a pollutant:

Cd Cadmium

Hg Mercury

Pb Lead

Working with CDs/DVDs and CD/DVD drives

When working with devices with CD/DVD drives, these instructions must be followed.



CAUTION!

- Only use CDs/DVDs that are in perfect condition in your server's CD/DVD drive, in order to prevent data loss, equipment damage and injury.
- Check each CD/DVD for damage, cracks, breakages etc. before inserting it in the drive.

Note that any additional labels applied may change the mechanical properties of a CD/DVD and cause imbalance.

Damaged and imbalanced CDs/DVDs can break at high drive speeds (data loss).

Under certain circumstances, sharp CD/DVD fragments can pierce the cover of the CD/DVD drive (equipment damage) and can fly out of the device (danger of injury, particularly to uncovered body parts such as the face or neck).



You can prevent mechanical damage and damage to the CD/DVD drive, as well as premature CD/DVD wear, by observing the following suggestions:

- Only insert CDs/DVDs in the drive when needed and remove them after use.
- Store the CDs/DVDs in suitable sleeves.
- Protect the CDs/DVDs from exposure to heat and direct sunlight.

Laser information

The CD/DVD drive complies with IEC 60825-1 laser class 1.



CAUTION!

The CD/DVD drive contains a light-emitting diode (LED), which under certain circumstances produces a laser beam stronger than laser class 1. Looking directly at this beam is dangerous.

Never remove parts of the CD/DVD drive casing!

Modules with Electrostatic-Sensitive Devices

Modules with electrostatic-sensitive devices are identified by the following sticker:

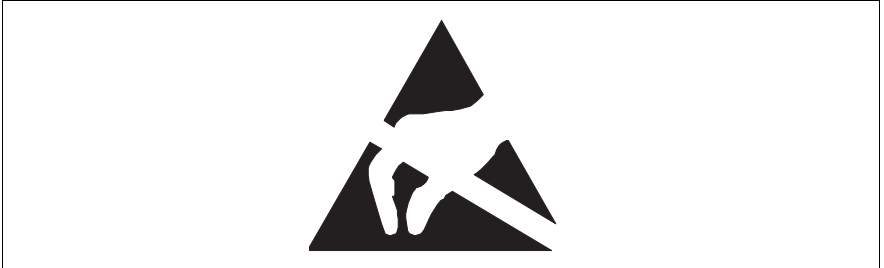


Figure 1: ESD label

When you handle components fitted with ESDs, you must always observe the following points:

- Switch off the system and remove the power plugs from the power outlets before installing or removing components with ESDs.
- You must always discharge static build-up (e.g. by touching a grounded object) before working with such components.
- Any devices or tools that are used must be free of electrostatic charge.
- Wear a suitable grounding cable that connects you to the external chassis of the system unit.
- Always hold components with ESDs at the edges or at the points marked green (touch points).
- Do not touch any connectors or conduction paths on an ESD.
- Place all the components on a pad which is free of electrostatic charge.




For a detailed description of how to handle ESD components, see the relevant European or international standards (EN 61340-5-1, ANSI/ESD S20.20).

Other important information:

- During cleaning, observe the instructions in section [“Cleaning the server” on page 77](#).
- Keep this operating manual and the other documentation (such as the technical manual, CD) close to the device. All documentation must be included if the equipment is passed on to a third party.

3.2 CE conformity

 The system complies with the requirements of the EC directives 2004/108/EC regarding “Electromagnetic Compatibility” and 2006/95/EC “Low Voltage Directive”. This is indicated by the CE marking (CE = Communauté Européenne).

3.3 FCC Class A Compliance Statement

If there is an FCC statement on the device, then:

The following statement applies to the products covered in this manual, unless otherwise specified herein. The statement for other products will appear in the accompanying documentation.

NOTE:

This equipment has been tested and found to comply with the limits for a “Class A” digital device, pursuant to Part 15 of the FCC rules and meets all requirements of the Canadian Interference-Causing Equipment Standard ICES-003 for digital apparatus. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in strict accordance with the instructions, may cause harmful interference to radio communications. However, there is no warranty that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Fujitsu Siemens Computers is not responsible for any radio or television interference caused by unauthorized modifications of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by Fujitsu Siemens Computers. The correction of interferences caused by such unauthorized modification, substitution or attachment will be the responsibility of the user.

The use of shielded I/O cables is required when connecting this equipment to any and all optional peripheral or host devices. Failure to do so may violate FCC and ICES rules.

WARNING:

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

3.4 Transporting the server

**CAUTION!**

Only transport the server in its original packaging or in packaging that protects it from impacts and jolts. Do not unpack the server until it is at its installation location.

If you need to lift or transport the server, ask other people to help you.

Never lift or carry the device by the handles on the front panel.

3.5 Notes on installing in the rack



CAUTION!

- **For safety reasons, at least two people are required to install the rack model because of its weight and size.**
- Never lift the server into the rack using the handles on the front panel.
- When connecting and disconnecting cables, observe the relevant instructions in the “Important Information” chapter of the technical manual for the corresponding rack. The technical manual is supplied with the corresponding rack.
- When installing the rack, make sure that the anti-tilt mechanism is correctly fitted.
- For safety reasons, no more than one unit may be removed from the rack at any one time during installation and maintenance work.
- If several units are simultaneously removed from the rack, there is a risk that the rack could tip over.
- The rack must be connected to the power supply by an authorized specialist (electrician).
- If the rack model is integrated into an installation that draws power from an industrial power supply network with an IEC309 type connector, the power supply's fuse protection must comply with the requirements for non-industrial power supply networks for the type A connector.

3.6 Environmental protection

Environmentally-friendly product design and development

This product has been designed in accordance with the Fujitsu Siemens Computers standard for “environmentally friendly product design and development”. This means that key factors such as durability, selection and labeling of materials, emissions, packaging, ease of dismantling and recycling have been taken into account.

This saves resources and thus reduces the harm done to the environment.

Energy-saving information

Devices that do not need to be constantly switched on should be switched off until they are needed as well as during long breaks and after completion of work.

Packaging information

Do not throw away the packaging. You may need it later for transporting the system. If possible, the equipment should only be transported in its original packaging.

Information on handling consumables

Please dispose of printer consumables and batteries in accordance with the applicable national regulations.

In accordance with EU directives, batteries must not be disposed of with unsorted domestic waste. They can be returned free of charge to the manufacturer, dealer or an authorized agent for recycling or disposal.

All batteries containing pollutants are marked with a symbol (a crossed-out garbage can). They are also marked with the chemical symbol for the heavy metal that causes them to be categorized as containing pollutants:

Cd Cadmium

Hg Mercury

Pb Lead

Labels on plastic casing parts

Please avoid sticking your own labels on plastic parts wherever possible, since this makes it difficult to recycle them.

Returns, recycling and disposal



The device must not be disposed of with domestic waste. This device is labeled in compliance with European directive 2002/96/EC on waste electrical and electronic equipment (WEEE).

This directive sets the framework for returning and recycling used equipment and is valid across the EU. When returning your used device, please use the return and collection systems available to you. Further information can be found at www.fujitsu-siemens.com/recycling.

Details regarding the return and recycling of devices and consumables within Europe can also be found in the “Returning used devices” manual, via your local Fujitsu Siemens Computers branch or from our recycling center in Paderborn:

Fujitsu Siemens Computers
Recycling Center
D-33106 Paderborn

Tel. +49 5251 8 18010

Fax +49 5251 8 18015

4 Hardware installation



CAUTION!

- Follow the safety instructions in the chapter [“Important information” on page 27](#).
- Do not expose the server to extreme environmental conditions (see [“Ambient conditions” on page 23](#)). Protect the server from dust, humidity and heat.
- Make sure that the server is acclimatized for the time indicated in this table before putting it into operation.

Temperature difference (°C)	Minimum acclimatization time (hours)
5	3
10	5
15	7
20	8
25	9
30	10

Table 1: Acclimatization time

In [table “Acclimatization time”](#), the temperature difference refers to the difference between the operating environment temperature and the temperature to which the server was exposed previously (outside, transport or storage temperature).

4.1 Unpacking the server



CAUTION!

Follow the safety instructions in chapter [“Important information” on page 27](#).

The server must always be lifted or carried by at least two people.

Do not unpack the server until it is at its installation location.

- ▶ Transport the server to the place where you want to set it up.
- ▶ Unpack all individual parts.
Keep the original packaging in case you want to transport the server again.
- ▶ Check the delivery for any damage during transport.
- ▶ Check whether the items delivered match the details on the delivery note.

The product name and serial number of the product can be found on the identification rating plate.

- ▶ Notify your supplier immediately should you discover that the items delivered do not correspond to the delivery note.

4.2 Setting up the floorstand model



If you are not installing a PRIMERGY TX200 S4 floorstand model, skip this section and continue reading at [section “Installing/removing the rack model” on page 43](#).



CAUTION!

Please note the safety instructions in [chapter “Important information” on page 27](#).

- ▶ Transport the server to the place where you want to set it up.
- ▶ Unpack the server (see [section “Unpacking the server”](#)).
- ▶ Set up the server.

Note that for safety reasons (danger of tipping) the anti-tilt bracket must be mounted on the back of the server (see [section “Mounting the anti-tilt bracket” on page 42](#)).



CAUTION!

- The device must be protected from direct sunlight.
 - The essential minimum clearance for servicing must be maintained (see [“Maintenance area for the floorstand model” on page 23](#)).
 - Access to the rear of the server must be assured so that other devices (e.g. memory subsystems) can be connected.
 - A clearance of at least 200 mm must be maintained in front of and behind the system to ensure proper ventilation.
 - The mains plug must be accessible easily and safely.
- ▶ Wire the server. Read the information in [section “Connecting devices to the server” on page 53](#) and [section “Notes on connecting/disconnecting cables” on page 57](#).
 - ▶ Connect the system to the mains (see [section “Connecting the server to the mains” on page 54](#)).

4.2.1 Mounting the anti-tilt bracket



Figure 2: Mounting the anti-tilt bracket

- ▶ Place the server on the anti-tilt bracket.
- ▶ Fasten the anti-tilt bracket using the two knurled screws (1).

4.3 Installing/removing the rack model



CAUTION!

- Please observe the safety information and notes on rack mounting in [chapter “Important information” on page 27](#).
- Several people are needed to install / remove the server in the rack.
- The rack can tip over if more than one unit is removed.
- The server must not occupy the top height unit of the rack (38 HU/42 HU PRIMECENTER rack and/or DataCenter rack), as otherwise boards or system fans cannot be replaced even with the plug-in module fully extended.

Rack requirements

The rack systems from Fujitsu Siemens Computers (PRIMECENTER rack and DataCenter rack) support the installation of PRIMERGY server systems. Installation in most current rack systems from other manufacturers (3rd party racks) is also supported.

To accommodate the ventilation concept and ensure proper ventilation, any unused areas in the rack must be sealed using dummy covers.

The power is supplied via the multiple socket outlets fitted in the rack.

PRIMECENTER rack

- Front bolted rails.

The rails have a linear alignment feature to ensure that they can be adjusted to different rack depths.

- Enhanced cable management in the lateral rack area.

DataCenter rack

- Front bolted rails.

The rails have a linear alignment feature to ensure that they can be adjusted to different rack depths.

- Enhanced cable management in the lateral rack area.

For rack systems from other manufacturers:

3rd party rack

Certain general conditions must be met:

- Installation dimensions (see the dimensions shown in figure [3 on page 45](#)).
 - 1 Front of rack
 - 2 Rear of rack
 - A Rack depth (comparison PRIMECENTER rack 940/1000/1100 mm)
 - B Rack width (comparison PRIMECENTER rack 700 mm)
 - C Clearance for 19" installation level
 - C1 Front 19" installation level
 - C2 Rear 19" installation level
 - D Cable routing area (cable area depth) and ventilation
 - E Space for front panel and ventilation
 - F Space for right and left support systems
 - P PRIMERGY rack installation depth
 - a1 Front left support upright
 - a2 Front right support upright
 - b1 Rear left support upright
 - b2 Rear right support upright
- Ensure that the safety mechanisms on the server, e.g. stoppers or retaining systems, are functioning correctly.

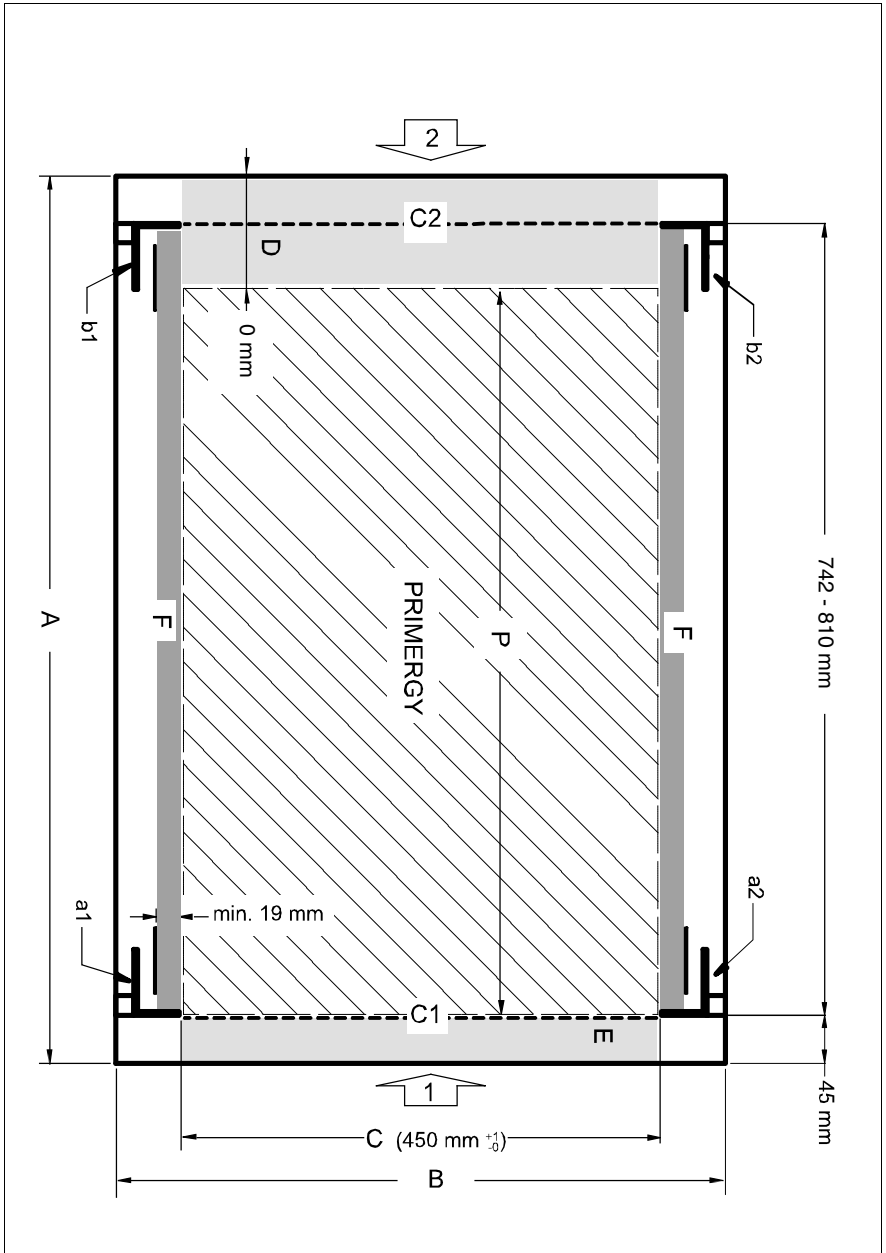


Figure 3: Mechanical requirements

- The shape of the rack support uprights must ensure that the rails can be bolted to the front.
- Front bolted rails:

The rails have a linear alignment feature to ensure that they can be adjusted to different rack depths (710 - 810 mm).
- No cable management support (delivered with the mounting kit).
- Climatic conditions:

An unobstructed air intake in the rack front and air discharge in the rear cover of the rack are essential for ventilation of the installed server.

In general, the ventilation concept ensures that the necessary cooling is achieved by the horizontal self-ventilation of the installed devices (air flow from the front to the rear).
- Power supply:

For installation in 3rd party racks, you must ensure that the appropriate socket strips are present.

4.3.1 Installation in PRIMECENTER/DataCenter rack

For installation in a PRIMECENTER/DataCenter rack, the following parts are required:

- support bracket
- mounting frame
- two catches und two guide pins
- M3x6 screw
- one support system on the left and one on the right
- M5 centering fixtures (screws with integrated plugwashers)



- The descriptions and figures in this section refer to the current variable support.
- General information regarding server installation in the rack is included in the technical manual for the appropriate rack.

When mounting the left support system in the corresponding rack, the supplied support bracket must first be mounted flush with the underside of the device on the rear left support upright.

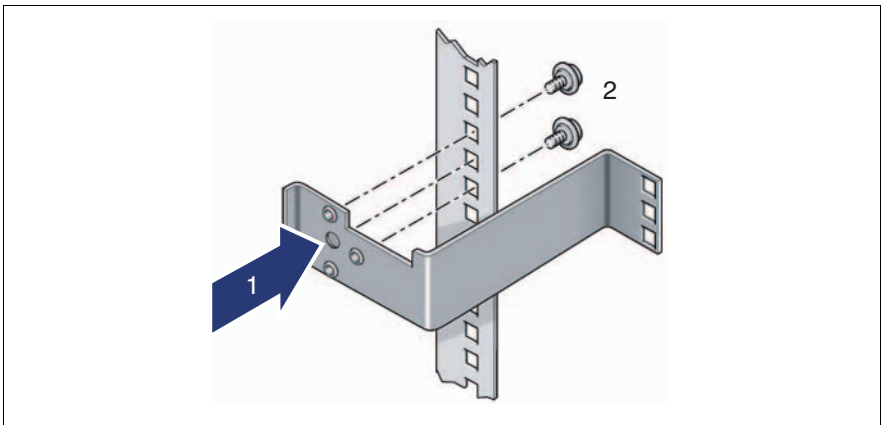


Figure 4: Fitting the support bracket

- ▶ Position the support bracket at the corresponding height on the rear left support upright (1).
Insert the knob in the corresponding hole.
- ▶ Fasten the support bracket with the two supplied M5 centering fasteners (2).

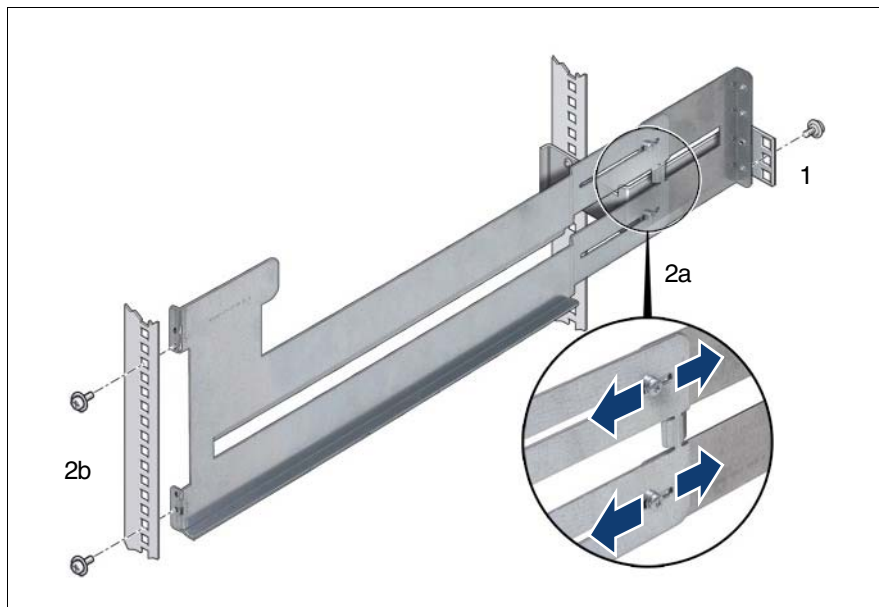


Figure 5: Fit the left support system in the PRIMECENTER/DataCenter rack

- ▶ Fasten the left support system in the support bracket (1) with an M5 centering fixture.
- ▶ Adjust the length of the left support system between the front left support upright and the support bracket (2a) and attach the left support system to the left front support upright (2b) with two M5 centering fixtures.
- ▶ Repeat the above steps with the right-hand support system (it is secured to the front and rear right support uprights).
- ▶ Fit the cage nuts for securing the server in the corresponding catches on the right and left support uprights.
- ▶ Fit the PRIMECENTER/DataCenter rack cable management as described in the technical manual for the corresponding rack.
- ▶ Insert the server (see [section “Inserting the server” on page 50](#)).
- ▶ Route the cables with the server pushed in as described in the technical manual for the corresponding rack.

4.3.2 Installation in 3rd party racks

The procedure for installing in 3rd party racks is basically as described in [“Installation in PRIMECENTER/DataCenter rack” on page 47](#) (the support bracket and cable management are not installed). The following parts are required:

- One support system on the left and one on the right (mounted)
- possibly an articulated cable guide
- possibly protective hose for fiber channel fiber optic cable
- ▶ Refer to the manual from the rack manufacturer for details of the mechanical installation and the climatic conditions.

**CAUTION!**

When installing in 3rd party racks, it must be ensured that an air flow from the front to the back of the rack is guaranteed.



Sometimes a number of parts of the delivered mounting kit cannot be used because original parts of the 3rd party rack are to be used.

- ▶ Insert the server (see section [“Inserting the server” on page 50](#)).
- ▶ Route the cables as described in the original rack manual.

4.3.3 Inserting the server

**CAUTION!**

At least two people are needed to position the server in the rack.

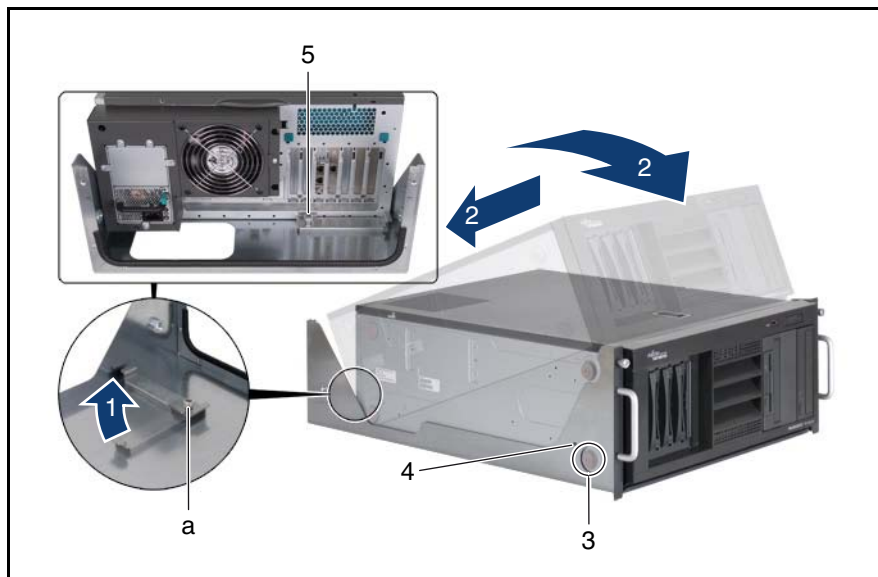


Figure 6: Preparing the server

- ▶ Loosen the knurled screw (a) and turn the angled mounting in the direction of the arrow (1).
- ▶ Carefully place the server in the mounting frame (2).
- ▶ Fit the rubber foot into the groove (3).
- ▶ Fasten the server using an M3x6 screw (4).
- ▶ Fasten the server using the knurled screw (5).

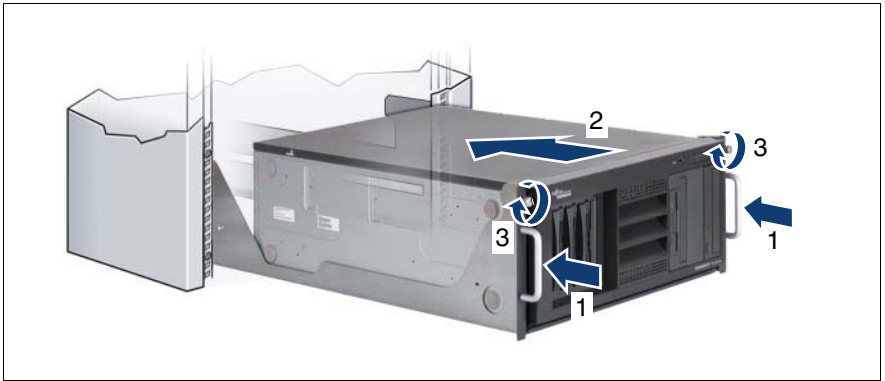


Figure 7: Inserting the server

- ▶ Lift the mounting frame containing the server and place it on the support system (1).



CAUTION!

Hold the mounting frame containing the server on both sides when lifting it onto the support system, not just by the handles on the front panel!

- ▶ Push the mounting frame containing the server into the rack (2).

The following steps can be carried out by one person only.

- ▶ Fasten the server using two knurled screws (3).

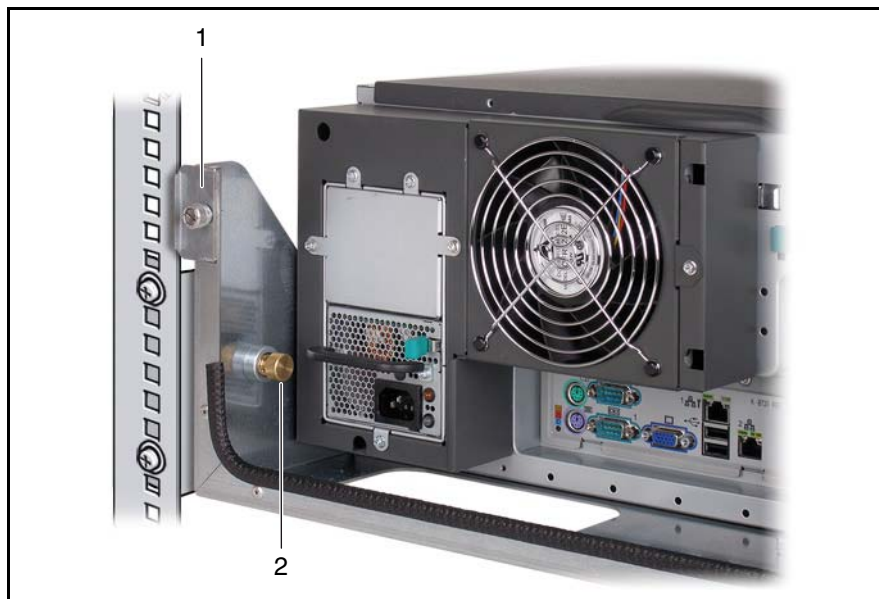


Figure 8: Securing the server

- ▶ Secure the mounting frame containing the server on the left and right with a catch on each side of the mounting frame (1).
- ▶ Secure the mounting frame containing the server on the left and right with a guide pin on each side of the mounting frame (2).
- ▶ Route the cables as described in the technical manual for the rack in question with the server pushed in.

To remove the server, follow this procedure in reverse.

4.4 Connecting devices to the server

The ports for external devices are on the rear of the server. The additional ports available on your server depend on the expansion cards installed.

The standard ports ([figure 9](#)) are marked with symbols, and some are color-coded.

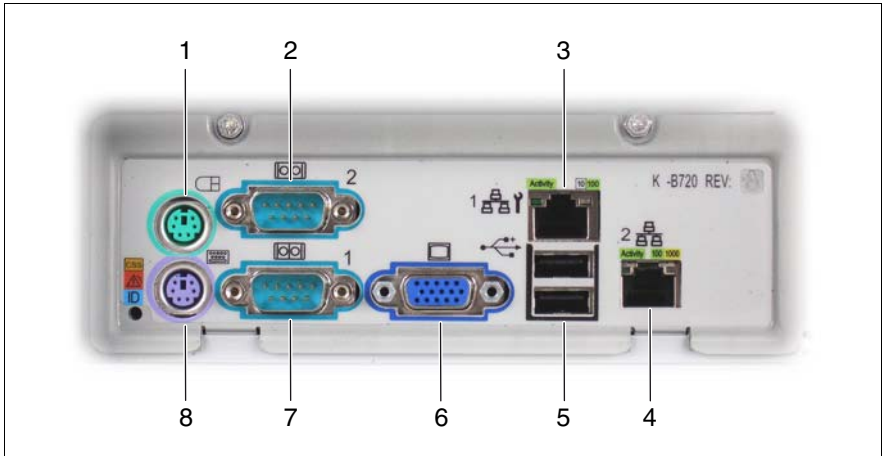


Figure 9: Connection panel on the rear

1	PS/2 mouse port (green)	5	USB ports 1 and 2 (black)
2	Serial port COM2 (turquoise)	6	Monitor port (blue)
3	LAN port 1 (service LAN)	7	Serial port COM1 (turquoise)
4	LAN port 2	8	Keyboard port (PS/2) (purple)

The corresponding indicators are explained in [section “Rear of server” on page 67](#) .



Some of the devices connected require special software (e.g. drivers) (see documentation for the connected device).

- ▶ Connect the devices.

There is an additional USB port on the front of the server (see figure [15 on page 62](#)).

Connecting the keyboard, mouse and monitor

- ▶ Connect the monitor, the keyboard and the mouse to the standard ports of the server (see figure [9 on page 53](#)).
- ▶ Connect the power cable of the monitor to a grounded mains outlet of the in-house mains and/or to the mains socket strip of the rack.



CAUTION!

The rated current for the monitor is indicated on the technical data label on the monitor or in the operating manual for the monitor.

4.5 Connecting the server to the mains

In the basic configuration, the server has a fixed power supply unit.

As an option, this power supply unit can be replaced with a hot-plug power supply unit. A second hot-plug power supply unit can be added to ensure a redundant power supply. If a defect occurs in one power supply unit, the other power supply unit ensures unimpaired further operation.



CAUTION!

The server adjusts itself automatically to a mains voltage in the range 100 V - 127 V or 200 V - 240 V. Make sure that your local mains voltage is within this range.



A phase redundancy in the power supply of the server can be set up if two hot-plug power supply units are installed.

In this case the two power supply units are directly connected either to two different phases or two different power circuits of the in-house mains.

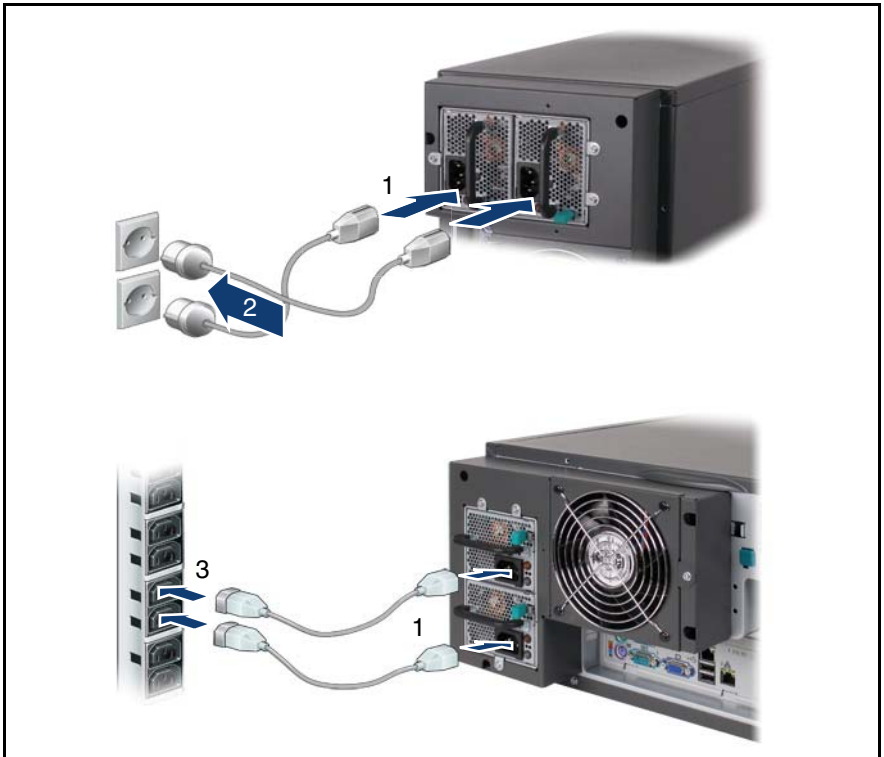


Figure 10: Connecting the server to the mains

- ▶ Connect the power cord to the server power supply unit (1).
- ▶ Connect the mains plug to a grounded mains outlet (2) in the in-house power supply network or a power outlet of the socket strip (3) in the rack (see technical manual for the rack).

4.5.1 Using the cable clamp

Alternatively, you can secure the power cables in a cable clamp to ensure that the insulated connectors cannot be disconnected from the server accidentally. The cable clamp is included in the accessories pack that is delivered together with the server.

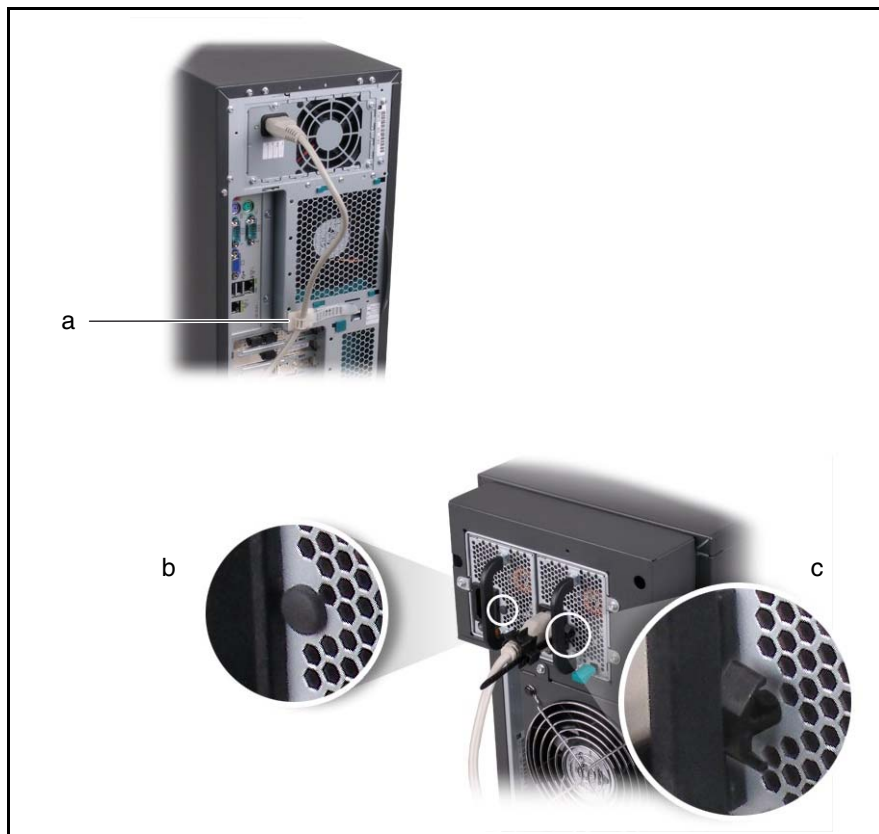


Figure 11: Using the cable clamp

There are two different cable clamps depending on the type of power supply unit:

- If your server is equipped with a permanently installed power supply unit, stick the supplied cable clamp to the position indicated (a).
- If your server is equipped with a hot-plug power supply unit, remove the rubber cap (b) and insert the supplied cable clamp in the hole (c).

4.6 Notes on connecting/disconnecting cables



CAUTION!

Always read the documentation supplied with the device you wish to connect.

Never connect, or disconnect cables during a thunderstorm.

Never pull on a cable when disconnecting it. Always take hold of the cable by the plug.

Follow the sequence described below to connect or disconnect external devices to or from the server:

Connecting cables

- ▶ Turn off all power and equipment switches.
- ▶ Disconnect all power plugs from the grounded shockproof sockets.
- ▶ Connect all cables to the server and peripherals.
- ▶ Plug all data communication cables into the utility sockets.
- ▶ Plug all power cables into the grounded shockproof sockets.

Disconnecting cables

- ▶ Turn off all power and equipment switches.
- ▶ Disconnect all power plugs from the grounded shockproof sockets.
- ▶ Unplug all data communication cables from the utility sockets.
- ▶ Disconnect the relevant cables from the server and all the peripherals.

5 Starting up and operation



CAUTION!

Follow the safety instructions in chapter [“Important information”](#) on [page 27](#).

5.1 Access to the accessible drives (floorstand model)



Figure 12: Removing the drive cover and snapping it into the hard disk drive cover

- ▶ Unlock the server (1).
- ▶ Remove the drive cover (2).
- ▶ Attach the drive cover below the middle rib in the hard disk cover (3).



Please note the following when operating with tape drives:

If the system is programmed to eject the media automatically, the accessible drives must not be obstructed.



Figure 13: Removing the drive cover from the hard disk drive cover

- ▶ Pull the bottom edge of the drive cover in the direction of the arrow to remove the drive cover from the hard disk drive cover.

5.2 Access to the HDD modules (floorstand model)



Figure 14: Removing the drive cover and the hard disk cover

- ▶ Unlock the server (1).
- ▶ Remove the drive cover (2).
- ▶ Remove the hard disk cover (3).

The hard disk cover and the drive cover are replaced and the server locked in the reverse order.

5.3 Controls and indicators

5.3.1 Front of server

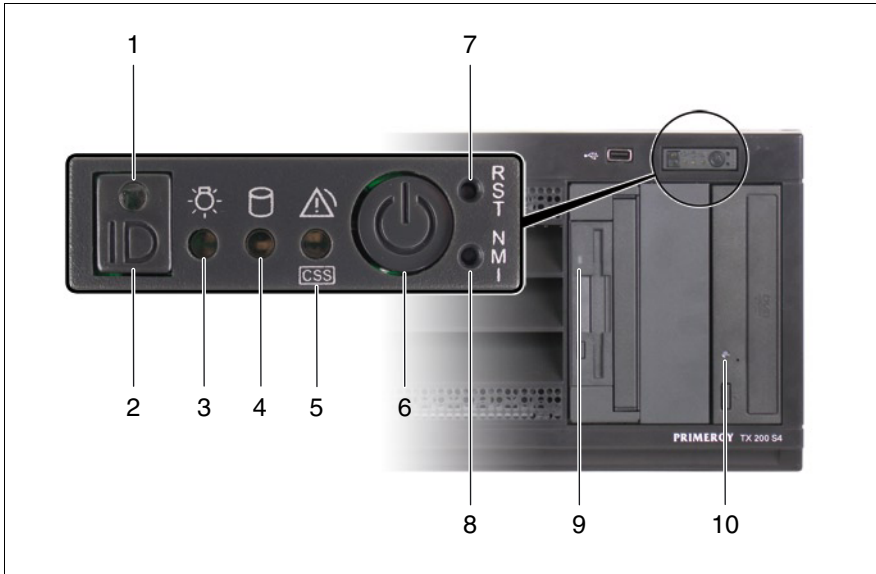


Figure 15: Front of server (example: rack model)

1	ID indicator	6	On/Off button
2	ID button	7	Reset button
3	Power-on indicator	8	NMI button
4	Hard disk activity indicator	9	Floppy disk drive activity indicator
5	CSS/Global Error indicator	10	CD/DVD drive activity indicator

Controls

ID ID button

Lights up (blue) on the front and on the rear of the server when the ID button is pressed. The two ID indicators are synchronized.



On/Off button

When the system is switched off, it can be switched on again by pressing the On/Off button. When the system is operating, pressing the On/Off button will switch off the system.



The On/Off button does not disconnect the server from the mains voltage. To disconnect from the mains completely, remove the power plug(s).

RST Reset button

Pressing the reset button reboots the system.



CAUTION!

Risk of loss of data!

NMI NMI button



CAUTION!

Do not press! Risk of loss of data!

The NMI button may only be used by service.

Indicators on the control panel

ID ID indicator (blue)

Lights up blue when the system has been selected by pressing the ID button. To deactivate, press the button again.

The ID indicator can also be activated via ServerView S2 and its status reported to ServerView S2.



Power-on indicator (two colors)

Lights up green when the server is switched ON.

Lights up orange when the server is switched OFF, but mains voltage is present (standby mode).



Hard disk activity indicator (green)

Lights up green when an internal hard disk drive is accessed.

CSS

CSS/Global Error indicator (yellow/red)

Generally, the three possible states of this indicator have the following meanings:



- **Does not light up** when the system is OK.
- If the event is still acute after a power failure, the indicator is activated after the restart.
- **Lights up** when a prefailure event was detected. The indicator also lights up in standby mode.
- **Flashes** when an error was detected. The indicator also flashes in standby mode.

For more details on the indicated errors, you can consult the System Event Log (SEL), the ServerView Local Service Panel, ServerView S2 or the ServerView Remote Management via iRMC's own Web server.

Depending on the color, the states „light up“ and „flash“ have the following meanings:

- CSS (yellow)

Lights up yellow if a prefailure event was detected for a CSS component.

Flashes yellow if an error was detected that you can fix yourself with the CSS concept (see [“Customer Self Service \(CSS\)” on page 10](#)).

- Global Error (red)

Lights up red if a prefailure event was detected for a non-CSS component.

Flashes red if an error was detected for a service incident.

- CSS/Global Error (yellow/red)

Lights up and/or flashes alternately yellow and/or red if several prefailure events and/or errors were detected at the same time (see above).



If there is a CSS event, first check whether it was detected for a hot-plug component (see [“Hard disk drive indicators” on page 66](#) and [“Indicators on the hot-plug power supply unit” on page 70](#)).

Indicators on the drives

CD/DVD drive activity indicator

Lights up green when the storage medium is being accessed.

Floppy disk drive activity indicator

Lights up green when the storage medium is being accessed.

Hard disk drive indicators



Figure 16: Indicators on the 3.5 inch and 2.5 inch HDD modules

1	<p>HDD BUSY (green)</p> <ul style="list-style-type: none"> – Lit: HDD in active phase (drive active, drive being accessed) – Does not light: HDD inactive
2	<p>HDD FAULT (orange)</p> <p>(in conjunction with a disk array controller)</p> <ul style="list-style-type: none"> ● SAS server variant <ul style="list-style-type: none"> – Does not light: no HDD error – Lit: HDD Faulty (drive defective/needs replacing, drive failed, drive deactivated by software or the HDD module is not correctly inserted) – Slow flashing: HDD Rebuild (the data is being restored after changing a drive) – Fast flashing: HDD Identify ● SATA server variant <ul style="list-style-type: none"> – Does not light: no HDD error – Lit: HDD Faulty or Rebuild Stopped (drive defective and must be replaced, a rebuild process was stopped or the module is not correctly inserted) – Slow flashing: HDD Rebuild (the data is being restored after changing a drive) – Fast flashing: HDD Identify

5.3.2 Rear of server

Indicators on the connection panel: CSS/Global Error/ID indicator

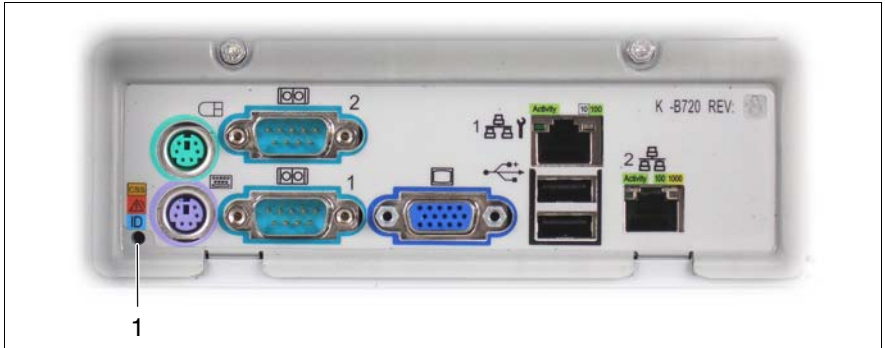


Figure 17: Indicators on the connection panel: CSS/Global Error/ID indicator

1 CSS/Global Error/ID indicator (yellow/red/blue)

Generally, the three possible states of this indicator have the following meanings:

- **Does not light up** when the system is OK.
- If the event is still acute after a power failure, the indicator is activated after the restart.
- **Lights up** when a prefailure event has been detected or the ID button has been pressed. The indicator also lights up in standby mode.
- **Flashes** when an error was detected. The indicator also flashes in standby mode.

For more details on the indicated errors, you can consult the System Event Log (SEL), the ServerView Local Service Panel, ServerView S2 or the ServerView Remote Management via iRMC's own Web server.

1 Depending on the color, the states „light up“ and „flash“ have the following meanings:

- CSS (yellow)

Lights up yellow if a prefailure event was detected for a CSS component.

Flashes yellow if an error was detected that you can fix yourself with the CSS concept (see [“Customer Self Service \(CSS\)” on page 10](#)).

- Global Error (red)

Lights up red if a prefailure event was detected for a non-CSS component.

Flashes red if an error was detected for a service incident.

- ID (blue)

Lights up blue when the system has been selected by pressing the ID button. To deactivate, press the button again.

- CSS/Global Error/ID (yellow/red/blue)

Lights up yellow/red/blue and/or flashes alternately yellow and/or red if several prefailure events and/or errors have been detected at the same time and/or the ID button has been pressed.



If there is a CSS event, first check whether it was detected for a hot-plug component (see [“Hard disk drive indicators” on page 66](#) and [“Indicators on the hot-plug power supply unit” on page 70](#)).

Indicators on the connection panel: LAN indicators

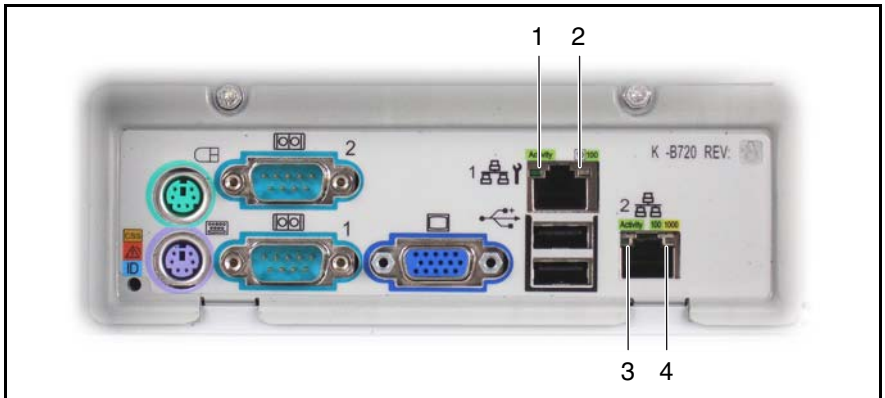


Figure 18: Indicators on the connection panel: LAN indicators

1	<p>LAN activity indicator (service LAN)</p> <p>Lights up green if a LAN connection exists. Does not light up if no LAN connection exists. Flashes green when a LAN transfer is in progress.</p>
2	<p>LAN transfer rate indicator (service LAN)</p> <p>Lights up green for a LAN transfer rate of 100 Mbps. Does not light up for a LAN transfer rate of 10 Mbps.</p>
3	<p>LAN activity indicator (standard LAN)</p> <p>Lights up green if a LAN connection exists. Does not light up if no LAN connection exists. Flashes green when a LAN transfer is in progress.</p>
4	<p>LAN transfer rate indicator (standard LAN)</p> <p>Lights yellow for a LAN transfer rate of 1 Gbps. Lights up green for a LAN transfer rate of 100 Mbps. Does not light up for a LAN transfer rate of 10 Mbps.</p>

Indicators on the hot-plug power supply unit



Figure 19: Indicators on the hot-plug power supply unit (example: rack model)

LED		Color	Status	Meaning
1	Diagnosis	Orange	On	Anticipated PSU fault
			Flashing	Critical power supply unit fault
2	Operating	Orange	On	Mains voltage OK (standby mode)
		Green	On	PSU in operation

5.4 Switching the server on and off



CAUTION!

It nothing appears on the screen but flickering stripes after switching on the server, switch the server off immediately (see chapter “[Troubleshooting and tips](#)” on page 81).

The On/Off button does not disconnect the server from the mains voltage. To completely disconnect it from the mains voltage, remove the power plug(s) from the socket(s).

Switching the server on

– Starting up for the first time:

The Power-on indicator (item 3 in figure [15 on page 62](#)) lights up orange (standby mode).

- ▶ Press the On/Off button (item 6 in figure [15 on page 62](#)).
- ▶ Insert the ServerStart DVD in the DVD drive.
- ▶ Follow the on-screen instructions (see also section “[Configuration with ServerStart](#)” on page 75 or section “[Configuration without ServerStart](#)” on page 76).

– System already installed:

The Power-on indicator (item 3 in figure [15 on page 62](#)) lights up orange (standby mode).

- ▶ Press the On/Off button (item 6 in figure [15 on page 62](#)).

The server is switched on, performs a system test and boots the operating system.

Switching the server off

The Power-on indicator (item 3 in figure 15 on page 62) lights up green.

- ▶ Shut down the operating system properly.

The server is switched off automatically and goes into standby mode. The power-on indicator lights up orange.



If the operating system does not switch the server off automatically, press the On/Off button for at least four seconds.

Other On/Off options

Besides the On/Off button, the server can be switched ON and OFF in the following ways:

- **Specified switch on time / switch off time**

The server is switched ON or OFF at a time specified in the ServerView program

- **Ring indicator**

The server is switched on by an internal or external modem.

- **Wake up On LAN (WOL)**

The server is switched on by a command via the LAN (Magic Package).

- **After power failure**


The server automatically reboots following a power failure (depending of the settings in the BIOS).

- **iRMC S2**

iRMC S2 offers various options for switching the server on and off, e.g. via the *Power On Oss* page of the iRMC S2 Web interface.



5.5 Configuring the server

This section contains information about configuring the server and installing the operating system.

-  Make sure that the power saving functions are disabled in the *Power* menu of the BIOS Setup during operation.



5.5.1 Configuring the onboard SATA controller

A SATA controller is integrated on the system board. You can configure the onboard SATA controller either before or during ServerStart. Using ServerStart is recommended.

-  The controller has its own configuration utility. More detailed information may be found in the "LSI SATA Software RAID User's Guide" (on the ServerBooks DVD under "Controllers").
-  Descriptions of operating systems not covered in the RAID controller manual are provided in the corresponding readme files on the driver CDs.



5.5.2 Configuring the PCI SAS controller with "Integrated Mirroring Enhanced"

The server has a PCI SAS controller with "Integrated Mirroring Enhanced" functionality. You can configure the PCI SAS controller either before or during ServerStart. Using ServerStart is recommended.

-  The controller makes a separate utility available for IME configuration. Further information is included in the "Integrated RAID for SAS User's Guide" (on the ServerBooks DVD under "Controllers").
-  Descriptions of operating systems not covered in the RAID controller manual are provided in the corresponding readme files on the driver CDs.

5.5.3 Configuring the PCI SAS controller with RAID functionality

The server has a PCI SAS controller with RAID functionality. You can configure the PCI SAS controller either before or during ServerStart. Using ServerStart is recommended.

-  A separate utility is available to the controller for MegaRAID configuration. For further information, refer to the “SAS/SATA Controller MegaRAID 1064 / 1068 / 1078 Installation Guide” on the ServerBooks DVD (select “Controllers” from the menu).
-  Descriptions of operating systems not covered in the RAID controller manual are provided in the corresponding readme files on the driver CDs.

5.5.4 Configuration with ServerStart

The ServerStart DVD supplied allows you to conveniently configure the server and install the operating system. The menu-assisted configuration includes the server configuration with SCU and the RAID controller configuration with ServerViewRAID.

The ServerStart advantages

- Automatic configuration of your server's hardware and disk arrays.
- Installation assistance for all leading server operating systems.
- Creation of configuration files for unattended installation of several PRIMERGY servers with identical hardware configurations.
- Installation of drivers and additional software.



The software that can be installed depends on your server's hardware configuration. This configuration is detected automatically.



Descriptions of operating systems not covered in the RAID controller manual are provided in the corresponding readme files on the driver CDs.

To find out how to operate ServerStart and for further information, refer to the associated manual.

If you are using ServerStart, you can skip the following section on how to configure the server and install the operating system. Continue from section [“Cleaning the server” on page 77](#).

5.5.5 Configuration without ServerStart

Configuring the onboard SATA controller

Configure the controller as described in section [“Configuring the onboard SATA controller” on page 73](#).

Configuring the PCI SAS controller with "Integrated Mirroring Enhanced"

Configure the controller as described in section [“Configuring the PCI SAS controller with "Integrated Mirroring Enhanced"” on page 73](#).

Configuring the PCI SAS controller with RAID functionality

Configure the controller as described in section [“Configuring the PCI SAS controller with RAID functionality” on page 74](#).

Installing the operating system

- ▶ Insert the CD/DVD for the operating system you want to install.
- ▶ Reboot the server.
- ▶ Follow the instructions on screen and in the manual for the operating system.

5.6 Cleaning the server



CAUTION!

Switch the server off and disconnect the power plugs from the grounded shockproof sockets.

Do not clean any interior parts yourself; leave this job to a service technician.

Do not use any cleaning agents that contain abrasives or may corrode plastic.

Ensure that no liquid enters the system. Ensure that the ventilation areas of the server and the monitor are clear.

Clean the keyboard and the mouse with a disinfecting cloth.

Wipe the server and monitor casing with a dry cloth. If particularly dirty, use a cloth that has been moistened in a mild domestic detergent and then carefully wrung out.

6 Property and data protection

The floorstand model is protected against unauthorized opening by a lock. Apart from this, the server is also fitted with an intrusion detection switch which enables the ServerView program to detect and log any removal of the left cover or housing cover and the cover for the HDD modules.

To prevent it being removed from its location, the floorstand model can be secured to a fixed object with a steel cable running through a clip on the back.

The rack model is protected against unauthorized access by a lockable rack door.

To protect your system and data internally against unauthorized access, you can use the BIOS Setup security functions.

6.1 BIOS Setup security functions

The *Security* menu in BIOS Setup offers various options for protecting your data from unauthorized access. By combining these options you can achieve optimum protection for your system.



A detailed description of the *Security* menu and how to assign passwords is included in the BIOS Setup documentation on the PRIMERGY ServerBooks DVD.

Preventing unauthorized BIOS Setup calls

You can activate this protection by entering a setup password in the *Security* menu. You can also suppress the *Press F2 for Setup* message in this menu. This message is then no longer displayed while the server's startup routine is in progress.

Preventing unauthorized system access

You can activate this protection by entering a system password in the *Security* menu.

Preventing unauthorized access to the boards with their own BIOS

You can activate this protection by selecting the *Extended* item for *Setup Password Lock* field in the *Security* menu.

Preventing the system from booting from the floppy disk drive

You can activate this protection by selecting the item *Diskette Lock* for the *System Load* field in the *Security* menu.

Preventing unauthorized writing to floppy disks

To activate this protection, select the value *Disabled* for the *Diskette Write* field in the *Security* menu.

Protecting BIOS from being overwritten

To activate this protection, select the value *Disabled* for the *Flash Write* field in the *Security* menu.

Protecting the server from being switched on by an external device

To activate this protection, select the value *Disabled* for the *Remote Power On* field in the *Security* menu.

Protecting the server from being switched off by a program

To activate this protection, select the value *Disabled* for the *Soft Power Off* field in the *Security* menu.

7 Troubleshooting and tips



CAUTION!

Follow the safety instructions in the “Safety notes and other important information” manual and in chapter [“Important information” on page 27](#).

If a fault occurs, attempt to resolve it using the measures described:

- in this chapter,
- in the documentation for the connected devices,
- in the help systems of the software used.

If you fail to correct the problem, proceed as follows:

- ▶ Make a list of the steps performed and the circumstances that led to the fault. Also make a list of any error messages that were displayed.
- ▶ Switch off the server.
- ▶ Contact our customer service team.

7.1 Power-on indicator remains unlit

The power-on indicator remains dark after you switch on your device.

Power cable incorrectly connected

- ▶ Make sure that the power cable(s) is/are correctly connected to the server and the grounded socket(s).

Power supply overloaded

- ▶ Disconnect the server power plug(s) from the power socket(s).
- ▶ Wait a few seconds before you plug it/them into the grounded socket(s) again.
- ▶ Switch on your server.

7.2 Server switches itself off

Server Management has detected an error

- ▶ Check the error list or the ErrorLog file in the ServerView program, and attempt to eliminate the error.

7.3 Screen remains blank

Monitor is switched off

- ▶ Switch on your monitor.

Screen has gone blank

- ▶ Press any key on the keyboard.
or
- ▶ Deactivate screen saver. Enter the appropriate password.

Brightness control is set to dark

- ▶ Set the brightness control on the monitor to light. For detailed information, refer to the operating manual supplied with your monitor.

Power cable or monitor cable not connected

- ▶ Switch off the monitor and the server.
- ▶ Check whether the power cable is properly connected to the monitor and to the grounded socket.
- ▶ Check whether the monitor cable is properly connected to the server and monitor (if it is plugged in with a connector). If a separate graphics card is installed in the server, then the monitor cable must be connected to the graphics card.
- ▶ Switch on the monitor and the server.

7.4 Flickering stripes on monitor screen



CAUTION!

Switch off the server immediately. Risk of damaging the server.

Monitor does not support the set horizontal frequency

- ▶ Find out which horizontal frequency your monitor screen supports. You will find the horizontal frequency (also known as line frequency or horizontal deflection frequency) in the documentation for your monitor.
- ▶ Refer to the documentation for your operating system or the software for the screen controller for details of how to set the correct horizontal frequency for your monitor, and follow the procedure accordingly.

7.5 No screen display or display drifts

The wrong horizontal frequency or resolution has been selected for the monitor or for the application program.

- ▶ Find out which horizontal frequency your monitor screen supports. You will find the horizontal frequency (also known as line frequency or horizontal deflection frequency) in the documentation for your monitor.
- ▶ Refer to the documentation for your operating system or the software for the screen controller for details of how to set the correct horizontal frequency for your monitor, and follow the procedure accordingly.

7.6 No mouse pointer displayed on screen

Mouse driver not loaded

- ▶ Check whether the mouse driver is properly installed and is activated when the application program is started. Detailed information can be found in the user manuals for the mouse, the operating system and the application program.

Mouse controller disabled

The mouse controller on the system board must be enabled if you are using the mouse supplied.

- ▶ Check in the BIOS Setup that the mouse controller is *Enabled*.

7.7 Unable to read from / write to floppy disk

- ▶ Check whether the write protection for the floppy disk is activated.
- ▶ Check the entry for the floppy disk drive in the BIOS Setup.
- ▶ Check in the BIOS Setup whether the floppy disk drive controller and write permission are enabled (see technical manual for system board on the PRIMERGY ServerBooks DVD).

7.8 Incorrect date and time

- ▶ Set the date and time in the operating system or in the BIOS Setup under the *Main* menu, using *System Date* and *System Time* respectively.



Note that the operating system may affect the system time. For example, the operating system time may deviate from the system time under Linux, and would overwrite the system time in the default setting on shutdown.

If the date and time are still wrong after the server has been switched off and back on again, replace the lithium battery (for a description refer to the Technical Manual for the D2509 system board) or contact our customer service team.

7.9 Drives reported as “dead” when starting system

This error message can occur when the onboard SAS controller has RAID functionality or the server is equipped with a PCI RAID controller.

RAID controller configuration incorrect

- ▶ Check and correct the settings for the drives using the RAID controller utility.

Further information is provided in the manual for the RAID controller.

7.10 Added drive reported as defective

RAID controller is not configured for this drive

The drive was probably installed when the system was switched off.

- ▶ Reconfigure the RAID controller for the drive using the corresponding utility. Information is provided in the documentation for the RAID controller.

or

- ▶ Remove and reinstall the drive while the system is switched ON.

If the hard disk drive continues to be shown as defective, then replace it (see [“Hot-plug hard disk drives” on page 89](#)).

7.11 Error message on screen

The meaning of the error message is explained in the manual for the BIOS Setup and in the documentation for the relevant components and programs on the PRIMERGY ServerBooks DVD.

8 CSS components

This chapter describes how to handle CSS components and how to identify defective CSS components and replace them yourself.



Further information on the CSS concept is provided in the “Customer Self Service (CSS)” manual on the ServerBooks DVD.



CAUTION!

Follow the safety instructions in the chapter [“Important information” on page 27](#).

In the PRIMERGY TX200 S4 server, the following components are considered to be CSS components:

- Hot-plug components
 - Hot-plug power supply units
 - Hot plug hard disk drives

You can expand or replace the hot-plug components during operation.

- Non-hot-plug components
 - Memory modules
 - System fans
 - Expansion cards


These components can be changed by you in the event of an error. Expansions and upgrades may only be carried out by authorized specialist personnel. These operations are described in the “Options Guide”.

8.1 Hot-plug components

This section describes how to handle the hot-plug components and/or how to modify your server hardware (e.g. adding/replacing hot-plug power supply units or hot-plug HDD modules).

The hot-plug procedure increases the availability of system operation and guarantees a high degree of data integrity and failsafe performance.

8.1.1 Hot-plug power supply units

 As an option, the fixed power supply unit can be replaced with one or two hot-plug power supply units (upgrading may only be performed by qualified staff).

With two hot-plug power supply units installed, if a defect occurs in one power supply unit, the other power supply unit ensures unimpaired further operation. The defective power supply unit can be replaced without interrupting operation.

8.1.1.1 Replacing the hot-plug power supply unit




Figure 20: Unlocking and removing the power supply unit



CAUTION!

When replacing a **non-defective** hot-plug power supply unit in a non-redundant configuration (**only one** power supply unit), the server **must** be switched off first.

- ▶ Remove the cable from the installed power supply unit.
- ▶ Push the green catch in the direction of the arrow (1) while pulling the power supply unit out of its mounting location (2) by the handle.

- ▶ Slide the new power supply unit into the empty slot until it clicks into place.
 -  Make sure that the power supply unit engages correctly in the slot and is locked in position.

This is the only way to prevent the power supply unit from sliding out of its mountings and being damaged during transportation.
- ▶ Connect the newly installed power supply unit.

8.1.2 Hot-plug hard disk drives

In PRIMERGY TX200 S4 you can use up to six 3.5-inch SAS hard disk drives, up to four 3.5-inch SATA hard disk drives or up to sixteen 2.5-inch SAS hard disk drives.

The hard disk drives which can be ordered for the PRIMERGY TX200 S4 are supplied already mounted in an installation frame so that defective hard disk drives can be replaced and new drives can be added during operation. The hard disk drive and installation frame together make up the HDD module.



CAUTION!

- The hard disk drive may not be removed from the installation frame by anyone except a service technician.
- The HDD modules (drives) must all be marked clearly so that they can be put back in their original places after an upgrade. If this is not done, existing data can be lost.
- The hot-plug function is only possible in conjunction with a corresponding RAID configuration.

Further information about the RAID configuration or RAID level can be found in the RAID controller documentation.



CAUTION!

Hybrid operation using both SAS and SATA hard disk drives is not supported.

8.1.2.1 HDD module and dummy module

The hard disk drives which can be ordered for the PRIMERGY TX200 S4 are supplied already mounted in an installation frame so that defective drives can be replaced and new drives can be added during operation. The hard disk drive and installation frame together make up the HDD module.

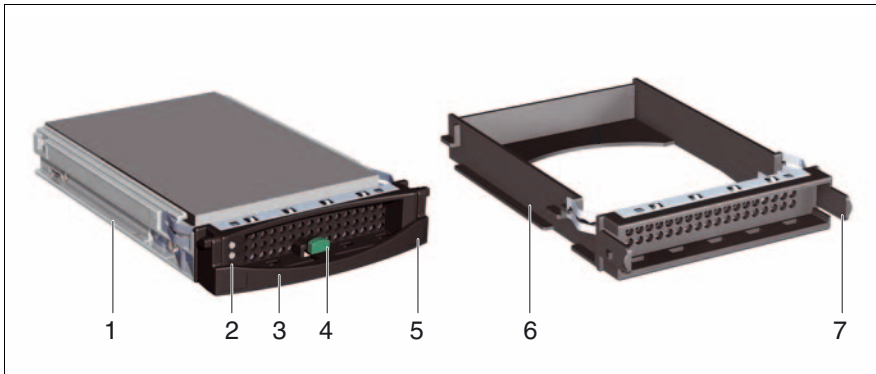


Figure 21: 3.5-inch HDD module and dummy module

1	HDD module (installation frame with hard disk drive installed)
2	Indicators HDD Busy (LED green) HDD Fault (LED orange) For description see section “Hard disk drive indicators” on page 66.
3	Handle for locking and unlocking the HDD module
4	Button for locking and unlocking the handle
5	Ridge for applying a sticker with the current drive name
6	Dummy module
7	Tabs for unlocking the dummy module

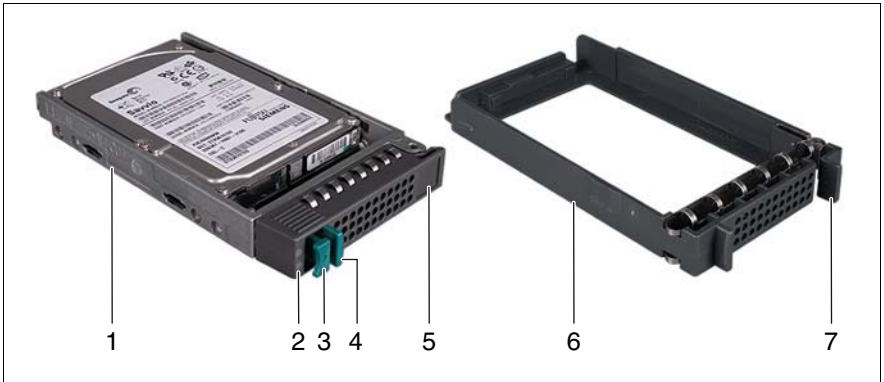


Figure 22: 2.5-inch HDD module and dummy module

1	HDD module (installation frame with hard disk drive installed)
2	Indicators HDD Busy (LED green) HDD Fault (LED orange) For description see section “Hard disk drive indicators” on page 66.
3	Handle for locking and unlocking the HDD module
4	Button for locking and unlocking the handle
5	Ridge for applying a sticker with the current drive name
6	Dummy module
7	Tabs for unlocking the dummy module

8.1.2.2 Handling hard disk drives and HDD modules

Hard disk drives incorporated in the HDD modules are highly sensitive electro-magnetic devices and must be handled with great care. Incorrect handling can cause partial or total failure of the hard disk drives. These failures can result in data errors and to a loss of data or to total corruption of the hard disk drive.

Observe the following rules to prevent such problems occurring:

- Only store and transport HDD modules within the limits stipulated in the specification.
- When transporting HDD modules (even over short distances), always use the original packaging (ESD label).
- Never expose HDD modules to a temperature shock. Avoid the formation of condensation inside and on the outside of the hard disk drive.



CAUTION!

The HDD module must be acclimatized in its operating environment for an acclimatization time before it is started up for the first time.

Temperature difference (°C) (operating environment/ outside)	Minimum acclimatization time (hours)
5	3
10	5
15	7
20	8
25	9
30	10

Table 2: Acclimatization times for HDD modules

- Always set the HDD module down carefully, with the large surface facing downwards to prevent it from tipping over.

8.1.2.3 Floorstand: removing the hard disk cover

For a floorstand server you make the HDD modules accessible by removing the hard disk cover:



Figure 23: Removing the drive cover and the hard disk cover

- ▶ Unlock the server (1).
- ▶ Remove the drive cover (2).
- ▶ Remove the hard disk cover (3).

The hard disk cover and the drive cover are replaced and the server locked in the reverse order.

8.1.2.4 Removing/installing the dummy module

Free slots are provided with dummy modules. Remove the dummy module before installing an additional HDD module.

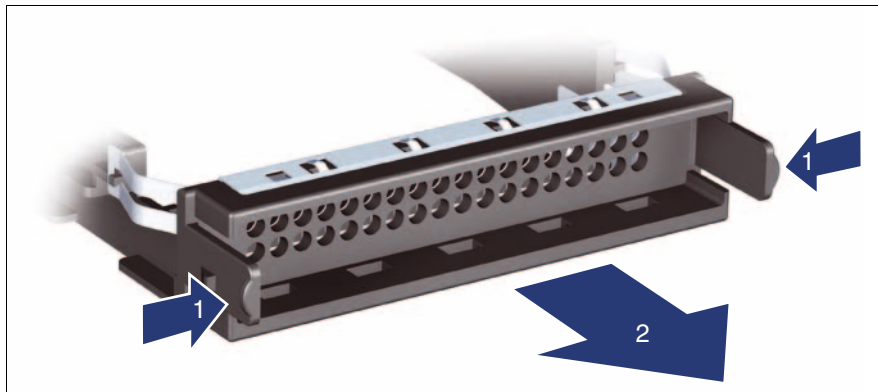


Figure 24: Removing/installing the dummy module (example: 3.5-inch dummy module)

- ▶ Press both tabs on the dummy module together until the locking mechanism disengages (1).
- ▶ Pull the dummy module out of the bay (2).

To install a dummy module, follow the same procedure in reverse order.



CAUTION!

Store the dummy module in a safe place. If you have removed a HDD module and do not install a new one in its place, put the dummy module back in its place for cooling, to comply with EMC regulations (regulations regarding electromagnetic compatibility), and for protection against fire. Ensure that the dummy module engages correctly in the bay.

8.1.2.5 Installing the HDD module

Removing the transport lock (3.5-inch HDD module)

i If HDD modules are provided with a transport lock, remove the lock before releasing the locking mechanism.



Figure 25: Removing the transport lock

- ▶ Pull the transport lock out in the direction of the arrow.

Unlocking the HDD module

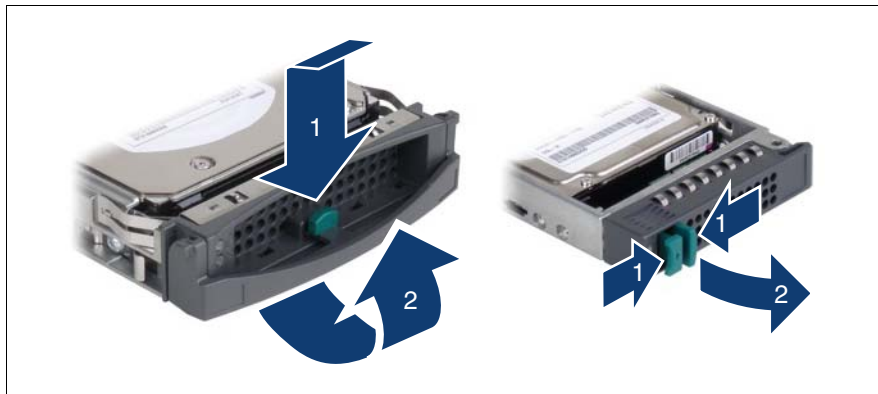


Figure 26: Unlocking the 3.5-inch and 2.5-inch HDD modules

- ▶ Release the locking mechanism by pressing the locking button (1).
- ▶ Push the handle of the HDD module fully in the direction of the arrow (2).
The HDD module is now unlocked.

Installing the HDD module



Figure 27: Installing the 3.5-inch and 2.5-inch HDD modules

- ▶ Unlock the HDD module as described in section [“Removing the transport lock \(3.5-inch HDD module\)”](#) on page 95.
- ▶ Carefully push the HDD module into the empty slot (1) until it stops.
- ▶ Push the handle of the HDD module as far as it will go in the direction of the arrow (2) until the locking mechanism is engaged.

8.1.2.6 Removing the HDD module



CAUTION!

- Only remove a HDD module during operation if the drive is not currently being accessed. Observe the control LEDs for the corresponding HDD modules (see [“Hard disk drive indicators” on page 66](#)).
- Under no circumstances should you remove a HDD module while the system is in operation if you are not sure that the hard disk drive is operated by a RAID controller and belongs to a disk array that is operating in RAID level 1, 5 or 6.

A HDD module can only be replaced during operation in conjunction with a corresponding RAID configuration.

- All HDD modules (drives) must be uniquely identified so that they can be reinstalled in their original mounting locations later. If this is not done, existing data can be lost.

If you want to remove a HDD module during operation, proceed as follows:

- ▶ If you want to remove a HDD module that is not defective, the drive must be first set to "Offline" via the software (RAID controller configuration software).
- ▶ Unlock the HDD module as described in section [“Unlocking the HDD module” on page 96](#).
- ▶ Pull the HDD module out a few centimeters.
- ▶ Wait for at least 60 seconds.



This period is necessary for the RAID controller to recognize that a HDD module has been removed and for the hard disk drive to come to a stop.

- ▶ Pull the HDD module out completely.

- ▶ Install the new HDD module, as described in [“Installing the HDD module” on page 95](#).

**CAUTION!**

If you have removed a HDD module and do not install a new one in its place, put the dummy module back in its place for cooling, to comply with EMC regulations (regulations regarding electromagnetic compatibility), and for protection against fire. Ensure that the dummy module engages correctly in the bay.

8.2 Replacement of non-hot-plug components

When a defective non-hot-plug component has been detected (for more information see chapter [“Starting up and operation” on page 59](#) and the "Customer Self Service (CSS)" manual on the ServerBooks DVD), proceed as follows:

- ▶ Exit all applications and shut down the server properly (see section [“Switching the server on and off” on page 71](#)).
- ▶ Pull all power connectors out of the power outlets.
- ▶ If the model is a rack model, remove the server from the rack (see section [“Installing/removing the rack model” on page 43](#)) and place the server on a table, for example.

8.2.1 Opening the server and identifying the defective CSS component

8.2.1.1 Opening the housing



CAUTION!

The device can be seriously damaged if it is opened without authorization or if repairs are attempted by untrained personnel.

It is essential to observe the safety instructions in chapter [“Important information” on page 27](#).



Figure 28: Opening the housing (example: floorstand model)

- ▶ Pull the locking lever as far as it will go (1)
This causes the left side cover to move about 2 cm in the direction of the arrow and the hooks on the top edge of the side cover are disengaged.
- ▶ Remove the side cover (2).

8.2.1.2 Removing system fan 1

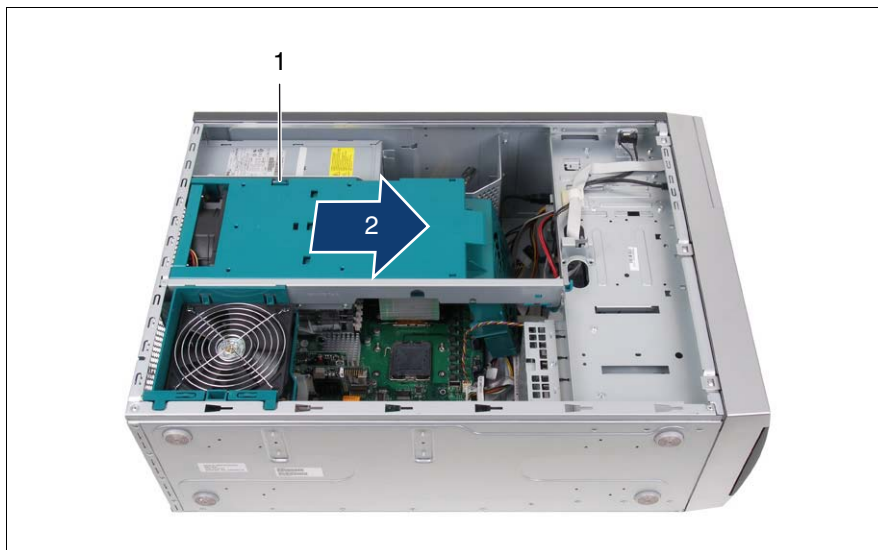


Figure 29: Removing system fan 1

- ▶ Disconnect the fan cable from the connector FAN1 SYS on the system board (see the technical manual for the system board D2509 on the ServerBooks DVD).
- ▶ Press the locking mechanism of the air duct (1).
- ▶ Push the air duct to the front side (2) until the bolts on the traverse and the housing of the power supply unit disengage.
- ▶ Remove the air duct with the integrated system fan 1.

8.2.1.3 Removing system fan 2



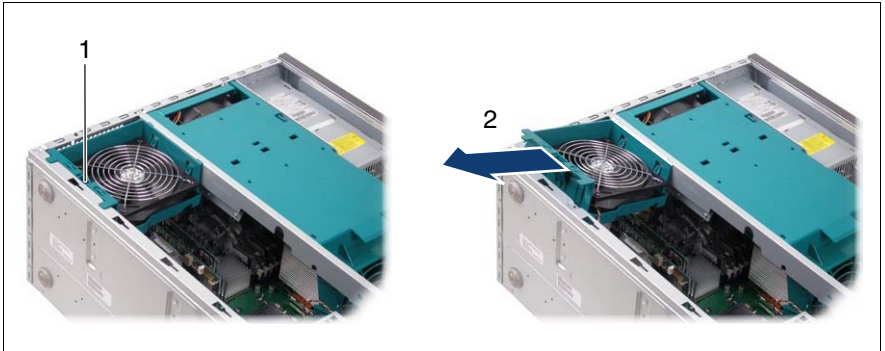


Figure 30: Removing system fan 2

- ▶ Disconnect the fan cable from the connector FAN2 SYS on the system board (see the technical manual for the system board D2509 on the ServerBooks DVD).
- ▶ Unlock system fan 2 (1).
- ▶ Take system fan 2 out (2).

8.2.1.4 Removing the traverse with the air duct

- ▶ Remove system fan 1 (see [“Removing system fan 1” on page 102](#)).
- ▶ Remove system fan 2 (see [“Removing system fan 2” on page 103](#)).

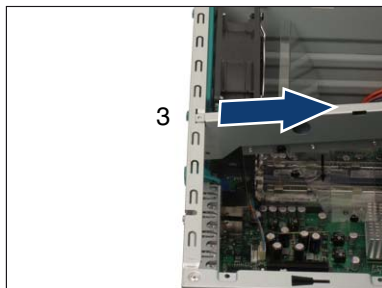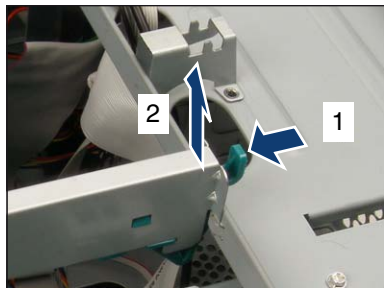

- ▶ Push the lock (1) and pull out the traverse (2).
- ▶ Unhook the traverse (3).
- ▶ Carefully remove the traverse together with the air duct.

8.2.1.5 Removing system fan 3

- ▶ Remove system fan 1 (see “[Removing system fan 1](#)” on page 102).
- ▶ Remove system fan 2 (see “[Removing system fan 2](#)” on page 103).
- ▶ Remove the traverse together with the air duct (see “[Removing the traverse with the air duct](#)” on page 104).

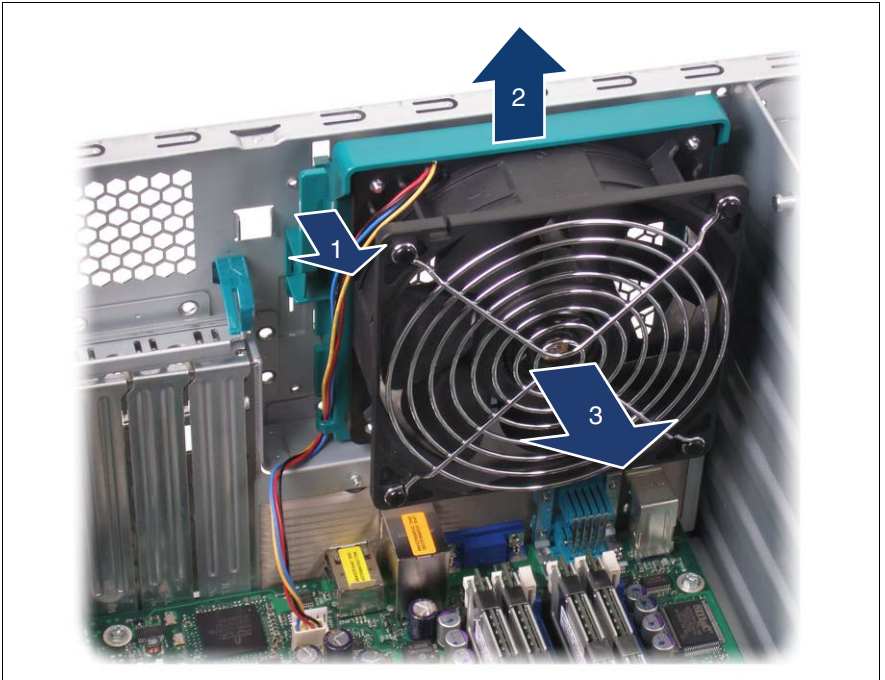


Figure 31: Removing system fan 3

- ▶ Disconnect the fan cable from the connector FAN3 SYS on the system board.
- ▶ Push the locking lever in the direction of the arrow (1).
- ▶ Pull system fan 3 in the direction of arrow (2) to disengage the four hooks.
- ▶ Take system fan 3 out (3).

8.2.1.6 Identifying a CSS component

- ▶ Press the Indicate CSS button on the system board (see the technical manual for the system board D2509 on the ServerBooks DVD).

The PRIMERGY Diagnostic LED of the defective CSS component lights up orange, thereby indicating which CSS component (memory module, fan or expansion card) on the system board must be replaced (see technical manual for the system board D2509).

8.2.2 Replacing a memory module

8.2.2.1 Removing a defective memory module

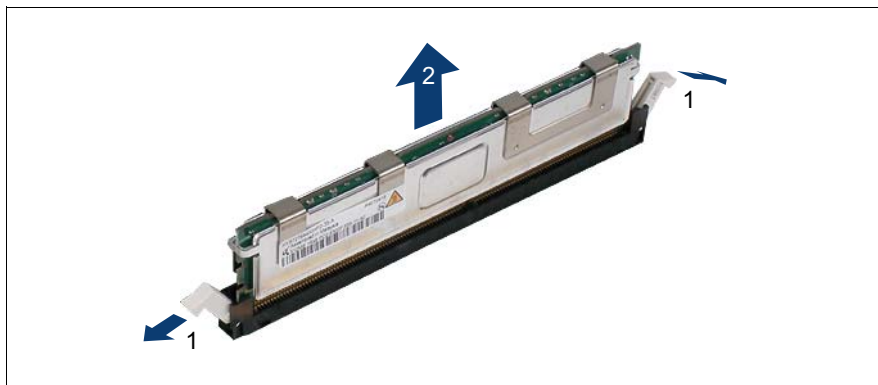


Figure 32: Removing a memory module

- ▶ Press the holders on either side of the mounting location concerned outward (1).
- ▶ Pull the defective memory module out of the slot (2).

8.2.2.2 Installing a new memory module

**CAUTION!**

Please note the equipping rules in the technical manual for the system board D2509.

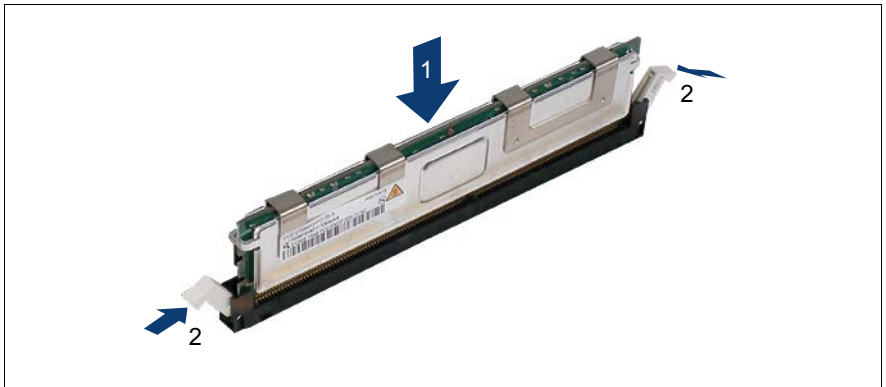


Figure 33: Inserting a memory module

- ▶ Carefully press the memory module into the slot (1) until the fastening tabs on both sides of it engage (2).

8.2.3 Replacing the system fan



CAUTION!

Since the system fans are not redundant, defective system fans have to be replaced immediately.

8.2.3.1 Replacing system fan 1

- ▶ Remove the defective system fan 1 (see [“Removing system fan 1” on page 102](#)).
- ▶ Install the new system fan 1 (see [“Installing system fan 1” on page 116](#)).

8.2.3.2 Replacing system fan 2

- ▶ Remove the defective system fan 2 (see [“Removing system fan 2” on page 103](#)).
- ▶ Install the new system fan 2 (see [“Installing system fan 2” on page 115](#)).

8.2.3.3 Replacing system fan 3

- ▶ Remove system fan 1 (see [“Removing system fan 1” on page 102](#)).
- ▶ Remove system fan 2 (see [“Removing system fan 2” on page 103](#)).
- ▶ Remove the traverse together with the air duct (see [“Removing the traverse with the air duct” on page 104](#)).
- ▶ Remove the defective system fan 3 (see [“Removing system fan 3” on page 105](#)).
- ▶ Install the new system fan 3 (see [“Installing system fan 3” on page 113](#)).
- ▶ Install the traverse together with the air duct (see [“Installing the traverse with the air duct” on page 114](#)).
- ▶ Install system fan 2 (see [“Installing system fan 2” on page 115](#)).
- ▶ Install system fan 1 (see [“Installing system fan 1” on page 116](#)).

8.2.4 Replacing an expansion card

8.2.4.1 Removing a defective expansion card

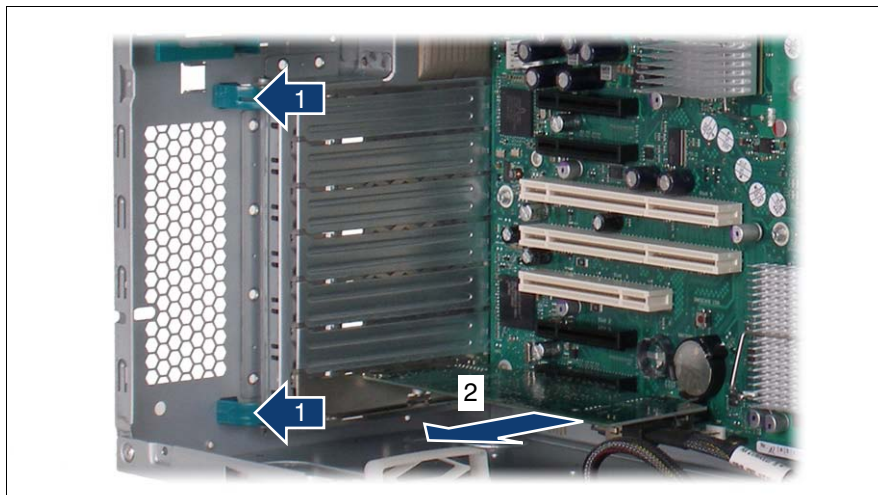


Figure 34: Removing a defective expansion card

- ▶ Press the green locking levers in the direction of the arrow and slide it out of the housing (1).
- ▶ Open the slot locking bar.
- ▶ If necessary, remove the cables from the defective expansion card.
- ▶ Pull the defective expansion card out of its slot (2).

8.2.4.2 Installing a new expansion card

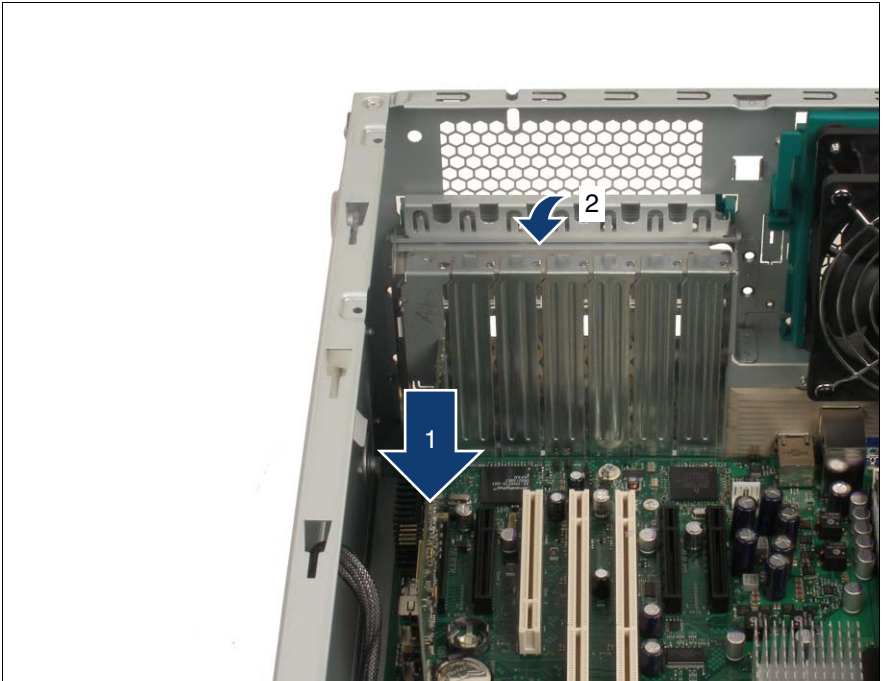


Figure 35: Installing a new expansion card

- ▶ Carefully press the new expansion card into the slot until it clicks into place (1).
Make sure that the lug on the slot cover clicks into place in the corresponding hole.
- ▶ Close the slot locking bar again (2).

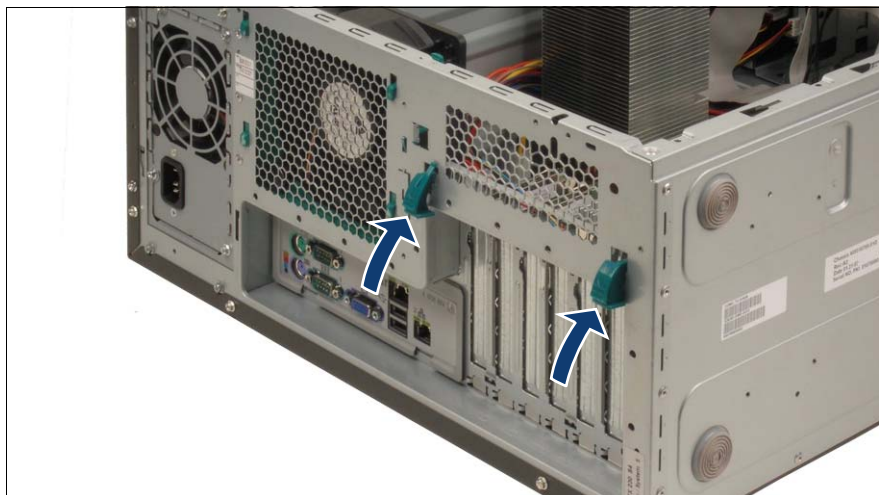


Figure 36: Locking slots

- ▶ Press the two green locking levers on the back inwards until they click into place.
- ▶ If necessary, connect the cables to the expansion card.

8.2.5 Closing the server

8.2.5.1 Installing system fan 3



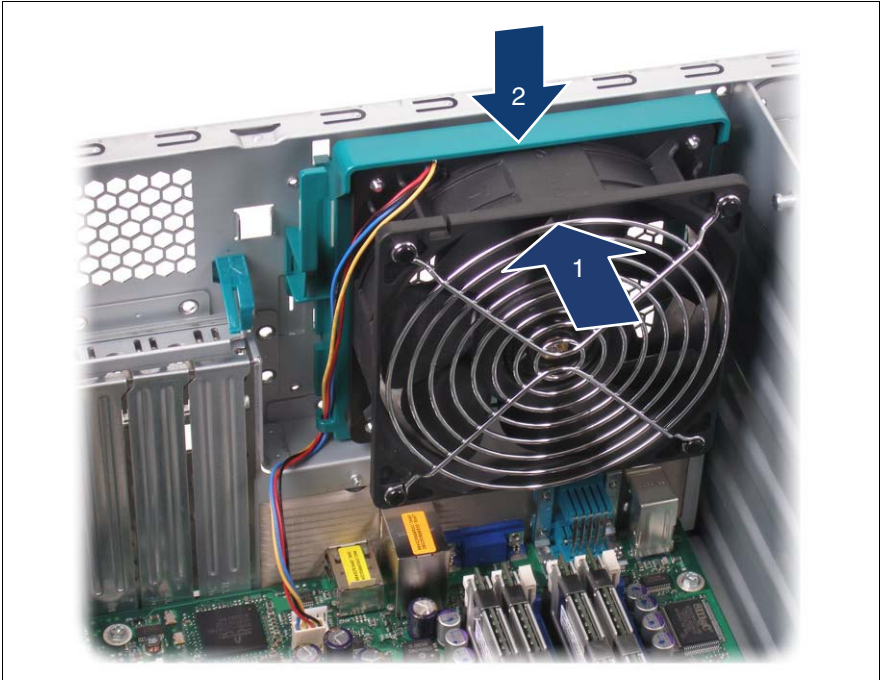


Figure 37: Installing system fan 3

- ▶ Place the hooks of system fan 3 into the recesses on the rear of the server (1).
- ▶ Push system fan 3 in the direction of the arrow until the locking lever engages (2).
- ▶ Connect the fan cable to the connector FAN3 SYS on the system board (see the technical manual for the system board D2509 on the ServerBooks DVD).

8.2.5.2 Installing the traverse with the air duct

- ▶ Install system fan 3 (see [“Installing system fan 3”](#) on page 113).

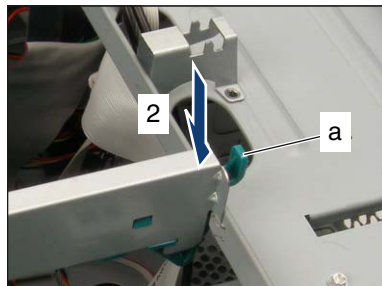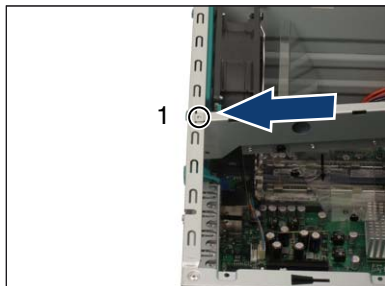

- ▶ Hook the traverse in place (1).
- ▶ Press on the traverse (2) until the locking lever (a) engages.

8.2.5.3 Installing system fan 2

- ▶ Install system fan 3 (see [“Installing system fan 3”](#) on page 113).
- ▶ Install the traverse together with the air duct (see [“Installing the traverse with the air duct”](#) on page 114).

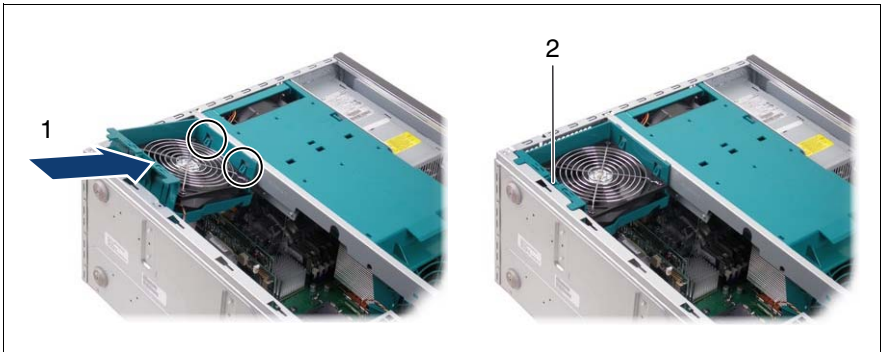


Figure 38: Installing system fan 2

- ▶ Hook the system fan 2 into the traverse (1) and press it in the housing until the locking lever clicks into place (2).
- ▶ Connect the fan cable to the connector FAN2 SYS on the system board (see the technical manual for the system board D2509 on the ServerBooks DVD).

8.2.5.4 Installing system fan 1

- ▶ Install system fan 3 (see [“Installing system fan 3” on page 113](#)).
- ▶ Install the traverse together with the air duct (see [“Installing the traverse with the air duct” on page 114](#)).
- ▶ Install system fan 2 (see [“Installing system fan 2” on page 115](#)).
- ▶ Connect the fan cable to the connector FAN1 SYS on the system board (see the technical manual for the system board D2509 on the ServerBooks DVD).

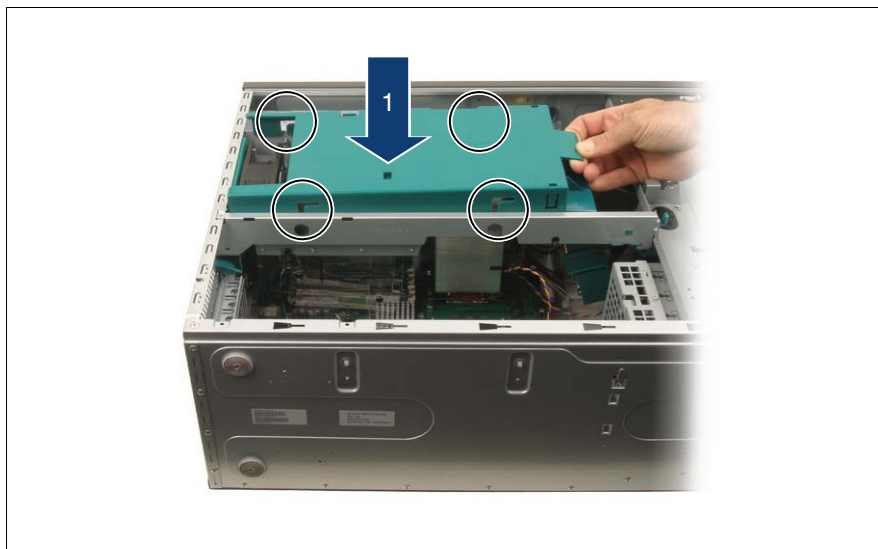


Figure 39: Installing system fan 1 (1)

- ▶ Carefully insert the air duct with the integrated system fan (1).
Refer also to the four bolts on the traverse and the housing of the power supply unit (see the circles).

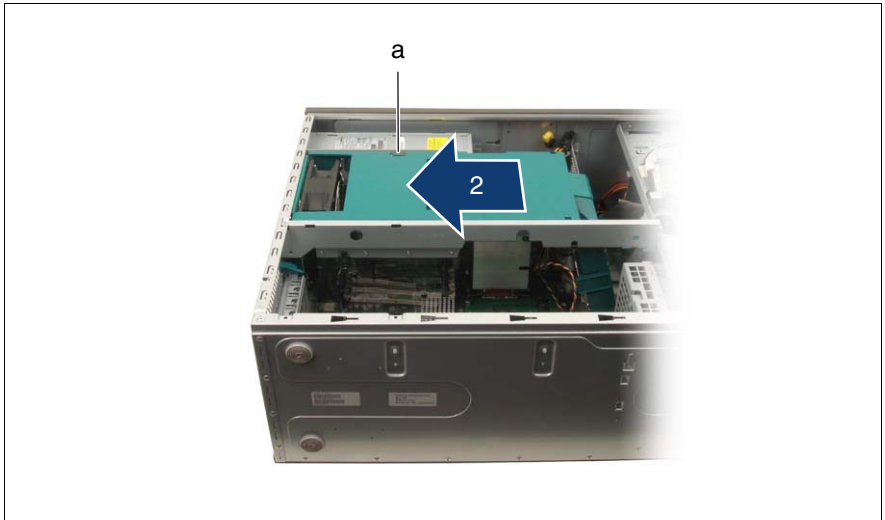


Figure 40: Installing system fan 1 (2)

- ▶ Push the air duct in the direction of the arrow (2).
Ensure that the locking mechanism (a) engages.

8.2.5.5 Closing the housing



Figure 41: Closing the housing (example: floorstand model)

- ▶ Pull the locking lever as far as it will go and attach the side cover at the five recesses (see circles) on the housing (1).
- ▶ Press the side cover against the housing and at the same time push the locking lever shut (2).

Closing the locking lever pushes the side cover forwards and the hooks on the upper edge of the side cover engage.

- ▶ In the case of rack models, you still have to slide the server back into the rack (see section [“Installing/removing the rack model” on page 43](#)).
- ▶ Connect all power plugs to the power outlets.
- ▶ Press the On/Off button to start up the server.

Abbreviations

AC

Alternating Current

ANSI

American National Standard Institute

ASR&R

Automatic Server Reconfiguration and Restart

ATA

Advanced Technology Attachments

BIOS

Basic Input-Output System

BMC

Baseboard Management Controller

CC

Cache Coherency

CD

Compact Disk

CD-ROM

Compact Disk-Read Only Memory

CHS

Cylinder Head Sector

CMOS

Complementary Metal Oxide Semiconductor

COM

Communication

CPU

Central Processing Unit

Abbreviations

DC

Direct Current

DIMM

Dual Inline Memory Module

DIP

Dual Inline Package

DMA

Direct Memory Access

DMI

Desktop Management Interface

ECC

Error Checking and Correcting

ECP

Extended Capabilities Port

EEPROM

Electrically Erasable Programmable Read-Only Memory

EMP

Emergency Management Port

EPP

Enhanced Parallel Port

EMV

Electromagnetic compatibility

ESD

Electrostatic Discharge

FPC

Front Panel Controller

FRU

Field Replaceable Unit

FSB	Front Side Bus
GUI	Graphical User Interface
HDD	Hard Disk Drive
HSC	Hot-Swap Controller
I²C	Inter-Integrated Circuit
I/O	Input/Output
ICM	Intelligent Chassis Management
ID	Identification
IDE	Integrated Drive Electronics
IME	Integrated Mirroring Enhanced
IRQ	Interrupt Request Line
LAN	Local Area Network
LBA	Logical Block Address
LCD	Liquid Crystal Display

Abbreviations

LUN

Logical Unit Number

LVD

Low-Voltage Differential SCSI

LWL

LichtWellenLeiter (fiber optic cable)

MMF

Multi Mode Faser

MRL

Manual Retention Latch

NMI

Non Maskable Interrupt

NVRAM

Non Volatile Random Access Memory

OS

Operating System

PCI

Peripheral Component Interconnect

PDA

Prefailure Detection and Analysis

POST

Power ON Self Test

RAID

Redundant Arrays of Independent Disks

RAM

Random Access Memory

ROM

Read-Only Memory

RSB

Remote Service Board

RTC

Real Time Clock

RTDS

Remote Test and Diagnosis System

SAF-TE

SCSI Accessed Fault-Tolerance Enclosures

SAS

Serial Attached SCSI

SATA

Serial ATA

SBE

Single Bit Error

SCA

Single Connector Attachment

SCSI

Small Computer System Interface

SDDC

Single Device Data Correction

SDR

Sensor Data Record

SDRAM

Synchronous Dynamic Random Access Memory

SEL

System Event Log

SMI

System Management Interrupt

Abbreviations

SSU

System Setup Utility

SVGA

Super Video Graphics Adapter

USB

Universal Serial Bus

VGA

Video Graphics Adapter

Index

3rd party rack
installing in 49
requirements 44

A

acclimatization time 39, 92
Advanced Video Redirection 16
air duct
installing 114
removing 104
ambient conditions 23
articulated cable guide 48
ASR&R 15
availability 15
AVR 16

B

BIOS update 18
BIOS, security functions 79

C

cables
connecting 57
disconnecting 57
cage nut 47
CD/DVD drive activity indicator 62, 65
CE marking 22, 34
Class A Compliance Statement 34
cleaning
keyboard 77
monitor 77
mouse 77
server 77

closing, housing 118
compliance standards 22
components
hardware 7
software 7
configuration, server 73
connecting cables 57
consumables 37
control panel 62
controls 62
correcting faults 81
CSS indicator 62, 64

D

data manipulation 7
data protection 79
data security 15
DataCenter rack
installing server 47
requirements 43
date, incorrect 84
delivery note 25, 40
devices, connecting to server 53
disconnecting cables 57
disposal, devices 38
drive
"dead" 85
defective 85
indicators 65
dummy module, HDD module 94, 99

E

ECC 15
EDC 15
electrical data 21
electromagnetic compatibility 22, 34
electrostatic-sensitive devices
(ESD) 33

- EMC directive 22
- EMC regulations 94, 99
- environment class 23
- environmental protection 37
- error
 - drifting display on monitor 83
 - drive “dead” 85
 - drive defective 85
 - floppy disk cannot be read or written 84
 - incorrect date 84
 - incorrect time 84
 - no display on monitor 83
 - no mouse pointer 83
 - power-on indicator does not light 81
 - screen remains blank 82
 - screen shows flickering stripes 83
 - server switches itself off 82
- Error Correcting Code 15
- Error Detection Code 15
- error message on screen 85
- ESD (electrostatic-sensitive devices) 33
- expansion card
 - installing 111
 - removing 110
- F**
- fault
 - drifting display on monitor 83
 - drive defective 85
 - incorrect date 84
 - incorrect time 84
 - no display on monitor 83
 - screen remains blank 82
 - screen shows flickering stripes 83
- FCC statement 34
- features 10
- flash EPROM 18
- floppy disk
 - cannot be read or written 84
- floppy disk drive activity indicator 62, 65
- G**
- global error indicator 62, 64
- graphics card 54
- H**
- hard disk activity indicator 62, 64
- hard disk drive 89
 - handling 92
 - hot-plug 89
 - installation frame 89, 90
- hard disk drive indicators 66
- HDD module 89, 90
 - acclimatization time 39, 92
 - installation frame 95
 - installing 95
- height units 47
- hot-plug HDD module 89
- hot-plug power supply unit 54
- hot-spare memory, memory module 15
- housing
 - closing 118
 - open 100
- I**
- ID button 62, 63
- ID indicator 62, 64
- IME (Integrated Mirroring Enhanced) 73

indicators

- CD/DVD drive activity 62, 65
- CSS 62, 64
- floppy disk drive activity 62, 65
- global error 62, 64
- hard disk activity 62, 64
- hard disk drive 66
- ID 62, 64
- LAN activity 69
- LAN transfer rate 69
- on power supply unit 70
- on server 62
- operation 62
- power-on 64
- system errors 64

information material, additional 9

installing in

- 3rd party rack 49
 - DataCenter rack 47
 - PRIMECENTER rack 47
- installing in the rack, notes 36
- installing the operating system 76
- installing, server 43

Integrated Mirroring Enhanced (IME) 73

integrated Remote Management Controller 16

iRMC S2 16

K

keyboard port 53

L

- labels 38
- LAN activity indicator 69
- LAN transfer rate indicator 69
- laser information 32
- light emitting diode (LED) 32
- lithium battery 31
- Low Voltage Directive 22, 34

M

- main memory 106
- mains voltage, connecting server 54
- meaning of the symbols 20
- memory module
 - hot-spare memory 15
 - inserting 107
 - removing 106
- memory scrubbing 15
- monitor
 - display drifts 83
 - no display 83
- monitor port 53
- mounting the anti-tilt bracket 42
- mouse port 53
- mouse, no mouse pointer on screen 83

N

- NMI button 62, 63
- noise level 23
- norms and standards 22
- notational conventions 20

O

- On/Off button 62, 63
- onboard SATA controller 12, 73
 - configuring 76
- open, housing 100
- operation 59
- overload 17

P

- packaging 37, 40
- PCI SAS controller, configuring 76
- PDA 15, 17
- ports 53
 - keyboard port 53
 - LAN port 53
 - monitor port 53
 - mouse port 53
 - service LAN port 53
 - USB port 53

- power supply unit
 - cable clamp 55
 - hot-plug 54, 88
 - indicators 70
 - replacing 88
 - standard 54
- power supply, redundant 54
- power-on indicator 62, 64
 - does not light 81
- PRIMECENTER rack
 - installing server 47
 - requirements 43
- property protection 79
- PS/2 keyboard port 53
- PS/2 mouse port 53

R

- rack, requirements 43
- RAID configuration 73, 74
- RAID controller is not configured for this drive 85
- RAID functionality 12, 73
- RAID level 15
- rating plate 40
- recycling devices 38
- Remote Storage 16
- removing, server 43
- replacing
 - power supply unit 88
 - system fan 108
- requirements
 - 3rd party rack 44
 - DataCenter rack 43
 - PRIMECENTER rack 43
- reset button 62, 63
- return of devices 38
- routing
 - cables 48

S

- safety instructions 27
- safety standards 22
- SAS controller
 - IME configuration 73
 - RAID configuration 73, 74
- SATA RAID controller 12, 73
- saving energy 37
- screen
 - error message 85
 - flickering 83
 - remains blank 82
 - shows flickering stripes 83
- SDDC, Single Device Data Correction 15
- security function 7
- security functions
 - setup password 79
 - system password 79
 - unauthorized access 79
- serial port 53
- server
 - ambient conditions 23
 - closing 118
 - compliance standards 22
 - configuration 18, 73
 - connecting external devices 53
 - connecting mains voltage 54
 - control panel 62
 - correcting faults 81
 - data protection 79
 - dimensions 22
 - electrical data 21
 - fitting in rack 43
 - height units 47
 - hot-plug power supply unit 88
 - indicators 62
 - installing 43
 - LAN port 53
 - NMI button 63
 - noise level 23
 - open 100
 - operation 59
 - ports 53

- property protection 79
 - removing 43
 - reset button 62, 63
 - routing cables 48
 - safety standards 21, 22
 - setting up 41
 - starting up 59
 - switches itself off (error) 82
 - switching off 71
 - switching on 71
 - technical data 21
 - transport 35
 - troubleshooting 81
 - unpacking 40
 - ventilation clearance 22
 - weight 22
 - Server management 17
 - ServerStart 18, 75
 - ServerView 17
 - supported functions 17
 - ServerView Remote
 - Management 18, 19
 - service LAN port 16, 53
 - setting up, server 41
 - setup password 79
 - Single Device Data Correction (SDDC) 15
 - spring nut 47
 - support bracket 47
 - switch off time, defining 72
 - switch on time, defining 72
 - switching off, server 71
 - switching on, server 71
 - system board 10
 - system fan 1
 - installing 116
 - removing 102
 - system fan 2
 - installing 115
 - removing 103
 - system fan 3
 - installing 113
 - removing 105
 - system password 79
- T**
- target group 7
 - technical data 21
 - time, incorrect 84
 - tips 81
 - transport damage 25, 40
 - transporting the server 35
 - traverse
 - installing 114
 - removing 104
 - troubleshooting 81
- U**
- unauthorized access 79
 - unpacking, server 40
 - USB port 53
 - using the cable clamp 55
- V**
- ventilation clearance 22
- W**
- weight 22



Information on this document

On April 1, 2009, Fujitsu became the sole owner of Fujitsu Siemens Computers. This new subsidiary of Fujitsu has been renamed Fujitsu Technology Solutions.

This document from the document archive refers to a product version which was released a considerable time ago or which is no longer marketed.

Please note that all company references and copyrights in this document have been legally transferred to Fujitsu Technology Solutions.

Contact and support addresses will now be offered by Fujitsu Technology Solutions and have the format ...@ts.fujitsu.com.

The Internet pages of Fujitsu Technology Solutions are available at [http://ts.fujitsu.com/...](http://ts.fujitsu.com/) and the user documentation at <http://manuals.ts.fujitsu.com>.

Copyright Fujitsu Technology Solutions, 2009

Hinweise zum vorliegenden Dokument

Zum 1. April 2009 ist Fujitsu Siemens Computers in den alleinigen Besitz von Fujitsu übergegangen. Diese neue Tochtergesellschaft von Fujitsu trägt seitdem den Namen Fujitsu Technology Solutions.

Das vorliegende Dokument aus dem Dokumentenarchiv bezieht sich auf eine bereits vor längerer Zeit freigegebene oder nicht mehr im Vertrieb befindliche Produktversion.

Bitte beachten Sie, dass alle Firmenbezüge und Copyrights im vorliegenden Dokument rechtlich auf Fujitsu Technology Solutions übergegangen sind.

Kontakt- und Supportadressen werden nun von Fujitsu Technology Solutions angeboten und haben die Form ...@ts.fujitsu.com.

Die Internetseiten von Fujitsu Technology Solutions finden Sie unter [http://de.ts.fujitsu.com/...](http://de.ts.fujitsu.com/), und unter <http://manuals.ts.fujitsu.com> finden Sie die Benutzerdokumentation.

Copyright Fujitsu Technology Solutions, 2009