



Apple Mac Pro 2013 Memory Installation Guide



What will I need?



Clear Workspace



New Memory Modules



To prevent any potential damage from anti static electricity, you should discharge yourself first. This can be done by touching a grounded metal object - such as a radiator.

Step 1

Make sure the Mac Pro is powered off and all cables have been disconnected.

Step 2


Unlock the enclosure by sliding the latch to the right and then lift straight up and off the computer.



Step 3

There are 4 memory slots - 2 to the left and 2 to the right of the Mac Pro's panel.

- Press the Memory Bay release lever (A) at the top of each memory bank.
- This will make the slots swing out, allowing any existing memory to be removed.
- Gently remove the existing memory from the slot, closest one to you first.

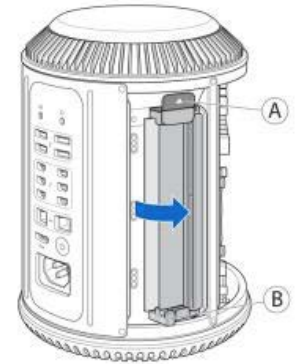

Step 4

To install the new memory, you will need to line up the notch on each module with the notch in the slot.

- Gently hold the ends of the module and insert it into the slot - aligning it horizontally.
- Once the module is touching the gold contacts, use a firm and even pressure to fully seat the module into the slot.
- ** Be careful not to force the module, if it is not seating correctly, ensure that the notch is lined up correctly. **



Step 5

Once the new modules are seated, you can press the memory bay back into place.

Step 6

Replace the enclosure and reconnect the cables.

Step 7

Start up your machine, click on the Apple symbol and then 'About This Mac' to ensure that the new memory modules are being recognized correctly.