# Alienware 15 Service Manual



## Notes, Cautions, and Warnings



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

**Copyright** © **2015 Dell Inc. All rights reserved**. This product is protected by U.S. and international copyright and intellectual property laws. Dell<sup>™</sup> and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2015 - 01

# **Contents**

Before working inside your computer	12
Before you begin	
Safety instructions	
Recommended tools	
After working inside your computer	15
Removing the base panel	16
Procedure	
Replacing the base panel	19
Procedure	
Barranda adda a sana a sana a sana da da s	20
Removing the memory modules	
Prerequisites	
Procedure	20
Replacing the memory modules	22
Procedure	22
Post-requisites	23
Removing the solid-state drives	24
Prerequisites	
Procedure	
Donlacing the solid state drives	26
Replacing the solid-state drives	
	20 26

Removing the hard drive	27
Prerequisites	
Procedure	
Replacing the hard drive	32
Procedure	
Post-requisites	
Removing the wireless card	33
Prerequisites	
Procedure	
Replacing the wireless card	35
Procedure	
Post-requisites	35
Removing the palm rest	36
Prerequisites	
Procedure	36
Replacing the palm rest	43
Procedure	
Post-requisites	
Removing the touch pad	44
Prerequisites	
Procedure	44
Replacing the touch pad	48
Procedure	
Post-requisites	48

Removing the keyboard	49
Prerequisites	
Procedure	
Replacing the keyboard	55
Procedure	
Post-requisites	
Removing the power-button board.	56
Prerequisites	
Procedure	
Replacing the power-button board	59
Procedure	
Post-requisites	59
Removing the status-light board	60
Prerequisites	
Procedure	61
Replacing the status-light board	63
Procedure	
Post-requisites	63
Removing the I/O board	64
Prerequisites	
Procedure	64
Replacing the I/O board	66
Procedure	66
Post-requisites	66

Removing the speakers	67
Prerequisites	
Procedure	67
Replacing the speakers	70
Procedure	
Post-requisites	70
Removing the front AlienFX LED boards	71
Prerequisites	71
Procedure	71
Replacing the front AlienFX LED board	73
Procedure	
Post-requisites	73
Removing the hinge covers	74
Prerequisites	
Procedure	74
Replacing the hinge covers	76
Procedure	
Post-requisites	76
Removing the display assembly	77
Prerequisites	77
Procedure	77
Replacing the display assembly	81
Procedure	81
Post-requisites	81

Removing the display bezel	83
Prerequisites	
Procedure	
Replacing the display bezel	87
Procedure	
Post-requisites	
Removing the display panel	88
Prerequisites	
Procedure	88
Replacing the display panel	91
Procedure	
Post-requisites	91
Removing the display hinges	92
Prerequisites	
Procedure	92
Replacing the display hinges	94
Procedure	
Post-requisites	94
Removing the display back-cover	95
Prerequisites	
Procedure	95
Replacing the display back-cover	98
Procedure	
Post-requisites	98

Removing the camera	99
Prerequisites	
Procedure	
Replacing the camera	102
Procedure	
Post-requisites	102
Removing the Alienware AlienHead LED boa	rd 103
Prerequisites	
Procedure	103
Replacing the Alienware AlienHead LED boai	rd106
Procedure	106
Post-requisites	106
Removing the display-panel AlienFX LEDs	107
Prerequisites	107
Procedure	108
Replacing the display-panel AlienFX LEDs	110
Procedure	
Post-requisites	110
Removing the logo board	111
Prerequisites	111
Procedure	111
Replacing the logo board	113
Procedure	113
Post-requisites	113

Removing the system board	114
Prerequisites	114
Procedure	114
Replacing the system board	118
Procedure	118
Post-requisites	119
Removing the heat-sink assembly	120
Prerequisites	120
Procedure	120
Replacing the heat-sink assembly	122
Procedure	122
Post-requisites	122
Removing the fans	123
Prerequisites	123
Procedure	123
Replacing the fans	125
Procedure	125
Post-requisites	125
Removing the power-adapter port	126
Prerequisites	126
Procedure	126
Replacing the power-adapter port	128
Procedure	128
Post-requisites	128

Removing the coin-cell battery	129
Prerequisites	129
Procedure	129
Replacing the coin-cell battery	131
Procedure	131
Post-requisites	131
Removing the battery	132
Prerequisites	132
Procedure	132
Replacing the battery	135
Procedure	135
Post-requisites	135
Removing the computer base	136
Prerequisites	136
Procedure	136
Replacing the computer base	138
Procedure	138
Post-requisites	138
BIOS setup program	139
Overview	139
Entering BIOS setup program	139
BIOS setup program options	139
Boot sequence	145
Boot options	145
Changing boot sequence for the current boot	146
Changing boot sequence for future boots	146
Flashing the BIOS	148
_	

Getting help and contacting Alienware	149
Self-help resources	149
Contacting Alienware	149

# Before working inside your computer




CAUTION: To avoid damaging the components and cards, handle them by their edges and avoid touching pins and contacts.



**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Before you begin

- 1 Save and close all open files and exit all open applications.
- 2 Shut down your computer.
  - Windows 8.1: On the Start screen, click or tap the power icon ♥→
     Shut down.
  - Windows 7: Click or tap Start → Shut down.

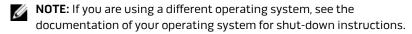

- 3 Disconnect your computer and all attached devices from their electrical outlets.
- **4** Disconnect all cables such as telephone cables, network cables and so on, from your computer.
- **5** Disconnect all attached devices and peripherals, such as keyboard, mouse, monitor, and so on, from your computer.
- **6** Remove any media card and optical disc from your computer, if applicable.

## Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.



WARNING: Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



WARNING: Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the power source.



CAUTION: To avoid damaging the computer, make sure that the work surface is flat and clean.



CAUTION: To avoid damaging the components and cards, handle them by their edges and avoid touching pins and contacts.



CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at dell.com/regulatory\_compliance.



CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.



CAUTION: When you disconnect a cable, pull on its connector or on its pull-tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, make sure that the ports and connectors are correctly oriented and aligned.



CAUTION: To disconnect a network cable, first unplug the cable from your computer and then unplug the cable from the network device.



CAUTION: Press and eject any installed card from the mediacard reader.

## Recommended tools

The procedures in this document may require the following tools:

- Philips screwdriver
- Plastic scribe

# After working inside your computer

### Λ

CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.

- 1 Replace all screws and make sure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, and cables you removed before working on your computer.
- **3** Replace any media cards, discs, and any other parts that you removed before working on your computer.
- **4** Connect your computer and all attached devices to their electrical outlets.
- **5** Turn on your computer.

# Removing the base panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Close the display and turn the computer over.
- 2 Loosen the captive screws that secure the base panel to the computer base.
- **3** Using a plastic scribe, gently release the tabs that secure the base panel to the computer base.


4 Slide and remove the base panel from the computer base.



- 1 computer base
- 3 base panel

- 2 captive screws (2)
- 4 plastic scribe

Disconnect the battery cable from the system board.

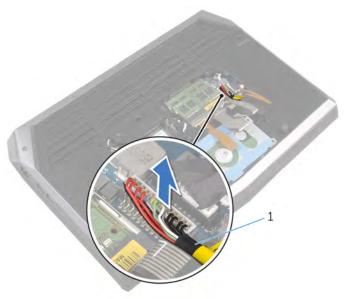

- 1 battery cable
- Turn the computer over and open the display as far as possible.
- Press and hold the power button for 4 seconds to ground the system board.

# Replacing the base panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Close the display and turn the computer over.
- **2** Connect the battery cable to the system board.
- **3** Slide the tabs on the base panel into the slots on the computer base and snap the base panel into place.
- **4** Tighten the captive screws that secure the base panel to the computer base.

# Removing the memory modules



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


### **Prerequisites**

Remove the base panel.

#### **Procedure**

1 Using your fingertips, carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up.

2 Slide and remove the memory module from the memory-module slot.

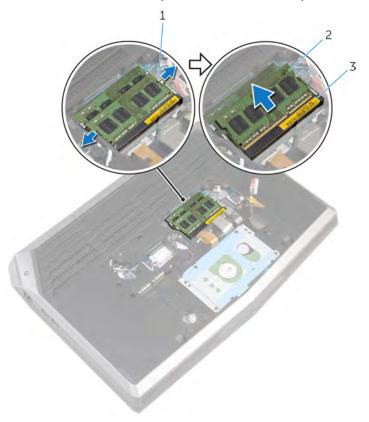

1 securing clips (2)

- 2 memory modules (2)
- 3 memory-module slot

## Replacing the memory modules




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

Align the notch on the memory module with the tab on the memorymodule slot.

- 2 Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.
  - **NOTE:** If you do not hear the click, remove the memory module and reinstall it.

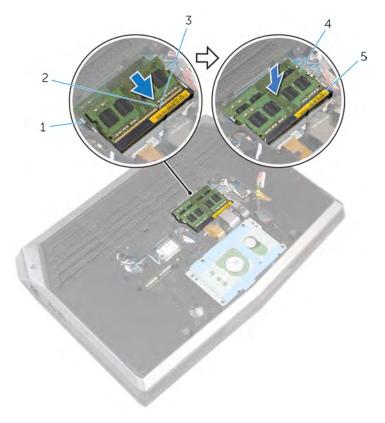

- 1 securing clips (2)
- 3 tab
- 5 memory-module slot
- 2 notch
- 4 memory modules (2)

## **Post-requisites**

Replace the base panel.

# Removing the solid-state drives



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Solid-state drives are fragile. Exercise care when handling the hard drive.



CAUTION: To avoid data loss, do not remove the solid-state drive while the computer is in sleep or on state.


## **Prerequisites**

Remove the base panel.

#### **Procedure**

1 Remove the screw that secures the solid-state drive to the computer base.

2 Slide and remove the solid-state drive from the solid-state drive slot.

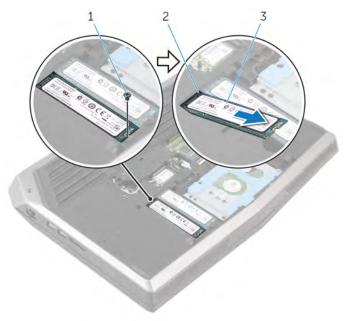

1 screw

- 2 solid-state drive slot
- 3 solid-state drives (2)

# Replacing the solid-state drives



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Solid-state drives are fragile. Exercise care when handling the hard drive.

#### **Procedure**

- 1 Slide the solid-state drive into the solid-state drive slot.
- 2 Align the screw hole on the solid-state drive with the screw hole on the computer base.
- **3** Replace the screw that secures the solid-state drive to the computer base.

## Post-requisites

Replace the base panel.

# Removing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.




CAUTION: To avoid data loss, do not remove the hard drive while the computer is in sleep or on state.

## **Prerequisites**

Remove the base panel.

#### **Procedure**


1 Remove the keyboard-backlight cable, keyboard cable, and macro-keys cable from the routing guides on the computer base.

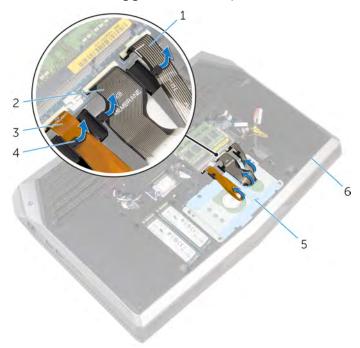

1 macro-keys cable

- 2 keyboard cable
- 3 keyboard-backlight cable
- 4 routing guides (3)
- 5 hard-drive assembly
- 6 computer base
- 2 Remove the screws that secure the hard-drive assembly to the computer base.
- **3** Using the pull tab, disconnect the hard-drive cable from the system board.
- 4 Note the hard-drive cable routing and remove the cable from the routing guides on the computer base.

**5** Lift and slide the hard-drive assembly off the computer base.

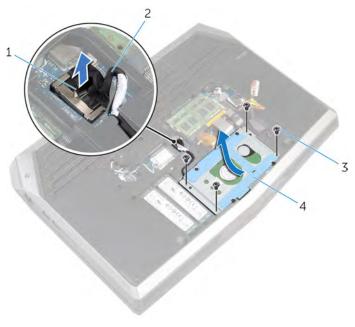

- 1 pull tab
- 3 screws (4)

- 2 hard-drive cable
- 4 hard-drive assembly
- **6** Remove the screws that secure the hard-drive bracket to the hard-drive assembly.

#### 7 Lift the hard-drive bracket off the hard-drive assembly.



- 1 hard-drive assembly
- 3 screws (4)

2 hard-drive bracket

8 Disconnect the interposer from the hard drive.



1 interposer

2 hard drive

## Replacing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.

#### **Procedure**

- Connect the interposer to the hard drive.
- 2 Align the screw holes on the hard-drive bracket with the screw holes on the hard-drive assembly.
- 3 Replace the screws that secure the hard-drive bracket to the hard-drive assembly.
- 4 Slide the hard-drive assembly under the tab on the computer base and align the screw holes on the hard-drive assembly with the screw holes on the computer base.
- 5 Replace the screws that secure the hard-drive assembly to the computer base.
- 6 Route the hard-drive cable through the routing guides on the computer base.
- 7 Connect the hard-drive cable to the system board.
- **8** Route the keyboard-backlight cable, keyboard cable, and macro-keys cable through the routing guides on the computer base.

### Post-requisites

Replace the <u>base panel</u>.

# Removing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


### **Prerequisites**

Remove the base panel.

#### **Procedure**

- Remove the screw that secures the wireless-card bracket to the system hoard.
- **2** Lift the wireless-card bracket off the wireless card.
- **3** Disconnect the antenna cables from the wireless card.

#### 4 Lift and slide the wireless card out of the wireless-card slot.

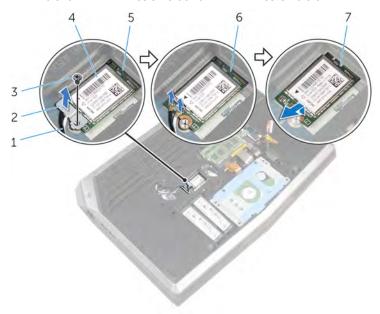

- 1 antenna cables (2)
- 3 screw
- 5 wireless-card slot
- 7 notches (2)

- 2 wireless-card bracket
- 4 wireless card
- 6 tabs (2)

# Replacing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### Procedure



CAUTION: To avoid damaging the wireless card, do not place any cables under it.

- 1 Align the notches on the wireless card with the tabs on the wireless-card slot.
- 2 Slide the wireless-card at an angle into the wireless-card slot.
- 3 Connect the antenna cables to the wireless card.
  A label at the tip of the antenna cables indicates color scheme for the wireless card supported by your computer.

Connectors on the wireless card	Antenna-cable sticker color
Auxiliary	White
Main	Black

- 4 Press the other end of the wireless card down and align the screw hole on the wireless-card bracket with the screw hole on the system board.
- 5 Replace the screw that secures the wireless-card bracket to the system board.

## Post-requisites

Replace the base panel.

# Removing the palm rest



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


### **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.

#### **Procedure**

1 Remove the keyboard cable, keyboard-backlight cable, and macro-keys cable from the routing guides on the computer base.

2 Lift the latches and disconnect the keyboard-backlight cable, keyboard cable, macro-keys cable, and macro-keys backlight cable from the system board.

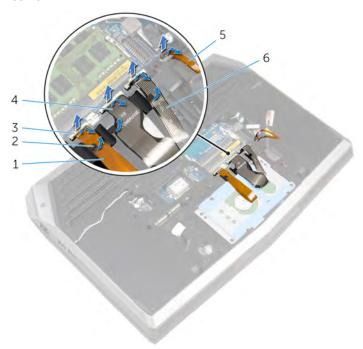

- 1 keyboard-backlight cable
- 2 routing guides (3)

3 latches (4)

- 4 keyboard cable
- 5 macro-keys backlight cable
- 6 macro-keys cable


Remove the screws that secure the palm-rest assembly to the computer base.



1 screws (15)

- 2 computer base
- Turn the computer over and open the display as far as possible.
- Lift the computer base and rest the display on a clean and flat surface.

**6** Push the palm-rest assembly from the release hole to release it from the tabs on the computer base.

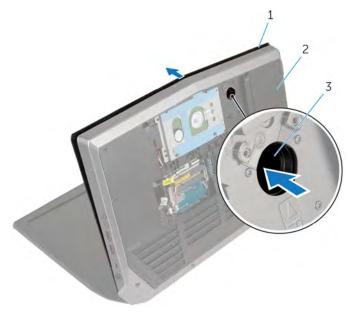

- 1 palm-rest assembly
- 2 computer base

- 3 release hole
- 7 Place the computer in an upright position.
- 8 Using a plastic scribe, pry up along the edges of the palm-rest assembly.

**9** Gently lift the palm-rest assembly and remove the keyboard cable, keyboard-backlight cable, macro-keys cable, and macro-keys backlight cable from the slot on the computer base.




1 palm-rest assembly

2 plastic scribe

**10** Carefully turn the palm-rest assembly over and disconnect the power-button board cable from the system board.

11 Lift the palm-rest assembly off the computer base.

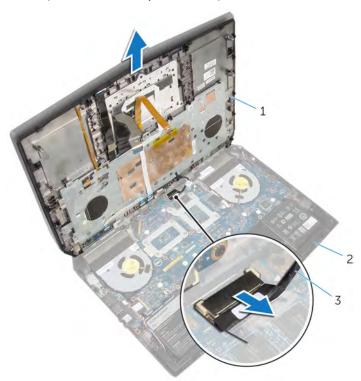

- 1 palm-rest assembly
- 2 computer base
- 3 power-button board cable
- **12** Turn the palm-rest assembly over.
- 13 Follow the procedure from step 1 to step 6 in "Removing the <u>keyboard</u>".
- **14** Follow the procedure from step 1 to step 4 in "Removing the <u>power-button</u> <u>board</u>".
- **15** Follow the procedure from step 1 to step 3 in "Removing the <u>status-light</u> <u>board</u>".

**16** Follow the procedure from step 1 to step 5 in "Removing the <u>touch pad</u>".



1 palm-rest assembly

# Replacing the palm rest



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Follow the procedure from step 1 to step 5 in "Replacing the touch pad".
- 2 Follow the procedure from step 1 to step 3 in "Replacing the <u>status-light</u> board".
- **3** Follow the procedure from step 1 to step 4 in "Replacing the <u>power-button</u> board".
- **4** Follow the procedure from step 1 to step 7 in "Replacing the <u>keyboard</u>".
- **5** Connect the power-button board cable to the system board.
- 6 Carefully turn the palm-rest assembly over and slide the keyboard cable, keyboard-backlight cable, macro-keys cable, and macro-keys backlight cable into the slot on the computer base.
- 7 Align the palm-rest assembly on the computer base and snap it into place.
- 8 Close the display and turn the computer over.
- 9 Replace the screws that secure the palm-rest assembly to the computer base.
- 10 Slide the keyboard-backlight cable, keyboard cable, macro-keys cable, and macro-keys backlight cable into the system board and press down on the latches to secure the cables.
- 11 Route the keyboard-backlight cable, keyboard cable, and macro-keys cable through the routing guides on the computer base.

# Post-requisites

- **1** Replace the <u>solid-state drives</u>.
- **2** Replace the <u>memory modules</u>.
- **3** Replace the <u>base panel</u>.

# Removing the touch pad



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the <u>memory modules</u>.
- 3 Remove the solid-state drives.
- 4 Follow the procedure from step 1 to step 12 in "Removing the palm rest".

#### **Procedure**

- 1 Lift the latches and disconnect the touch-pad cable and touch-pad buttons cable from the touch pad.
- **2** Peel off the touch-pad cable from the touch pad.


**3** Remove the screws that secure the touch-pad bracket to the palm-rest assembly.

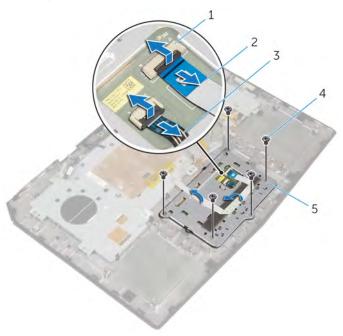

- 1 latches (2)
- 3 touch-pad buttons cable
- 5 touch-pad bracket

- 2 touch-pad cable
- 4 screws (5)


4 Release the tabs that secure the touch-pad bracket to the palm-rest assembly and lift the touch-pad bracket off the palm-rest assembly.

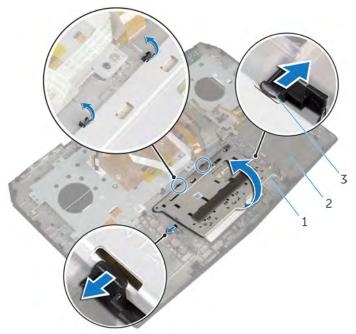

- 1 touch-pad bracket
- 2 palm-rest assembly

3 tabs (4)

### Lift the touch pad off the palm-rest assembly.

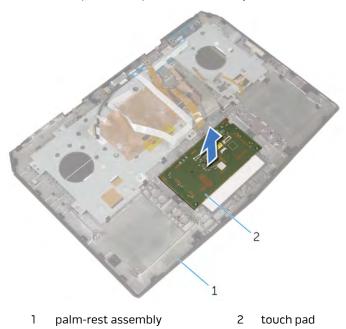

# Replacing the touch pad



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Using the alignment posts on the palm-rest assembly, place the touch pad on the palm-rest assembly.
- 2 Align the screw holes on the touch-pad bracket with the screw holes on the palm-rest assembly and snap the touch-pad bracket into place.
- **3** Replace the screws that secure the touch-pad bracket to the palm-rest assembly.
- **4** Adhere the touch-pad cable to the touch pad.
- 5 Slide the touch-pad cable and touch-pad buttons cable into the touch pad and press down on the latches to secure the cables.

# Post-requisites

- 1 Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- 2 Replace the solid-state drives.
- **3** Replace the <u>memory modules</u>.
- 4 Replace the base panel.

# Removing the keyboard




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the <u>memory modules</u>.
- **3** Remove the solid-state drives.
- **4** Follow the procedure from step 1 to step 11 in "Removing the palm rest".


#### **Procedure**

1 Lift the latches and disconnect the touch-pad cable and the status-light cable from the power-button board. 2 Note the touch-pad cable and status-light cable routings and peel off the cables from the keyboard bracket.

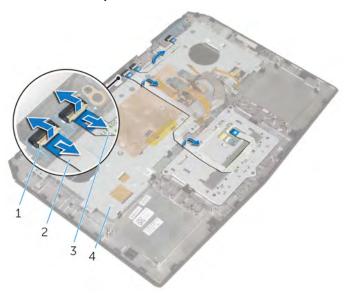


- 1 latches (2)
- 3 status-light cable
- 2 touch-pad cable
- 4 keyboard bracket

Remove the screws that secure the keyboard bracket to the palm-rest assembly.

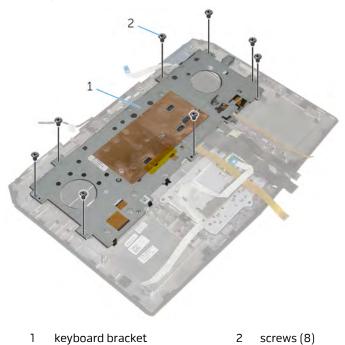

**4** Lift the keyboard bracket at an angle and remove it from the tabs on the palm-rest assembly.

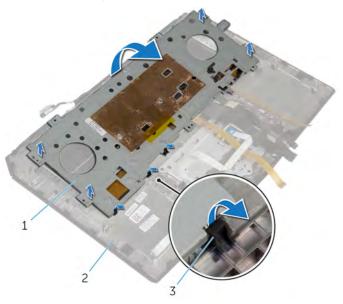


1 keyboard bracket


2 palm-rest assembly

3 tabs (3)

**5** Remove the screws that secure the keyboard to the palm-rest assembly.

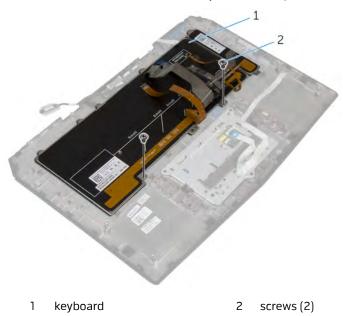

**6** Lift the keyboard at an angle and remove it from the tabs on the palm-rest assembly.

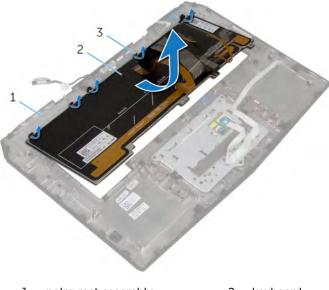

- 1 palm-rest assembly
- 2 keyboard

3 tabs (5)

# Replacing the keyboard



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**



CAUTION: Make sure that no cables are under the keyboard.

- 1 Slide the keyboard under the tabs on the palm-rest assembly.
- 2 Align the screw holes on the keyboard with the screw holes on the palmrest assembly.
- **3** Replace the screws that secure the keyboard to the palm-rest assembly.
- **4** Align the screw holes on the keyboard bracket with the screw holes on the palm-rest assembly and snap the keyboard bracket into place.
- 5 Replace the screws that secure the keyboard bracket to the palm-rest assembly.
- **6** Adhere the touch-pad cable and status-light cable to the keyboard bracket.
- 7 Slide the touch-pad cable and the status-light cable into the power-button board and press down on the latches to secure the cables.

# Post-requisites

- 1 Follow the procedure from step 5 to step 12 in "Replacing the palm rest".
- 2 Replace the solid-state drives.
- **3** Replace the <u>memory modules</u>.
- 4 Replace the base panel.

# Removing the power-button board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Follow the procedure from step 1 to step 12 in "Removing the palm rest".

#### **Procedure**

1 Lift the latches and disconnect the touch-pad cable and status-light cable from the power-button board. 2 Disconnect the power-button board cable from the power-button board.




- 1 power-button board cable
- 2 latches (2)

3 touch-pad cable

- 4 status-light cable
- **3** Remove the screws that secure the power-button board to the palm-rest assembly.

Lift the power-button board off the palm-rest assembly.

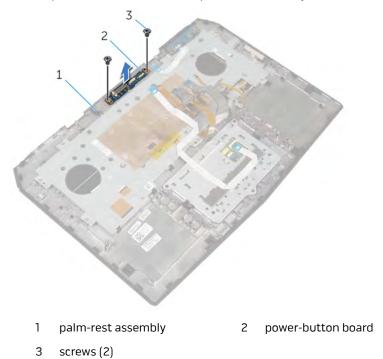

# Replacing the power-button board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the power-button board with the screw holes on the palm-rest assembly.
- 2 Replace the screws that secure the power-button board to the palm-rest assembly.
- **3** Slide the touch-pad cable and status-light cable into the power-button board and press down on the latches to secure the cables.
- **4** Connect the power-button board cable to the power-button board.

## Post-requisites

- 1 Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- **2** Replace the <u>solid-state drives</u>.
- **3** Replace the <u>memory modules</u>.
- 4 Replace the base panel.

# Removing the status-light board




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the base panel.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Follow the procedure from step 1 to step 12 in "Removing the palm rest".


### **Procedure**

1 Lift the latch and disconnect the status-light board cable from the status-light board.

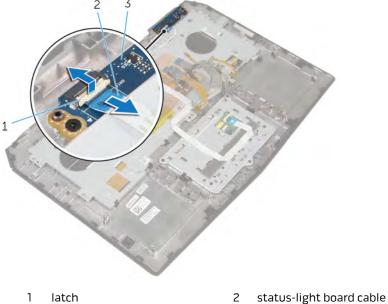

- 3 status-light board
- 2 Remove the screws that secure the status-light board to the palm-rest assembly.

Lift the status-light board off the palm-rest assembly.

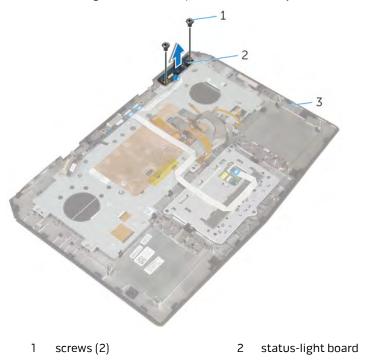

palm-rest assembly

# Replacing the status-light board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### Procedure

- 1 Align the screw holes on the status-light board with the screw holes on the palm-rest assembly.
- 2 Replace the screws that secure the status-light board to the palm-rest assembly.
- 3 Slide the status-light board cable into the status-light board and press down on the latch to secure the cable.

## Post-requisites

- 1 Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- 2 Replace the solid-state drives.
- **3** Replace the <u>memory modules</u>.
- 4 Replace the <u>base panel</u>.

# Removing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- **2** Remove the <u>memory module</u>.
- 3 Remove the solid-state drives.
- **4** Follow the procedure from step 1 to step 11 in "Removing the palm rest".

#### **Procedure**

- 1 Lift the latch and disconnect the I/O-board cable from the I/O board.
- 2 Remove the screws that secure the I/O-board to the computer base.

### **3** Lift the I/O board off the computer base.



- 1 screws (2)
- 3 computer base
- 5 I/O-board cable

- 2 I/O board
- 4 latch

# Replacing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the I/O board with the screw holes on the computer base.
- 2 Replace the screws that secure the I/O board to the computer base.
- 3 Slide the I/O-board cable into the I/O board and press down on the latch to secure the cable.

## Post-requisites

- 1 Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- 2 Replace the solid-state drives.
- 3 Replace the memory module.
- 4 Replace the base panel.

# Removing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the <u>memory modules</u>.
- 3 Remove the solid-state drives.
- **4** Follow the procedure from step 1 to step 11 in "Removing the palm rest".

#### **Procedure**

- 1 Disconnect the speaker cable from the system board.
- 2 Peel of the tape and disconnect the front AlienFX LED cable from the system board.

3 Note the front AlienFX LED cable routing and peel off the cable from the battery.



1 speaker cable

- 2 tape
- 3 front AlienFX LED cable
- 4 speakers (2)
- 4 Remove the speaker cable from the routing guides on the battery and computer base.

**5** Lift the speakers along with its cable off the computer base.



- 1 routing guides (6)
- 3 battery
- 5 speakers (2)

- 2 speaker cable
- 4 computer base

# Replacing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Using the alignment posts, place the speakers on the computer base.
- 2 Route the speaker cable through the routing guides on the battery and computer base.
- **3** Adhere the front AlienFX LED cable to the battery.
- **4** Connect the front AlienFX LED cable to the system board and secure it with the tape.
- **5** Connect the speaker cable to the system board.

## Post-requisites

- 1 Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- **2** Replace the <u>solid-state drives</u>.
- **3** Replace the <u>memory modules</u>.
- 4 Replace the base panel.

# Removing the front AlienFX LED boards



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the base panel.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Follow the procedure from step 1 to step 11 in "Removing the palm rest".

#### **Procedure**

- Remove the screws that secure the front AlienFX LED boards to the computer base.
- 2 Lift the front AlienFX LED boards and disconnect the front AlienFX LED board cables from the front AlienFX LED boards.
- **3** Remove the screws that secure the front AlienFX LED boards to the tubes.

#### **4** Lift the front AlienFX LED boards of the tubes.



- 1 front AlienFX LED board cables (2)
- 2 screws (4)
- 3 front AlienFX LED boards (2) 4
- 4 tubes (2)

5 computer base

# Replacing the front AlienFX LED board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the front AlienFX LED boards with the screw holes on the tubes.
- 2 Replace the screws that secure the front AlienFX LED boards to the tubes.
- 3 Connect the front AlienFX LED board cables to the front AlienFX LED boards.
- **4** Align the screw holes on the front AlienFX LED boards with the screw holes on the computer base.
- **5** Replace the screws that secure the front AlienFX LED board to the computer base.

- 1 Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- 2 Replace the solid-state drives.
- 3 Replace the memory modules.
- 4 Replace the base panel.

# Removing the hinge covers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- **2** Remove the <u>memory modules</u>.
- 3 Remove the solid-state drives.
- **4** Follow the procedure from step 1 to step 11 in "Removing the palm rest".

#### **Procedure**

- 1 Remove the screws that secure the hinge covers to the computer base.
- 2 Open the display as far as possible.

#### Remove the hinge covers from the computer base. 3

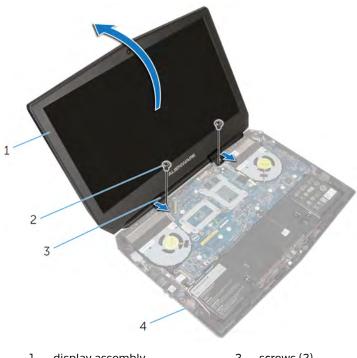

1 display assembly 2 screws (2)

3 hinge covers (2) 4 computer base

# Replacing the hinge covers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the hinge covers with the screw holes on the computer base and snap the hinge covers into place.
- **2** Replace the screws that secure the hinge covers to the computer base.

- 1 Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- 2 Replace the solid-state drives.
- 3 Replace the memory modules.
- 4 Replace the <u>base panel</u>.

# Removing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the base panel.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the palm rest".
- 6 Remove the hinge covers.

#### **Procedure**

- 1 Close the display and turn the computer over.
- 2 Remove the antenna cables from the routing guide on the computer base.

**3** Remove the screws that secure the display assembly to the computer base.




1 display assembly

2 computer base


- 3 screws (2)
- **4** Turn the computer over and open the display as far as possible.
- **5** Carefully remove the antenna cables through the slot on the computer base.
- **6** Peel off the adhesive tape that secures the antenna cables to the system board.
- 7 Remove the antenna cables from the routing guide on the display hinges.
- 8 Lift the latch and disconnect the display cable from the system board.

Peel off the adhesive tape, disconnect the logo-board cable from the system board, and remove it from the routing guide on the display hinges.

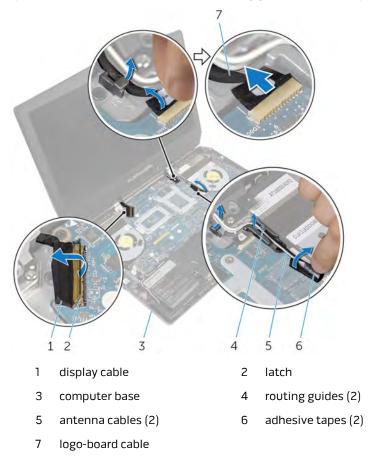

**10** Remove the screws that secure the display assembly to the computer base.

#### 11 Lift the display assembly off the computer base.

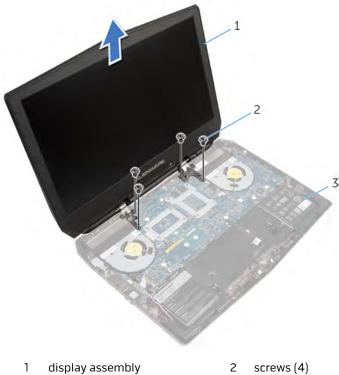

3 computer base

# Replacing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the display hinges with the screw holes on the computer base.
- 2 Replace the screws that secure the display hinges to the computer base.
- **3** Route the logo-board cable through the routing guide on the display hinge.
- **4** Connect the logo-board cable to the system board and secure it with the tape.
- 5 Slide the display cable into the system board and press down on the latch to secure the cable.
- **6** Route the antenna cables through the routing guide on the display hinges.
- 7 Adhere the adhesive tape that secure the antenna cables to the system board.
- 8 Slide the antenna cables through the slot on the computer base.
- **9** Close the display and turn the computer over.
- 10 Route the antenna cables through the routing guide on the computer base.
- 11 Replace the screws that secure the display assembly to the computer base.
- 12 Turn the computer over and open the display as far as possible.

- 1 Replace the hinge covers.
- 2 Follow the procedure from step 5 to step 11 in "Replacing the palm rest".

- **3** Replace the <u>wireless card</u>.
- **4** Replace the <u>solid-state drives</u>.
- **5** Replace the <u>memory modules</u>.
- **6** Replace the <u>base panel</u>.

# Removing the display bezel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- **3** Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.

### **Procedure**

1 Using your fingertips, carefully pry up the inside edges of the display bezel.


2 Carefully lift the display bezel and turn it over.



1 display bezel

**3** Lift the latches and disconnect the display-board cables from the logo board.

**4** Peel off the adhesive tape and disconnect the logo-board cable from the logo board.

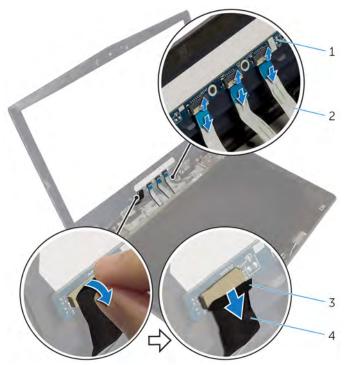

- 1 logo board
- 3 adhesive tape

- 2 display-board cables (3)
- 4 logo-board cable

**5** Follow the procedure from step 1 to step 2 in "Removing the <u>logo board</u>".



1 display bezel

# Replacing the display bezel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Follow the procedure from step 1 to step 2 in "Replacing the <u>logo board</u>".
- 2 Connect the logo-board cable to the logo board and secure it with the adhesive tape.
- 3 Slide the display-board cables into the logo board and press down on the latches to secure the cables.
- 4 Carefully turn the display bezel over.
- **5** Align the display bezel with the display back-cover and gently snap the display bezel into place.

- 1 Replace the display assembly.
- 2 Replace the <u>hinge covers</u>.
- **3** Follow the procedure from step 5 to step 11 in "Replacing the palm rest".
- 4 Replace the wireless card.
- **5** Replace the solid-state drives.
- 6 Replace the memory modules.
- **7** Replace the <u>base panel</u>.

# Removing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.
- **8** Follow the procedure from step 1 to step 4 in "Removing the <u>display bezel</u>".

#### **Procedure**


1 Remove the screws that secure the display panel to the display back-cover.

Gently lift the display panel and turn it over.

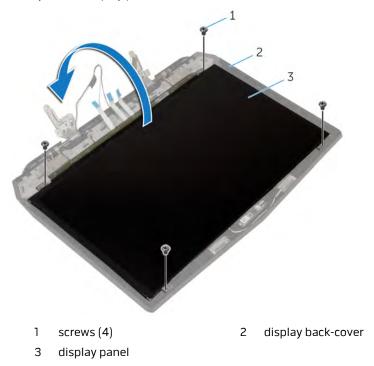

3 Lift the latch and disconnect the display cable from the display panel.

**4** Lift the display panel off the display back-cover.

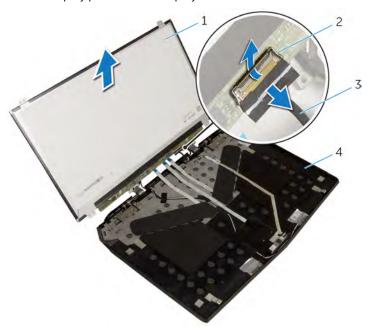

- 1 display panel
- 3 display cable

- 2 latch
- 4 display back-cover

# Replacing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- Slide the display cable into the display panel and press down on the latch to secure the cable.
- 2 Turn the display panel over.
- 3 Align the screw holes on the display panel with the screw holes on the display back-cover.
- **4** Replace the screws that secure the display panel to the display back-cover.

- 1 Follow the procedure from step 2 to step 5 in "Replacing the <u>display bezel</u>".
- 2 Replace the display assembly.
- 3 Replace the hinge covers.
- **4** Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- **5** Replace the <u>wireless card</u>.
- 6 Replace the solid-state drives.
- **7** Replace the memory modules.
- 8 Replace the base panel.

# Removing the display hinges



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.
- **8** Follow the procedure from step 1 to step 4 in "Removing the <u>display bezel</u>".

#### **Procedure**

1 Remove the screws that secure the display hinges to the display backcover.

#### 2 Lift the display hinges off the display assembly.

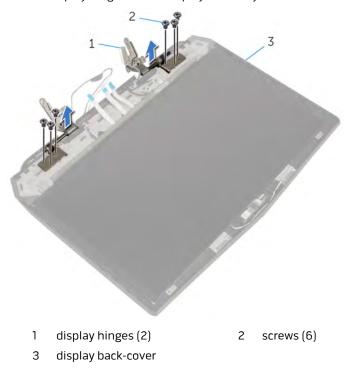

# Replacing the display hinges



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the display hinges with the screw holes on the display back-cover.
- 2 Replace the screws that secure the display hinges to the display backcover.

- 1 Follow the procedure from step 2 to step 5 in "Replacing the <u>display bezel</u>".
- **2** Replace the <u>display assembly</u>.
- **3** Replace the <u>hinge covers</u>.
- **4** Follow the procedure from step 5 to step 11 in "Replacing the palm rest".
- **5** Replace the <u>wireless card</u>.
- 6 Replace the solid-state drives.
- **7** Replace the <u>memory modules</u>.
- **8** Replace the <u>base panel</u>.

# Removing the display backcover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the base panel.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the palm rest".
- 6 Remove the hinge covers.
- **7** Remove the <u>display assembly</u>.
- 8 Follow the procedure from step 1 to step 4 in "Removing the display bezel".
- **9** Remove the <u>display panel</u>.
- 10 Remove the display hinges.
- 11 Remove the camera.

#### **Procedure**

1 Note the display-board cable routing and remove the cable from the routing guides on the display back-cover.

2 Peel off the display board and camera cable from the display back-cover.

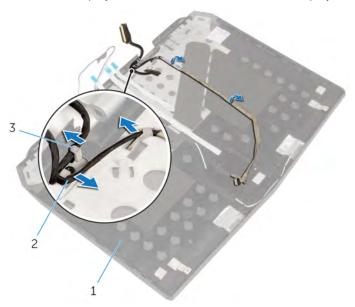

- 1 display back-cover
- 2 display board and camera cable
- 3 routing guides (3)
- **3** Follow the procedure from step 1 to step 4 in "Removing the <u>Alienware AlienHead LED board</u>".

**4** Follow the procedure from step 1 to step 4 in "Removing the <u>display-panel AlienFX LEDs"</u>.



1 display back-cover

# Replacing the display backcover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Place the display back-cover on a clean and flat surface.
- 2 Follow the procedure from step 1 to step 3 in "Replacing the <u>Alienware</u> AlienHead LED board".
- **3** Follow the procedure from step 1 to step 3 in "Replacing the <u>display-panel AlienFX LEDs</u>".
- **4** Adhere the display board and camera cable to the display back-cover.
- **5** Route the display-board cable through the routing guides on the display back-cover.

- **1** Replace the <u>camera</u>.
- 2 Replace the display hinges.
- **3** Replace the display panel.
- 4 Follow the procedure from step 2 to step 5 in "Replacing the display bezel".
- **5** Replace the <u>display assembly</u>.
- 6 Replace the <u>hinge covers</u>.
- 7 Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- 8 Replace the wireless card.
- 9 Replace the solid-state drives.
- 10 Replace the memory modules.
- 11 Replace the base panel.

# Removing the camera




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.
- **8** Follow the procedure from step 1 to step 4 in "Removing the <u>display bezel</u>".
- **9** Remove the display panel.

### **Procedure**


1 Peel off the tape that secures the camera cable to the camera and disconnect the camera cable from the camera module.

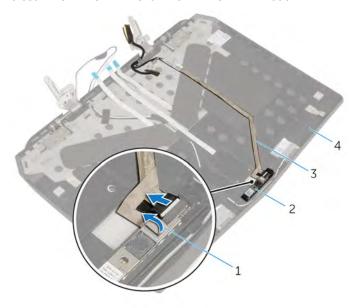

- 1 tape
- 3 camera cable

- 2 camera module
- 4 display back-cover

2 Note the location of the camera module and pry it off the display back-cover using a plastic scribe.

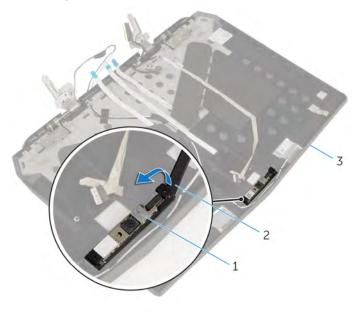

- 1 camera module
- 3 display back-cover
- 2 plastic scribe

# Replacing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- Using the alignment posts, adhere the camera module to the display backcover.
- 2 Connect the camera cable to the camera module and adhere the tape that secures the camera cable to the camera module.

- 1 Replace the <u>display panel</u>.
- **2** Follow the procedure from step 2 to step 5 in "Replacing the <u>display bezel</u>".
- **3** Replace the <u>display assembly</u>.
- 4 Replace the hinge covers.
- **5** Follow the procedure from step 5 to step 11 in "Replacing the palm rest".
- **6** Replace the <u>wireless card</u>.
- **7** Replace the <u>solid-state drives</u>.
- 8 Replace the <u>memory modules</u>.
- **9** Replace the base panel.

# Removing the Alienware AlienHead LED board




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the base panel.
- 2 Remove the memory modules.
- **3** Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the palm rest".
- 6 Remove the hinge covers.
- 7 Remove the display assembly.
- 8 Follow the procedure from step 1 to step 4 in "Removing the display bezel".
- **9** Remove the <u>display</u> panel.
- 10 Follow the procedure from step 1 to step 2 in "Removing the <u>display back-cover</u>".

#### **Procedure**


Peel off the tape that secures the Alienware AlienHead LED board to the display back-cover. 2 Note the Alienware AlienHead LED cable routing and peel off the cable from the display back-cover.

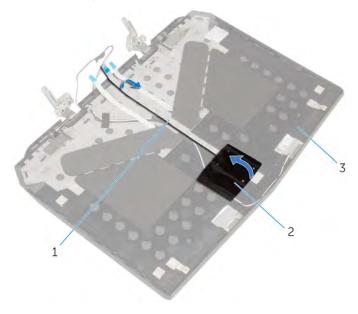

- 1 Alienware AlienHead LED cable
- 2 tape

- 3 display back-cover
- 3 Note the location of the Alienware AlienHead LED board and peel off the Alienware AlienHead LED board from the display back-cover.

**4** Lift Alienware AlienHead LED board along with its cable off the display back-cover.

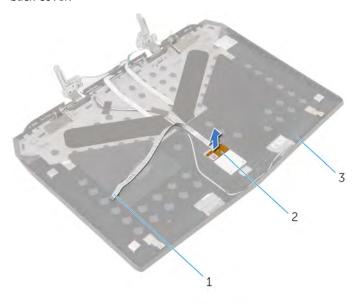

- 1 Alienware AlienHead LED cable
- 3 display back-cover
- 2 Alienware AlienHead LED board

# Replacing the Alienware AlienHead LED board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Adhere the Alienware AlienHead LED board to the display back-cover.
- 2 Route the Alienware AlienHead LED cable on the display back-cover and adhere it to the display back-cover.
- 3 Adhere the tape that secures the Alienware AlienHead LED board to the display back-cover.

- Follow the procedure from step 4 to step 5 in "Replacing the <u>display back-cover</u>".
- 2 Replace the display panel.
- **3** Follow the procedure from step 2 to step 5 in "Replacing the display bezel".
- 4 Replace the display assembly.
- **5** Replace the hinge covers.
- **6** Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- **7** Replace the <u>wireless card</u>.
- 8 Replace the solid-state drives.
- **9** Replace the <u>memory modules</u>.
- 10 Replace the base panel.

# Removing the display-panel AlienFX LEDs




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the base panel.
- 2 Remove the memory modules.
- **3** Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- 7 Remove the display assembly.
- 8 Follow the procedure from step 1 to step 4 in "Removing the display bezel".
- **9** Remove the <u>display panel</u>.
- 10 Follow the procedure from step 1 to step 2 in "Removing the <u>display back-cover</u>".

### **Procedure**


1 Peel off the tapes that secure the display-panel AlienFX LEDs to the display back-cover.

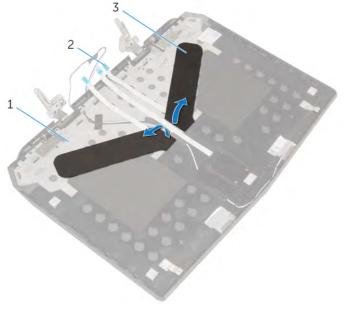

- 1 display back-cover
- 2 display-panel AlienFX LED cables (2)

- 3 tapes (2)
- 2 Note the routing of the display-panel AlienFX LED cables and peel off the cables from the display back-cover.
- **3** Note the location of the display-panel AlienFX LEDs and peel off the LEDs from the display back-cover.

**4** Lift the display-panel AlienFX LEDs along with the cables off the display back-cover.

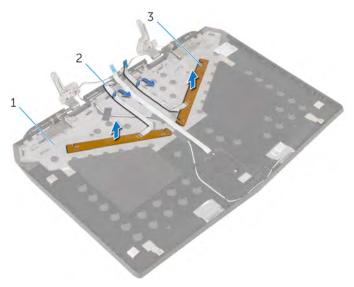

- 1 display back-cover
- 3 display-panel AlienFX LEDs(2)
- 2 display-panel AlienFX LED cables (2)

# Replacing the display-panel AlienFX LEDs



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Adhere the display-panel AlienFX LEDs to the display back-cover.
- 2 Route the display-panel AlienFX LED cables on the display back-cover and adhere the cables to the display back-cover.
- 3 Adhere the tapes that secure the display-panel AlienFX LEDs to the display back-cover.

- Follow the procedure from step 4 to step 5 in "Replacing the <u>display back-cover</u>".
- 2 Replace the display panel.
- **3** Follow the procedure from step 2 to step 5 in "Replacing the <u>display bezel</u>".
- 4 Replace the display assembly.
- **5** Replace the hinge covers.
- 6 Follow the procedure from step 5 to step 11 in "Replacing the palm rest".
- **7** Replace the <u>wireless card</u>.
- 8 Replace the solid-state drives.
- **9** Replace the <u>memory modules</u>.
- 10 Replace the base panel.

# Removing the logo board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.
- **8** Follow the procedure from step 1 to step 4 in "Removing the <u>display bezel</u>".

#### **Procedure**

1 Turn the display bezel over and place it on a clean and flat surface.

2 Note the location of the logo board and pry the logo board off the display bezel using a plastic scribe.

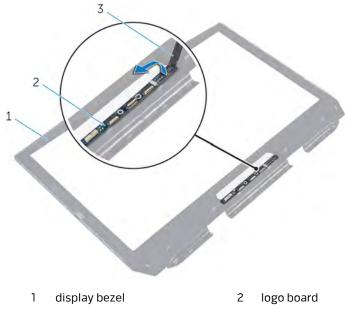

3 plastic scribe

# Replacing the logo board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Adhere the logo board to the display bezel.
- 2 Turn the display bezel over.

- 1 Follow the procedure from step 2 to step 5 in "Replacing the <u>display bezel</u>".
- 2 Replace the display assembly.
- **3** Replace the <u>hinge covers</u>.
- **4** Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- **5** Replace the <u>wireless card</u>.
- 6 Replace the solid-state drives.
- **7** Replace the <u>memory modules</u>.
- 8 Replace the base panel.

# Removing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.



**NOTE:** Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect them correctly after you replace the system board.


## **Prerequisites**

- 1 Remove the base panel.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.

#### **Procedure**

- 1 Turn the computer over.
- 2 Disconnect the fan cables and power-adapter port cable from the system hoard.


Using the pull tab, disconnect the hard-drive cable from the system board.

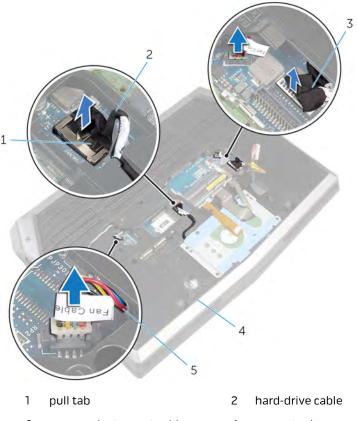

- 3 power-adapter port cable
- 4 computer base

- 5 fan cables (2)
- Turn the computer over.
- Lift the latch and disconnect the I/O-board cable from the system board.
- Disconnect the speaker cable from the system board.

7 Peel the tape and disconnect the front AlienFX LED cable from the system board.

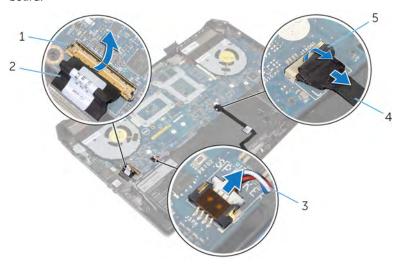

1 latch


2 I/O-board cable

3 speaker cable

4 front AlienFX LED cable

- 5 tape
- **8** Remove the screws that secure the system board to the computer base.
- **9** Lift the system board at an angle and slide the ports on the system board out of the slots on the computer base.

**10** Lift the system board off the computer base.

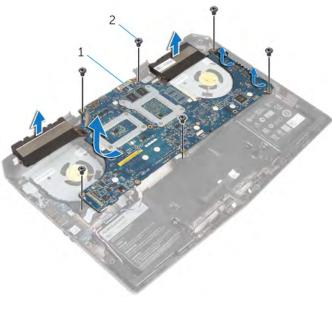

1 system board

- 2 screws (6)
- 11 Turn the system board over.
- **12** Follow the procedure from step 1 to step 2 in "Removing the <u>heat-sink</u> <u>assembly</u>".
- **13** Follow the procedure from step 1 to step 2 in "Removing the <u>coin-cell</u> <u>battery</u>".

# Replacing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.

#### **Procedure**

- Follow the procedure from step 1 to step 2 in "Replacing the <u>coin-cell</u> <u>battery</u>".
- 2 Follow the procedure from step 1 to step 2 in "Replacing the <u>heat-sink</u> <u>assembly</u>".
- 3 Turn the system board over.
- 4 Slide the ports on the system board into the slots on the computer base and align the screw holes on the system board with the screw holes on the computer base.

# CAUTION: Make sure that no cables are under the system board.

- **5** Replace the screws that secure the system board to the computer base.
- **6** Slide the I/O-board cable into the system board and press down on the latch to secure the cable.
- **7** Connect the speaker cable to the system board.
- 8 Connect the front AlienFX LED cable to the system board and secure it with the tape.
- **9** Turn the computer over.
- **10** Connect the fan cables, power-adapter port cable, and hard-drive cable to the system board.

11 Turn the computer over.

- 1 Replace the <u>display assembly</u>.
- 2 Replace the <u>hinge covers</u>.
- **3** Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- 4 Replace the wireless card.
- **5** Replace the solid-state drives.
- 6 Replace the memory modules.
- **7** Replace the <u>base panel</u>.

# Removing the heat-sink assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



WARNING: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.



CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.


## **Prerequisites**

- 1 Remove the base panel.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- **6** Remove the <u>hinge covers</u>.
- **7** Remove the <u>display assembly</u>.
- 8 Follow the procedure from step 1 to step 11 in "Removing the system board".

#### **Procedure**

In sequential order (as indicated on the heat-sink assembly), loosen the captive screws that secure the heat-sink assembly to the system board.

#### 2 Lift the heat-sink assembly off the system board.

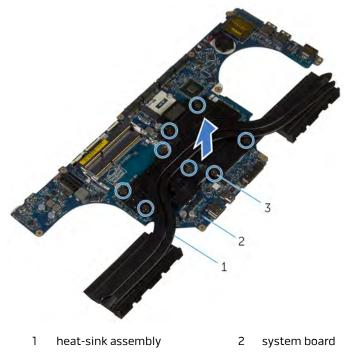

3 captive screws (8)

# Replacing the heat-sink assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Incorrect alignment of the heat sink can cause damage to the system board and processor.

#### **Procedure**

- 1 Align the screw holes on the heat-sink assembly with the screw holes on the system board.
- 2 In sequential order (indicated on the heat-sink assembly), tighten the captive screws that secure the heat-sink assembly to the system board.

- 1 Follow the procedure from step 3 to step 11 in "Replacing the <u>system board</u>".
- **2** Replace the <u>display assembly</u>.
- **3** Replace the <u>hinge covers</u>.
- **4** Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- **5** Replace the <u>wireless card</u>.
- **6** Replace the <u>solid-state drives</u>.
- **7** Replace the <u>memory modules</u>.
- **8** Replace the <u>base panel</u>.

# Removing the fans



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory module.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.
- **8** Follow the procedure from step 1 to step 10 in "Removing the <u>system board</u>".

#### **Procedure**

1 Remove the screws that secure the processor fan and video-card fan to the computer base.

#### 2 Lift the processor fan and video-card fan off the computer base.

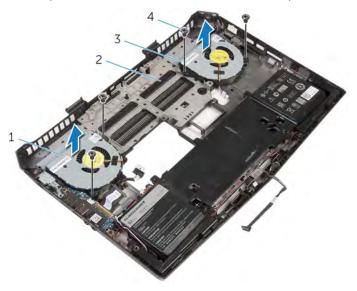

- 1 processor fan
- 3 video-card fan

- 2 computer base
- 4 screws (4)

# Replacing the fans



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the processor fan and video-card fan with the screw holes on the computer base.
- 2 Replace screws that secure the processor fan and video-card fan to the computer base.

- Follow the procedure from step 4 to step 11 in "Replacing the <u>system</u> board".
- 2 Replace the display assembly.
- **3** Replace the hinge covers.
- **4** Follow the procedure from step 5 to step 11 in "Replacing the palm rest".
- **5** Replace the wireless card.
- 6 Replace the solid-state drives.
- **7** Replace the memory module.
- 8 Replace the base panel.

# Removing the poweradapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## Prerequisites

- 1 Remove the base panel.
- 2 Remove the memory modules.
- **3** Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the palm rest".
- 6 Remove the hinge covers.
- **7** Remove the I/O board.
- 8 Remove the display assembly.
- **9** Follow the procedure from step 1 to step 10 in "Removing the <u>system</u> board".

#### **Procedure**

- Remove the screws that secure the power-adapter port bracket to the computer base.
- 2 Lift the power-adapter port bracket off the power-adapter port.
- **3** Note the power-adapter port cable routing and remove the cable from the routing guides on the computer base.

**4** Lift the power-adapter port along with its cable off the computer base.

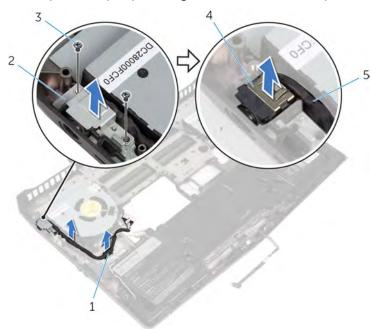

- 1 routing guide
- 3 screws (2)
- 5 power-adapter port cable
- 2 power-adapter port bracket
- 4 power-adapter port

# Replacing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Slide the power-adapter port into the slot on the computer base.
- 2 Align the screw holes on the power-adapter port bracket with the screw holes on the power-adapter port.
- **3** Replace the screws that secure the power-adapter port bracket to the computer base.
- **4** Route the power-adapter port cable through the routing guides on the computer base.

- 1 Follow the procedure from step 4 to step 11 in "Replacing the <u>system</u> board".
- **2** Replace the <u>display assembly</u>.
- **3** Replace the <u>I/O board</u>.
- **4** Replace the <u>hinge covers</u>.
- **5** Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- **6** Replace the <u>wireless card</u>.
- **7** Replace the <u>solid-state drives</u>.
- **8** Replace the <u>memory modules</u>.
- **9** Replace the <u>base panel</u>.

# Removing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Removing the coin-cell battery resets the BIOS settings to default. It is recommended that you note the BIOS settings before removing the coin-cell battery.


## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.
- 8 Follow the procedure from step 1 to step 11 in "Removing the system board".

#### **Procedure**

1 Disconnect the coin-cell battery cable from the system board.

2 Using a plastic scribe, gently pry out the coin-cell battery from the system board.

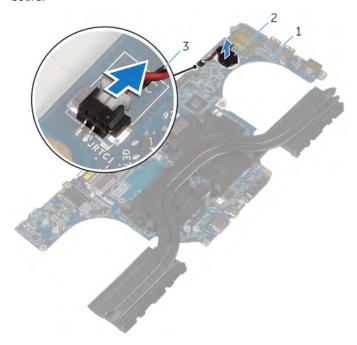

1 system board

- 2 coin-cell battery
- 3 coin-cell battery cable

# Replacing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Adhere the coin-cell battery to the system board.
- **2** Connect the coin-cell battery cable to the system board.

- 1 Follow the procedure from step 3 to step 11 in "Replacing the <u>system</u> <u>board</u>".
- **2** Replace the <u>display assembly</u>.
- 3 Replace the hinge covers.
- 4 Follow the procedure from step 5 to step 11 in "Replacing the palm rest".
- **5** Replace the <u>wireless card</u>.
- 6 Replace the solid-state drives.
- **7** Replace the <u>memory modules</u>.
- 8 Replace the base panel.

# Removing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the <u>base panel</u>.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- 4 Remove the wireless card.
- **5** Follow the procedure from step 1 to step 11 in "Removing the <u>palm rest</u>".
- 6 Remove the hinge covers.
- **7** Remove the display assembly.
- **8** Follow the procedure from step 1 to step 10 in "Removing the <u>system board</u>".

#### **Procedure**


1 Remove the speaker cable from the routing guides on the battery.

2 Note the front AlienFX LED cable routing and peel off the cable from the battery.

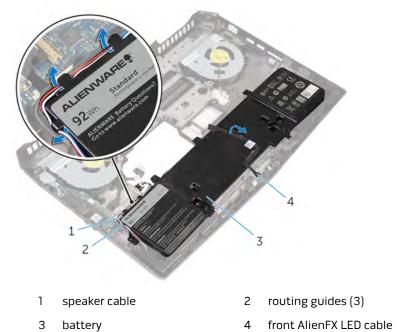

Remove the screws that secure the battery to the computer base.

#### Lift the battery off the computer base.

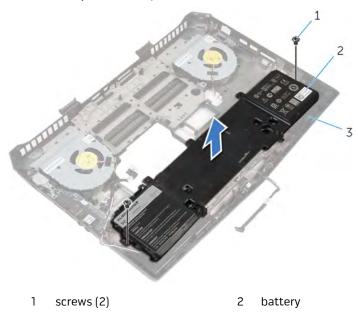

computer base

# Replacing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the battery with the screw holes on the computer base.
- **2** Replace the screws that secure the battery to the computer base.
- **3** Adhere the front AlienFX LED cable to the battery.
- **4** Route the speaker cable through the routing guides on the battery.

- Follow the procedure from step 4 to step 11 in "Replacing the <u>system</u> board".
- 2 Replace the <u>display assembly</u>.
- 3 Replace the <u>hinge covers</u>.
- **4** Follow the procedure from step 5 to step 11 in "Replacing the <u>palm rest</u>".
- **5** Replace the <u>wireless card</u>.
- 6 Replace the solid-state drives.
- **7** Replace the <u>memory modules</u>.
- 8 Replace the base panel.

# Removing the computer base



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## Prerequisites

- 1 Remove the base panel.
- 2 Remove the memory modules.
- 3 Remove the solid-state drives.
- **4** Follow the procedure from step 1 to step 5 in "Removing the hard drive".
- **5** Remove the wireless card.
- 6 Remove the I/O board.
- 7 Follow the procedure from step 1 to step 11 in "Removing the palm rest".
- 8 Remove the hinge covers.
- **9** Remove the speakers.
- 10 Remove the front AlienFX LED boards.
- 11 Remove the display assembly.
- **12** Follow the procedure from step 1 to step 10 in "Removing the <u>system</u> board".
- 13 Remove the fans.
- 14 Remove the battery.
- **15** Remove the <u>power-adapter port</u>.

#### **Procedure**

After performing the prerequisites, we are left with the computer base.



1 computer base

# Replacing the computer base



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

Place the computer base on a flat surface.

- 1 Replace the <u>power-adapter port</u>.
- **2** Replace the <u>battery</u>.
- **3** Replace the fans.
- **4** Follow the procedure from step 4 to step 11 in "Replacing the <u>system board</u>".
- **5** Replace the <u>display assembly</u>.
- 6 Replace the <u>front AlienFX LED board</u>.
- **7** Replace the <u>speakers</u>.
- 8 Replace the hinge covers.
- **9** Follow the procedure from step 5 to step 11 in "Replacing the palm rest".
- 10 Replace the wireless card.
- 11 Replace the <u>I/O board</u>.
- 12 Follow the procedure from step 4 to step 7 in "Replacing the hard drive".
- **13** Replace the solid-state drives.
- **14** Replace the memory modules.
- **15** Replace the <u>base panel</u>.

# **BIOS setup program**

#### Overview



CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS setup program. Certain changes can make your computer work incorrectly.



NOTE: Before you change BIOS setup program, it is recommended that you write down the BIOS setup program screen information for future reference.

Use BIOS setup program to:

- Get information about the hardware installed in your computer, such as the amount of RAM, the size of the hard drive, and so on.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, enabling or disabling base devices, and so on.

## Entering BIOS setup program

- Turn on (or restart) your computer.
- 2 During POST, when the Alienware logo is displayed, watch for the F2 prompt to appear and then press F2 immediately.



**NOTE:** The F2 prompt indicates that the keyboard has initialized. This prompt can appear very quickly, so you must watch for it, and then press F2. If you press F2 before the F2 prompt, this keystroke is lost. If you wait too long and the operating system logo appears, continue to wait until you see the operating system's desktop. Then, turn off your computer and try again.

#### BIOS setup program options



**NOTE:** Depending on your computer and its installed devices, the items listed in this section may or may not appear.

System Time  Displays the current time in hh format.  System Date  Displays the current date in mr yyyy format.  BIOS Version  Displays the BIOS version.  Product Name  Displays the model number of y computer.  Service Tag  Displays the service tag of your computer.  Asset Tag  Displays the asset tag of your computer.  CPU Type  Displays the processor type.	
format.  System Date  Displays the current date in mryyyy format.  BIOS Version  Displays the BIOS version.  Product Name  Displays the model number of y computer.  Service Tag  Displays the service tag of your computer.  Asset Tag  Displays the asset tag of your computer.	
yyyy format.  BIOS Version Displays the BIOS version.  Product Name Displays the model number of y computer.  Service Tag Displays the service tag of your computer.  Asset Tag Displays the asset tag of your computer.	:mm:ss
Product Name  Displays the model number of y computer.  Service Tag  Displays the service tag of your computer.  Asset Tag  Displays the asset tag of your computer.	m/dd/
Computer.  Service Tag  Displays the service tag of your computer.  Asset Tag  Displays the asset tag of your computer.	
Asset Tag Displays the asset tag of your computer.	your
computer.	r
CPU Type Displays the processor type.	
CPU Speed Displays the processor speed.	
CPU ID Displays the processor identific code.	cation
L1 Cache Displays the processor L1 cache	e size.
L2 Cache Displays the processor L2 cache	e size.
L3 Cache Displays the processor L3 cache	e size.
Integrated Graphics Displays the integrated graphic	cs.
Discrete Graphics 1 Displays the first discrete graph installed on your computer.	hics
Fixed HDD Displays the type of hard-drive installed.	
Second HDD Displays the type of secondary drive installed.	hard-
Third HDD Displays the type of third hard-installed.	drive
Fourth HDD Displays the type of fourth hard installed.	d-drive
Fifth HDD Displays the type of fifth hard-orinstalled.	drive

Displays the type of AC adapter connected to your computer.

AC Adapter Type

Main	
System Memory	Displays the system memory.
Extended Memory	Displays the extended memory.
Memory Speed	Displays the memory speed.
Advanced	
Intel(R) SpeedStep (TM)	Allows you to disable or enable Intel (R) SpeedStep Technology. Default: Enabled
	NOTE: If enabled, the processor clock speed and core voltage are adjusted dynamically based on the processor load.
Virtualization	Allows you to disable or enable the Intel Virtualization technology. Default: Enabled
VT for Direct I/O	Allows you to disable or enable a Virtual Machine Monitor (VMM) to use the additional hardware capabilities provided by Intel(R) Virtualization Technology for Direct I/O.  Default: Enabled
Integrated NIC	Allows you to disable or enable the on- board LAN controller. Default: Enabled
USB Emulation	Allows you to enable or disable the USB emulation feature. This feature defines how the BIOS, in the absence of a USB-aware operating system, handles USB devices. USB emulation is always enabled during POST.  Default: Enabled
	<b>NOTE:</b> You cannot boot any type of USB device (floppy, hard drive, or memory key) when this option is disabled.
USB PowerShare	Allows you to charge USB devices when the computer is turned off or in standby

.

mode.

#### Advanced

Default: Enabled

USB Wake Support Allows you to enable USB devices to

wake the computer from standby or to disable the USB wake support feature.

Default: Disabled



**NOTE:** If USB PowerShare is enabled, a device connected to the USB PowerShare connector may

not wake the computer.

SATA Operation Allows you to configure the operating

mode of the integrated SATA hard-drive

controller. Default: AHCI

Adapter Warnings Allows you to choose if the computer

should display warning messages when you use AC adapters that are not

supported by your computer.

Default: Enabled

Function Key Behavior Allows you to set function key or

multimedia key as the default function

key behavior.

Default: Function key

Express Charge Allows you to charge your computer

battery using Standard Charge or

Express Charge mode.
Default: Express Charge

Touchpad Backlight Allows you to set the touch pad

backlight to be on or in auto mode.

Battery Health Displays the battery health.

#### Advanced-Miscellaneous Devices

External USB Ports Allows you to disable or enable the

external USB ports.

Default: Enabled

USB debug Allows you to enable or disable USB

port for Windows debugging.

Default: Disabled

# Advanced-Performance options with Alienware Graphics Amplifier

Overclocking Feature Allows you to enable or disable global

overclocking feature.

Default: Disabled

Ø

**NOTE**: The following features are

available only when the Overclocking Feature is enabled.

Non-Turbo Flex Support Allows you to enable or disable non-

turbo flex support. Default: Enabled

Flex Ratio Override Allows you to set the flex ratio

override value.

Override Turbo Settings Allows you to enable or disable the

override turbo settings.

Default: Enabled

Long Duration PWR Limit Allows you to set the turbo mode long

duration power limit.

Long Duration Time Window Allows you to set the turbo mode time

value in seconds.

Short Duration PWR Limit Allows you to enable or disable short

duration power limit.

Default: Enabled

Short Duration PWR Limit Options Allows you to set the turbo mode

power limit value in watts.

**Bus Clock** 

Current Frequency Displays the current bus clock

frequency.

New Frequency in 10 KHz

increments

Allows you to set the bus clock frequency in increments of 10 KHz.

Apply New Bus Clock Frequency Applies the new bus clock frequency

immediately, temporarily, or

permanently.

Intel Graphics Turbo Overclocking Allows you to disable or enable the

Intel Graphics Turbo Overclocking

feature.

Advanced-Performance options with Alienware Graphics Amplifier		
Memory Override Support	Allows you to enable or disable the memory override option support. Default: Disabled	
Security		
Unlock Setup Status	Displays if the setup status is unlocked. Default: Unblocked.	
Admin Password Status	Displays if the administrator password is clear or set. Default: Not set	
System password Status	Displays if the system password is clear or set. Default: Not set	
HDD password Status	Displays if the hard drive password is clear or set.  Default: Not set	
	<b>NOTE:</b> The password is set for all the installed hard drives on your computer.	
Service Tag	Displays the Service Tag of the computer when the Service Tag is present. Displays a field to input the Service Tag manually when the Service Tag is absent.	
	<b>NOTE:</b> The Service Tag option is available only when the Service Tag is not set.	
Admin Password	Allows you to set the administrator password. The administrator password controls access to the BIOS setup program utility.	
System Password	Allows you to set the system password. The system password controls access to the computer at boot.	

Security	
HDD password	Allows you to set, change, or delete the hard-drives password.
Password Change	Allows you to permit or deny system password or HDD password changes. Default: Permitted
Exit	
Save Changes and Reset	Allows you to exit BIOS setup program and save your changes.
Discard Changes and Reset	Allows you to exit BIOS setup program and load previous values for all BIOS setup program options.
Restore Defaults	Allows you to restore default values for all BIOS setup program options.
Discard Changes	Allows you to load previous values for all BIOS setup program options.
Save Changes	Allows you to save the changes for all BIOS setup program options.

## **Boot sequence**

This feature allows you to change the sequence of devices that your computer attempts to boot from. If the computer cannot boot from the device you select, it attempts to boot from the next bootable device. You can use this feature to change the:

- Current Boot Sequence change the boot sequence for the current boot, for example, to boot from the optical drive to run Alienware Diagnostics from the Drivers and Utilities disc or to reinstall your operating system using an external media. The previous boot sequence is restored at the next boot.
- Future Boot Sequence change the boot sequence for all future boots, for example, to boot from the primary hard drive.

#### **Boot options**



**NOTE:** The following boot options are available only when the Boot List Option is set to Legacy.

**Floppy (Diskette Drive)** — The computer attempts to boot from the floppy disk drive. If no operating system is on the drive, the computer generates an error message.

**Hard Drive** — The computer attempts to boot from the primary hard drive. If no operating system is on the drive, the computer generates an error message.

**CD/DVD/CD-RW Drive** — The computer attempts to boot from the optical drive. If no disc is in the drive, or if the disc is not bootable, the computer generates an error message.

**USB Storage Device** — Insert the memory device into a USB connector and restart the computer. When F12 Boot Options appear in the lower-right corner of the screen, press F12. The BIOS detects the device and adds the USB flash option to the boot menu.



**NOTE:** To boot to a USB device, the device must be bootable. To ensure that your device is bootable, check the device documentation.

**Network** — The computer attempts to boot from the network. If no operating system is found on the network, the computer generates an error message.

#### Changing boot sequence for the current boot

- If you are booting from a USB device, connect the USB device to a USB port. 1
- 2 Turn on (or restart) your computer.
- 3 When **F2 Setup**, **F12 Boot Options** appear in the lower-right corner of the screen, press F12.



**NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft Windows desktop. Then, shut down your computer and try again.

The **Boot Options** appears, listing all available boot devices.

On the **Boot Options**, select the device you want to boot from and press Enter.

For example, if you are booting to a USB hard drive, highlight **USB Hard Disk** and press Enter.

### Changing boot sequence for future boots

1 Enter BIOS setup program. See "Entering BIOS setup program".

- 2 Use the arrow keys to highlight the **Boot** menu option and press Enter to access the menu.
  - **NOTE:** Note your current boot sequence in case you want to restore it.
- 3 Navigate to **Set Boot Priority** to configure the boot priority.
- **4** Use the arrow keys to highlight the boot priority and press Enter to display the different devices.
- **5** Select the device and press Enter to set the boot priority.

# Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board. To flash the BIOS:

- 1 Turn on the computer.
- 2 Go to dell.com/support.
- 3 Click Product Support, enter the Service Tag of your laptop and click Submit.
  - **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click Drivers & downloads.
- 5 Scroll down to **Or, show me all available drivers for ...** and select **BIOS** from the **Category** drop-down list.
  - **NOTE:** In the **Change OS** drop-down list, select the operating system installed on your computer.
- **6** Expand **BIOS** to view the available BIOS files.
- 7 Click **Download File** to download the latest version of the BIOS for your computer.
- 8 Save the file and once the download is complete, navigate to the folder where you saved the BIOS update file.
- **9** Double-click the BIOS update file icon and follow the instructions on the screen.

# Getting help and contacting Alienware

## Self-help resources

You can get information and help on Alienware products and services using these online self-help resources:

Self-Help Information	Self-Help Options
Accessing Windows Help	Windows 8.1—Open the Search charm, type Help and Support in the search box and press Enter.
	Windows 7—Click Start $\rightarrow$ Help and Support.
Information about Alienware products and services	See <b>alienware.com</b> .
Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on	See alienware.com/gamingservices.
Videos providing step-by-step instructions to service your computer	see youtube.com/ alienwareservices.

## **Contacting Alienware**

To contact Alienware for sales, technical support, or customer service issues, see **alienware.com**.



**NOTE:** Availability varies by country and product, and some services may not be available in your country.



**NOTE:** If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.



**NOTE:** If you are in the United States, call 1-800-ALIENWARE for help on your Alienware computer.