### Inspiron 24 7000 Series Service Manual



Computer Model: Inspiron 24–7459 Regulatory Model: W07C Regulatory Type: W07C003

### Notes, cautions, and warnings



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© **2016 Dell Inc. All rights reserved**. This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2016 - 03

Rev. A01

### Contents

Before working inside your computer	9
Before you begin	
Safety instructions	
Recommended tools	
After working inside your computer	12
Technical overview	13
Inside view of your computer	
Stand-base components	
Display panel with stand assembly	15
System board components	
Removing the memory module	
Procedure	
Replacing the memory module	
Procedure	
Removing the base cover	21
Procedure	
Replacing the base cover	23
Procedure	
Removing the solid-state drive	24
Prerequisites	
Procedure	24

Replacing the solid-state drive	
Procedure	
Post-requisites	27
Removing the coin-cell battery	
Prerequisites	
Procedure	
Replacing the coin-cell battery	
Procedure	
Post-requisites	
Removing the wireless card	
Prerequisites	
Procedure	
Replacing the wireless card	
Procedure	
Post-requisites	
Removing the computer base	
Prerequisites	
Procedure	
Replacing the computer base	
Procedure	
Post-requisites	
Removing the hard drive	
Prerequisites	
Procedure	

Replacing the hard drive	
Procedure	
Post-requisites	
Removing the speakers	
Prerequisites	
Procedure	
Replacing the speakers	
Procedure	
Post-requisites	44
Removing the USB board	45
Prerequisites	
Procedure	
Replacing the USB board	
Procedure	
Post-requisites	47
•	
Removing the fan	
Removing the fan	<b>48</b> 
Removing the fan Prerequisites	<b>48</b> 48 48
Removing the fan Prerequisites Procedure	<b>48</b> 48 48 50
Removing the fan Prerequisites Procedure Replacing the fan	<b>48</b> 48 48 <b>50</b> 50
Removing the fan Prerequisites Procedure Replacing the fan Procedure	<b>48</b> 48 48 <b>50</b> 50 50
Removing the fan Prerequisites Procedure Replacing the fan Procedure Post-requisites	48 48 48 50 50 50 50
Removing the fan Prerequisites Procedure Replacing the fan Procedure Post-requisites Removing the heat sink	48 48 48 50 50 50 50 50 50

Replacing the heat sink	
Procedure	
Post-requisites	
Removing the system board	
Prerequisites	
Procedure	
Replacing the system board	
Procedure	
Post-requisites	58
Removing the back cover	
Prerequisites	
Procedure	
Replacing the back cover	61
Procedure	
Post-requisites	
Removing the camera	62
Prerequisites	
Procedure for removing the 3D camera	
Procedure for removing the 2D camera	64
Replacing the camera	66
Procedure for replacing the 3D camera	
Procedure for replacing the 2D camera	66
Post-requisites	66
Removing the microphone	67
Prerequisites	
Procedure	67

Replacing the microphone	
Procedure	
Post-requisites	69
Removing the converter board	70
Prerequisites	
Procedure	
Replacing the converter board	72
Procedure	72
Post-requisites	
Removing the power-button module	73
Prerequisites	
Procedure	
Replacing the power-button module	75
Replacing the power-button module Procedure	
	75
Procedure	75 75
Procedure Post-requisites	75 
Procedure Post-requisites Removing the stand assembly	
Procedure Post-requisites Removing the stand assembly Prerequisites Procedure	
Procedure Post-requisites Removing the stand assembly Prerequisites	
Procedure Post-requisites Removing the stand assembly Prerequisites Procedure Replacing the stand assembly	
Procedure Post-requisites  Removing the stand assembly Prerequisites Procedure  Replacing the stand assembly Procedure	
Procedure Post-requisites  Removing the stand assembly Prerequisites Procedure Procedure Procedure Post-requisites	

Replacing the display panel	
Procedure	
Post-requisites	
Removing the control-buttons board	
Prerequisites	
Procedure	
Replacing the control-buttons board	94
Procedure	
Post-requisites	94
Clearing forgotten passwords	95
Clearing CMOS settings	
Flashing the BIOS	99
Getting help and contacting Dell	
Self-help resources	
Contacting Dell	

### Before working inside your computer



**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

### Before you begin

- 1 Save and close all open files and exit all open applications.
- 2 Shut down your computer.
  - Windows 10: Click or tap Start  $\rightarrow \bigcirc$  Power  $\rightarrow$  Shut down.
  - Windows 8.1: On the **Start** screen, click or tap the power icon 0  $\rightarrow$ Shut down.
  - Windows 7: Click or tap Start  $\rightarrow$  Shut down.



**NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.

- 3 Disconnect your computer and all attached devices from their electrical outlets.
- 4 Disconnect all cables such as telephone cables, network cables, and so on, from your computer.
- 5 Disconnect all attached devices and peripherals, such as keyboard, mouse, monitor, and so on, from your computer.
- 6 Remove any media card and optical disc from your computer, if applicable.
- 7 After the computer is unplugged, press and hold the power button for 5 seconds to ground the system board.

#### CAUTION: Place the computer on a flat, soft, and clean surface to avoid scratches on the display.

Place the computer face down. 8

#### Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.



WARNING: Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



WARNING: Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the electrical outlet.



CAUTION: To avoid damaging the computer, ensure that the work surface is flat and clean.




CAUTION: To avoid damaging the components and cards, handle them by their edges, and avoid touching pins and contacts.



 $\Delta$  CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at www.dell.com/regulatory\_compliance.



CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.

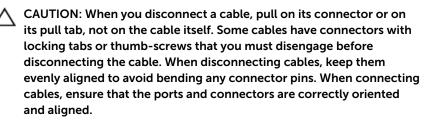



CAUTION: Press and eject any installed card from the media-card reader.

#### **Recommended tools**

The procedures in this document may require the following tools:

Philips screwdriver

- Flat-head screwdriver
- Plastic scribe

# After working inside your computer



### CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.

- 1 Replace all screws and ensure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, or cables you removed before working on your computer.
- **3** Replace any media cards, discs, or any other parts that you removed before working on your computer.
- 4 Connect your computer and all attached devices to their electrical outlets.
- 5 Turn on your computer.


### **Technical overview**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Inside view of your computer


This chapter lists out the components on the computer base and display panel.

#### Stand-base components

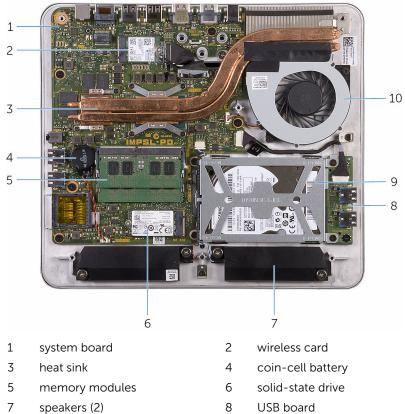

- / speakers (2)
- 9 hard-drive assembly
- 10 fan


#### Display panel with stand assembly

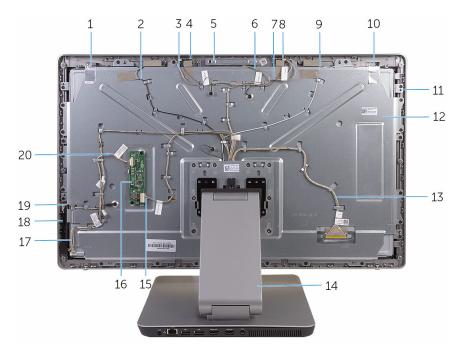

- 1 auxiliary antenna
- 3 right-microphone cable
- 5 camera assembly
- 7 left-microphone cable
- 9 main-antenna cable
- 11 display panel
- 13 display cable
- 15 converter cable
- 17 power-button board cable
- 19 control-buttons board cable

- 2 auxiliary-antenna cable
- 4 right microphone
- 6 camera cable
- 8 left microphone
- 10 main antenna
- 12 middle cover
- 14 stand
- 16 converter board
- 18 control-buttons board
- 20 display-backlight cable

#### System board components

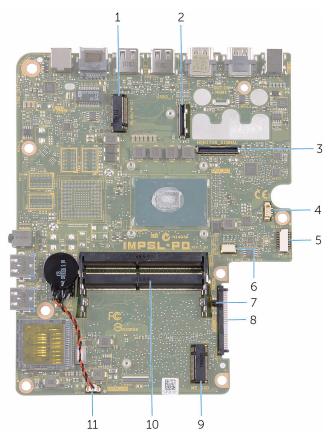

- 1 wireless-card slot
- 3 I/O-cable connector
- 5 USB-board cable connector
- 7 CMOS and password jumpers
- 9 solid-state drive slot
- 11 coin-cell battery cable connector


- 2 display-cable connector
- 4 fan-cable connector
- 6 speaker-cable connector
- 8 hard-drive connector
- 10 memory-module slots (2)

### Removing the memory module

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure


- 1 Loosen the captive screw that secures the memory-module cover to the base cover
- 2 Lift and slide the memory-module cover off the base cover.

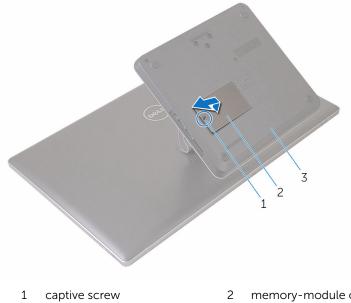

3 base cover

- memory-module cover
- 3 Using your fingertips, spread apart the securing clips at each end of the memory-module slot until the memory module pops up.

4 Remove the memory module from the memory-module slot.

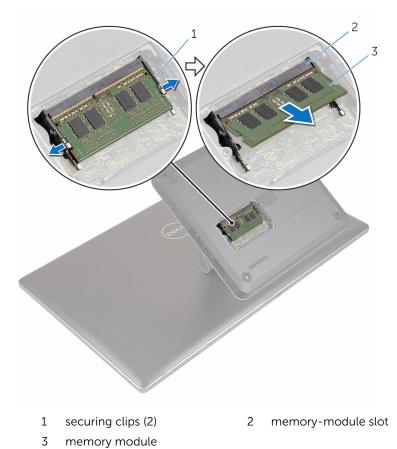

## Replacing the memory module

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.


#### Procedure

**1** Align the notch on the memory module with the tab on the memory-module slot.

2 Insert the memory module into the memory-module slot and press the memory module down until it clicks into place.



**NOTE:** If you do not hear the click, remove the memory module and reinstall it.

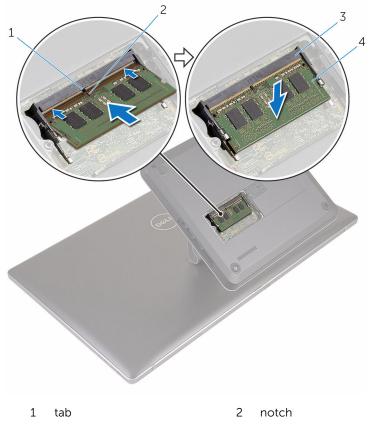

- 3 memory-module slot
- 4 memory module
- 3 Insert the tabs on the memory-module cover into the slots on the base cover and place the memory-module cover on the base cover.
- **4** Tighten the captive screw that secures the memory-module cover to the base cover.

### Removing the base cover

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

1 Remove the screws that secure the base cover to the stand.



2 Using a plastic scribe, pry up the base cover to release the ports on the system board from the slots on the base cover.

**3** Lift the base cover off the computer base.



1 base cover 2 plastic scribe

### Replacing the base cover

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Slide the slots on the base cover into the ports on the system board and snap the base cover into place.
- 2 Replace the screws that secure the base cover to the stand.

## Removing the solid-state drive

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



CAUTION: Solid-state drives are fragile. Exercise care when handling the hard drive.

CAUTION: To avoid data loss, do not remove the solid-state drive while the computer is in sleep or on state.

#### Prerequisites

Remove the base cover.

#### Procedure

1 Remove the screw that secures the solid-state drive to the system board.

2 Slide and remove the solid-state drive from the solid-state drive slot.



1 screw

- 2 solid-state drive
- 3 solid-state drive slot

# Replacing the solid-state drive

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.




CAUTION: Solid-state drives are fragile. Exercise care when handling the hard drive.

#### Procedure

- 1 Align the notch on the solid-state drive with the tab on the solid-state drive slot.
- 2 Slide the solid-state drive at an angle into the solid-state drive slot.

**3** Press the other end of the solid-state drive down and replace the screw that secures the solid-state drive to the system board.

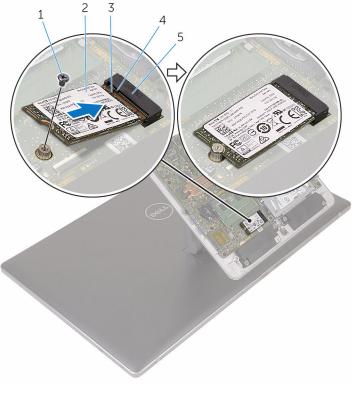

- 1 screw
- 3 notch

- 2 solid-state drive
- 4 tab
- 5 solid-state drive slot

#### **Post-requisites**

Replace the base cover.

# Removing the coin-cell battery

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



CAUTION: Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.


### Prerequisites

Remove the base cover.

#### Procedure

- 1 Disconnect the coin-cell battery cable from the system board.
- 2 Note the cable routing and remove the cable from the routing guide on the system board.

**3** Peel off the coin-cell battery from the system board.

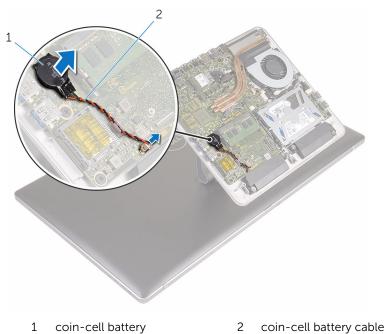

29

## Replacing the coin-cell battery

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Adhere the coin-cell battery to the system board.
- 2 Route the cable through the routing guide on the system board.
- **3** Connect the coin-cell battery cable to the system board.

### **Post-requisites**

Replace the base cover.

### Removing the wireless card

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.


#### Prerequisites

Remove the base cover.

### Procedure

- 1 Remove the screw that secures the wireless card to the system board.
- 2 Slide the wireless-card bracket off the wireless card.
- **3** Disconnect the antenna cables from the wireless card.

4 Slide the wireless card out of the wireless-card slot.

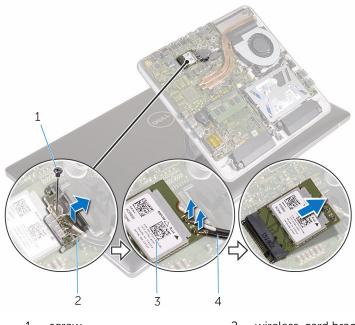

- 1 screw
- 3 wireless card

- 2 wireless-card bracket
- 4 antenna cables (2)

### **Replacing the wireless card**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure



CAUTION: To avoid damaging the wireless card, do not place any cables under it.


- 1 Align the notch on the wireless card with the tab on the wireless-card slot.
- 2 Slide the wireless card into the wireless-card slot.
- **3** Connect the antenna cables to the wireless card.

The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	White
Auxiliary (black triangle)	Black

4 Slide the wireless-card bracket over the wireless card.

**5** Replace the screw that secures the wireless card to the system board.

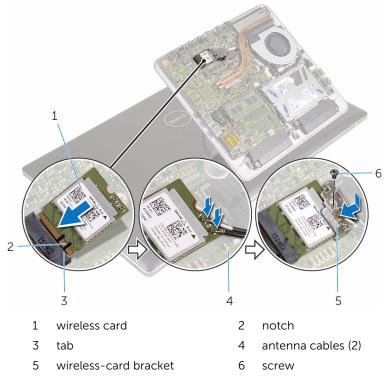

#### **Post-requisites**

Replace the base cover.

### Removing the computer base


WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Prerequisites


- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.

#### Procedure

1 Using the pull-tabs, disconnect the display cable and I/O cable from the system board.

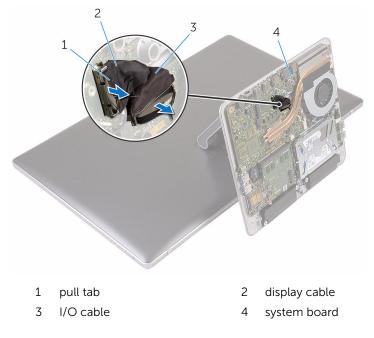

- 2 Remove the screws that secure the computer base to the stand assembly.
- **3** Lift the computer base and slide the display cable, I/O cable, and antenna cables through the slot on the computer base.

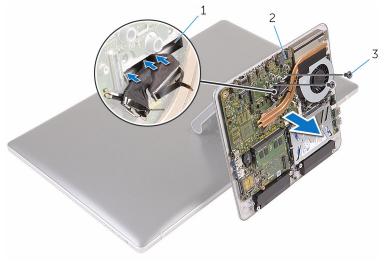

- 1 slot
- 3 screws (2)

2 computer base

# Replacing the computer base

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

### Procedure

- 1 Slide the display cable, I/O cable, and antenna cables through the cable slot on the computer base.
- 2 Place the computer base on the stand assembly and align the screw holes on the computer base with the screw holes on the stand assembly.
- **3** Replace the screws that secure the computer base to the stand assembly.
- 4 Connect the display cable and I/O cable to the system board.

- **1** Replace the <u>wireless card</u>.
- 2 Replace the <u>base cover</u>.

## **Removing the hard drive**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.

Δ

CAUTION: To avoid data loss, do not remove the hard drive while the computer is in sleep or on state.


### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.

#### Procedure


1 Disconnect the speaker cable from the system board.

2 Note the speaker-cable routing and remove the cable from the routing guides on the hard-drive assembly.

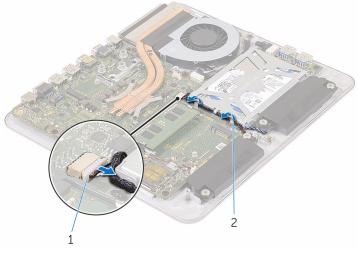

1 speaker cable 2 routing guide


- **3** Remove the screws that secure the hard-drive assembly to the computer base.
- 4 Lift the hard-drive assembly off the computer base.

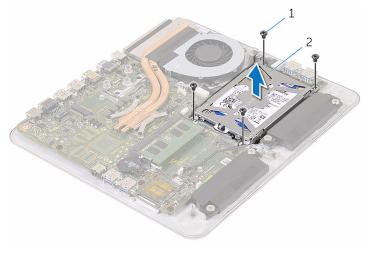

1 screws (4) 2 hard-drive assembly

**5** Remove the screws that secure the hard-drive bracket to the hard drive.

**6** Lift the hard-drive bracket off the hard drive.

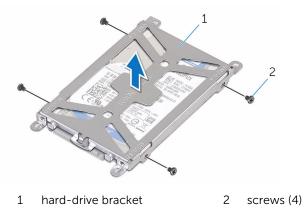

7 Disconnect the interposer from the hard drive.



1 interposer

2 hard drive

# **Replacing the hard drive**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.

### Procedure

- 1 Connect the interposer to the hard drive.
- 2 Place the hard drive in the hard-drive bracket.
- **3** Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.
- 4 Replace the screws that secure the hard-drive bracket to the hard drive.
- 5 Align the connector on the hard drive with the pins on the system board and place the hard drive in the computer base.
- **6** Replace the screws that secure the hard-drive assembly to the computer base.
- 7 Route the speaker cable through the routing guides on the hard-drive assembly.
- 8 Connect the speaker cable to the system board.

- 1 Replace the <u>computer base</u>.
- 2 Replace the <u>wireless card</u>.
- **3** Replace the <u>base cover</u>.

## **Removing the speakers**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.


#### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.

#### Procedure

- 1 Disconnect the speaker cable from the system board.
- 2 Note the speaker cable routing and remove the cable from the routing guides.
- **3** Loosen the screws that secure the speakers to the computer base.

4 Lift the speakers, along with the cable, off the computer base.

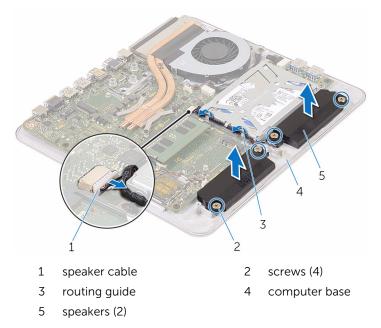

# **Replacing the speakers**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Align the screw holes on the speakers with the screw holes on the computer base.
- 2 Tighten the screws that secure the speakers to the computer base.
- **3** Route the speaker cable through the routing guides.
- 4 Connect the speaker cable to the system board.

- 1 Replace the <u>computer base</u>.
- 2 Replace the <u>wireless card</u>.
- **3** Replace the <u>base cover</u>.

# **Removing the USB board**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.


## Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.
- 4 Follow the procedure from step 1 to step 4 in "<u>Removing the hard drive</u>".

#### Procedure

- **1** Peel off the tape from the USB-board cable.
- 2 Open the routing clip and disconnect the USB-board cable from the USB board.
- **3** Remove the screw that secures the USB board to the computer base.

4 Lift the USB board off the computer base.

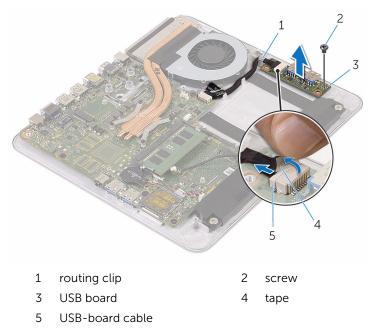

# **Replacing the USB board**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Align the screw hole on the USB board with the screw hole on the computer base.
- 2 Replace the screw that secures the USB board to the computer base.
- **3** Connect the USB-board cable to the USB board.
- **4** Route the USB-board cable through the routing clip on the computer base and close the routing clip.
- **5** Adhere the tape over the USB-board cable.

- 1 Follow the procedure from step 5 to step 8 in "<u>Replacing the hard drive</u>".
- 2 Replace the <u>computer base</u>.
- **3** Replace the <u>wireless card</u>.
- 4 Replace the base cover.

## **Removing the fan**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.

#### Procedure


MARNING: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

**1** Peel off the tape from the heat sink and fan.



1 tape

- 2 Disconnect the fan cable from the system board.
- **3** Remove the screws that secure the fan to the computer base.
- **4** Lift the fan, along with its cable, off the computer base.

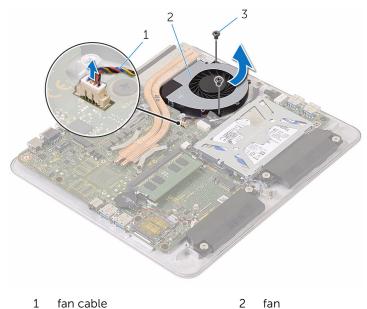

3 screws (2)

# **Replacing the fan**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Align the screw holes on the fan with the screw holes on the computer base.
- 2 Replace the screws that secure the fan to the computer base.
- **3** Connect the fan cable to the system board.
- 4 Adhere the tape over the heat sink and fan.

- 1 Replace the <u>computer base</u>.
- 2 Replace the <u>wireless card</u>.
- **3** Replace the <u>base cover</u>.

## Removing the heat sink

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



WARNING: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.


### Prerequisites

**NOTE:** Depending on the configuration you ordered, the appearance of the heat sink and the number of screws may differ.

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.

## Procedure

**1** Peel off the tape from the heat sink and fan.

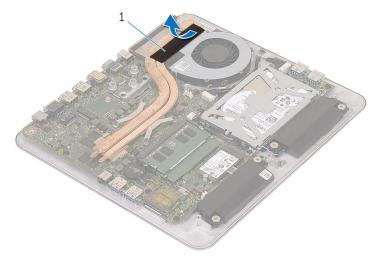

- 1 tape
- 2 In sequential order (indicated on the heat sink), loosen the captive screws that secure the heat sink to the system board.

**3** Lift the heat sink off the system board.



1 captive screws (6) 2 heat sink

# **Replacing the heat sink**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.



**NOTE:** The original thermal grease can be reused if the original system board and heat sink are reinstalled together. If either the system board or the heat sink is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.

## Procedure

- 1 Align the captive screws on the heat sink with the screw holes on the system board.
- 2 In sequential order (indicated on the heat sink), tighten the captive screws that secure the heat sink to the system board.
- **3** Adhere the tape over the heat sink and fan.

- **1** Replace the <u>computer base</u>.
- 2 Replace the <u>wireless card</u>.
- **3** Replace the <u>base cover</u>.

## Removing the system board

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.



**NOTE:** Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.


## Prerequisites

- 1 Remove the <u>memory module</u>.
- 2 Remove the <u>base cover</u>.
- **3** Remove the <u>wireless card</u>.
- 4 Remove the <u>computer base</u>.
- 5 Follow the procedure from step 1 to step 4 in "<u>Removing the hard drive</u>".
- 6 Remove the <u>solid-state drive</u>.
- 7 Remove the <u>heat sink</u>.

## Procedure


- 1 Disconnect the fan cable from the system board.
- **2** Peel off the tape from the USB-board cable.

**3** Disconnect the USB-board cable from the system board.

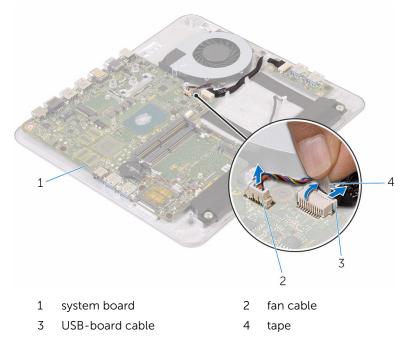

4 Remove the screws that secure the system board to the computer base.

5 Lift the system board out of the computer base.

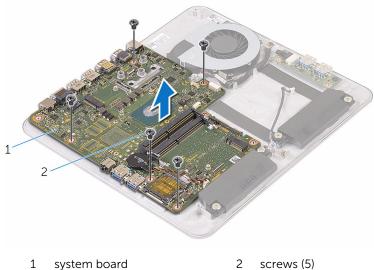

system board 2 screws (5)

# Replacing the system board

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.

## Procedure

- 1 Align the screw holes on the system board with the screw holes on the computer base.
- 2 Replace the screws that secure the system board to the computer base.
- **3** Connect the USB-board cable to the system board.
- 4 Adhere the tape over the USB-board cable.
- **5** Connect the fan cable to the system board.

- 1 Replace the heat sink.
- 2 Replace the <u>solid-state drive</u>.
- **3** Follow the procedure from step 5 to step 8 in "<u>Replacing the hard drive</u>".
- 4 Replace the <u>computer base</u>.
- 5 Replace the <u>wireless card</u>.
- 6 Replace the <u>base cover</u>.
- 7 Replace the <u>memory module</u>.

## Removing the back cover

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.

#### Procedure

1 Starting from the tab at the bottom of the back cover, gently pry up the back cover.

2 Lift the back cover off the display assembly.



# **Replacing the back cover**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Slide the stand through the slot on the back cover and place the back cover over the display assembly.
- 2 Align the slots on the back cover with the tabs on the display bezel and snap the back cover into place.

- 1 Replace the <u>computer base</u>.
- 2 Replace the <u>wireless card</u>.
- **3** Replace the <u>base cover</u>.

## Removing the camera

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Prerequisites

- 1 Remove the base cover.
- 2 Remove the wireless card.
- 3 Remove the computer base.
- 4 Remove the back cover.




NOTE: Depending on the configuration you ordered, the appearance of the camera may differ.

#### Procedure for removing the 3D camera

1 Disconnect the camera cable from the camera. 2 Peel off the foil from the camera assembly.




NOTE: Note the orientation of the camera assembly so that you can replace it correctly.

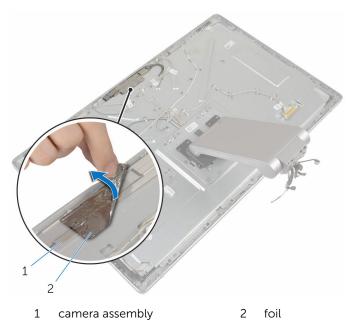

- Remove the screws that secure the camera assembly to the display bezel. 3
- 4 Lift the camera assembly and turn it over.

5 Rotate and remove the camera from the camera bracket.

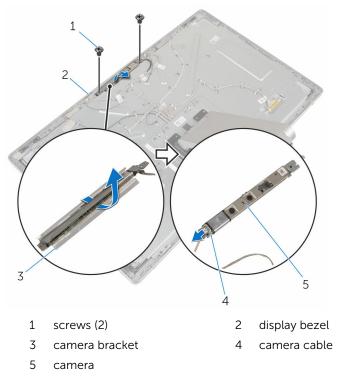


#### Procedure for removing the 2D camera

- **1** Disconnect the camera cable from the camera.
- 2 Remove the screws that secure the camera assembly to the display bezel.
- **3** Carefully lift the camera assembly and turn it over.

Lift the camera off the camera bracket. 4



NOTE: Note the orientation of the camera assembly so that you can replace it correctly.

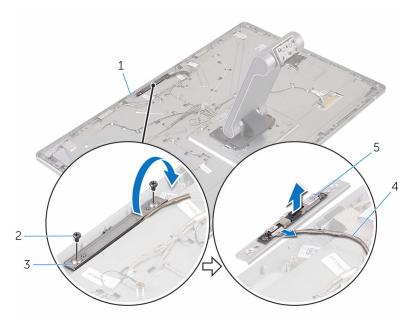

- display bezel 1
- 3 camera bracket
- 5 camera

- 2 screws (2)
- camera cable 4

## **Replacing the camera**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

## Procedure for replacing the 3D camera

- 1 Connect the camera cable to the camera.
- 2 Slide the camera into the camera bracket.
- 3 Align the notch on the camera bracket with the tab on the display bezel.
- 4 Align the screw holes on the camera assembly with the screw holes on the display bezel.
- 5 Replace the screws that secure the camera assembly to the display bezel.
- 6 Adhere the foil over the camera assembly.

## Procedure for replacing the 2D camera

- 1 Connect the camera cable to the camera and turn it over.
- 2 Slide the camera into the camera bracket.
- **3** Align the screw holes on the camera assembly with the screw holes on the display bezel.
- 4 Replace the screws that secure the camera assembly to the display bezel.

- 1 Replace the <u>back cover</u>.
- 2 Replace the <u>computer base</u>.
- **3** Replace the <u>wireless card</u>.
- 4 Replace the <u>base cover</u>.

## **Removing the microphone**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.


### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.
- 4 Remove the back cover.

#### Procedure

- **NOTE:** The left and right microphones cannot be swapped. Note their location so that you can replace them correctly.
- 1 Push the securing tab inward and slide the microphone out of the slot on the display bezel.

2 Disconnect the microphone cable from the microphone.

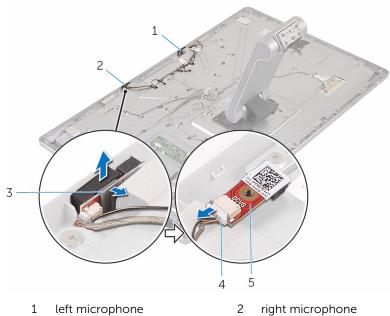

- 3 tabs (2)
- 5 microphone

- right microphone
- 4 microphone cable

# **Replacing the microphone**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

## Procedure

- **1** Connect the microphone cable to the microphone.
- 2 Align the microphone with the slot on the display bezel and slide the microphone into the slot till the securing clip lock in place.

- 1 Replace the back cover.
- 2 Replace the <u>computer base</u>.
- **3** Replace the <u>wireless card</u>.
- 4 Replace the <u>base cover</u>.

## Removing the converter board

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.
- 4 Remove the back cover.


#### Procedure

- 1 Disconnect the converter cable from the converter board.
- 2 Disconnect the display-backlight cable from the converter board.
- **3** Remove the screws that secure the converter board to the middle cover.

Lift the converter board off the middle cover. 4



**NOTE:** Note the orientation of the converter board so that you can replace it correctly.

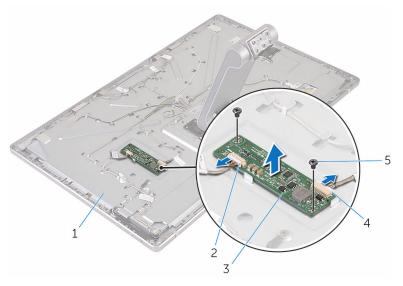

- 1 middle cover
- 3 converter board
- 5 screws (2)

- 2 display-backlight cable
- 4 converter cable

# **Replacing the converter board**

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Align the screw holes on the converter board with the screw holes on the middle cover.
- 2 Replace the screws that secure the converter board to the middle cover.
- **3** Connect the converter cable to the converter board.
- 4 Connect the display-backlight cable to the converter board.

- 1 Replace the <u>back cover</u>.
- 2 Replace the <u>computer base</u>.
- **3** Replace the <u>wireless card</u>.
- 4 Replace the base cover.

# Removing the power-button module




#### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.
- 4 Remove the <u>back cover</u>.

#### Procedure

- 1 Remove the screw that secures the power-button cable to the middle cover.
- 2 Note the power-button cable routing and remove it from the routing guides.
- **3** Disconnect the power-button cable from the control-buttons board cable.
- 4 Peel off the tape that covers the power-button module.

5 Lift the power button off the display bezel.

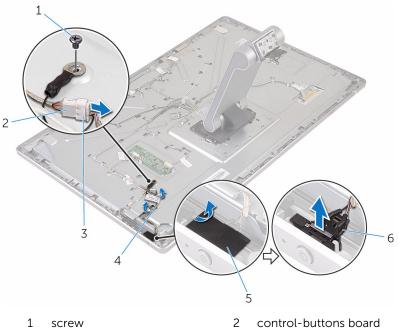

- screw
- 3 power-button cable
- 5 tape

4 routing guides

cable

power-button module 6

# Replacing the power-button module

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Slide the power-button module into the slot on the display bezel.
- 2 Adhere the tape over the power-button module.
- **3** Route the power-button module cable through its routing guide.
- 4 Connect the power-button cable to the control-buttons board cable.
- **5** Replace the screw that secures the power-button cable to the middle cover.

#### **Post-requisites**

- 1 Replace the <u>back cover</u>.
- 2 Replace the <u>computer base</u>.
- **3** Replace the <u>wireless card</u>.
- 4 Replace the base cover.

### Removing the stand assembly

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.


#### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.
- 4 Remove the <u>back cover</u>.
- 5 Remove the <u>camera</u>.
- 6 Remove the <u>microphones</u>.

#### Procedure


- 1 Disconnect the converter-board cable and control-buttons board cable from the converter board.
- **2** Disconnect the power-button cable from the control-buttons board cable.

3 Remove the screws that secure the cables to the middle cover.

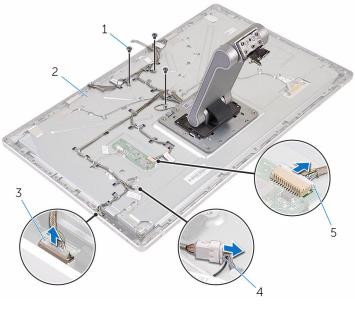


- 1 screws (3)
- 2 middle cover
- 3 control-button board cable
- 4 power-button cable
- 5 converter-board cable
- **4** Press the securing clips and disconnect the display cable from the middle cover.
- **5** Peel off the tapes that secures the cables and padding on the middle cover.
- 6 Peel off the foil that secures the antennas to the middle cover.

7 Peel off the antennas from the middle cover.

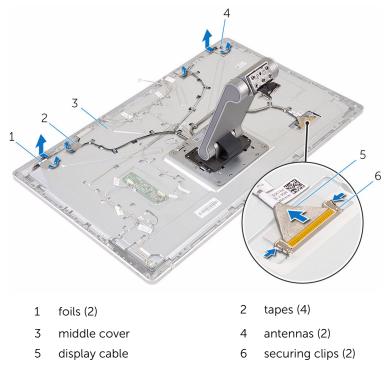

- 8 Remove all the cables from the routing guides.
  - **NOTE:** Note the routing of the cables before you remove them so that you can remove them correctly. For more information on cable routing , see <u>Display panel with stand assembly</u>.
- 9 Remove the screws that secure the stand assembly to the middle cover.


**10** Slide and release the tabs on the stand assembly from the slots on the middle cover and turn the stand assembly over.

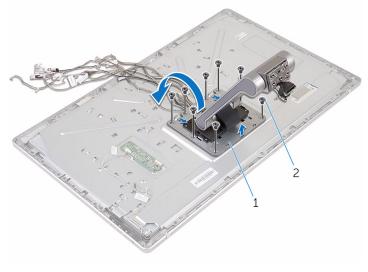

1 stand assembly 2 screws (8)

**11** Peel off the tape that secures the touch screen cable.

**12** Release the touch screen cable from the routing clip on the middle cover.

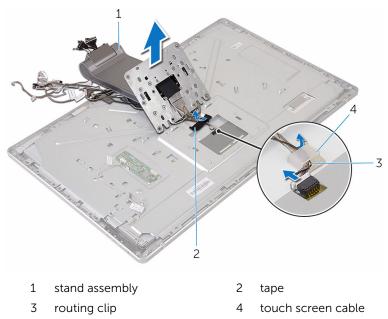

Lift the stand assembly off the middle cover.

## Replacing the stand assembly

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Place the stand assembly on the middle cover.
- 2 Connect the touch screen cable to the middle cover.
- **3** Route the cable through the routing clip.
- 4 Adhere the tape over the touch screen cable.
- **5** Turn the stand assembly over and slide the tabs on the stand assembly into the slots on the middle cover.
- 6 Replace the screws that secure the stand assembly to the middle cover.
- 7 Route all the cables through their routing guides.For more information, see <u>Display panel with stand assembly</u>.
- 8 Replace the screws that secure the cables to the middle cover.
- **9** Align the antenna modules with the alignment posts and adhere them to the middle cover.
- **10** Adhere the tapes that secure the cables to the middle cover.
- **11** Slide the display cable into the display-cable connector slot and connect the display cable to the middle cover.
- 12 Replace the screws that secure the cables to the middle cover.
- **13** Connect the power-button cable and control-buttons board cable to the control-buttons board cable.
- **14** Connect the converter-board cable to the converter board.

#### **Post-requisites**

- 1 Replace the <u>microphones</u>.
- 2 Replace the <u>camera</u>.
- **3** Replace the <u>back cover</u>.

- 4 Replace the <u>computer base</u>.
- **5** Replace the <u>wireless card</u>.
- 6 Replace the <u>base cover</u>.

### Removing the display panel

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.
- 4 Remove the <u>back cover</u>.
- **5** Remove the <u>camera</u>.
- 6 Remove the <u>microphones</u>.
- 7 Remove the <u>stand assembly</u>.

#### Procedure


- **1** Peel off the tape from the power-button module.
- 2 Remove the power-button cable from the routing guides on the middle cover.

**3** Press the securing clips and disconnect the display-backlight cable from the display panel.



4 Remove the screws that secure the middle cover to the display bezel.


**5** Lift the middle cover off the display assembly.

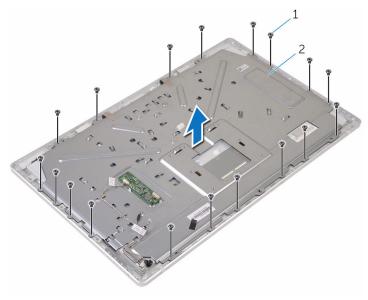


1 screws (18) 2 middle cover

- 6 Remove the screws that secure the display assembly to the display bezel.
- **7** Peel off the tape from the display panel.
- 8 Open the latches and disconnect the cables from the display panel.

**9** Peel off the cable from the display panel.

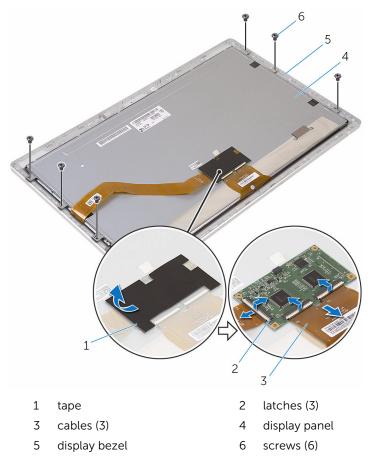


**10** Lift the display-panel assembly off the display bezel and place it on a flat and clean surface.

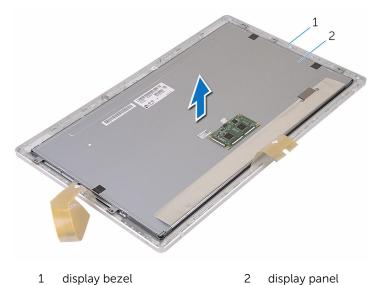

**11** Remove the screws that secure the brackets to the display panel

Remove the brackets from the display panel.

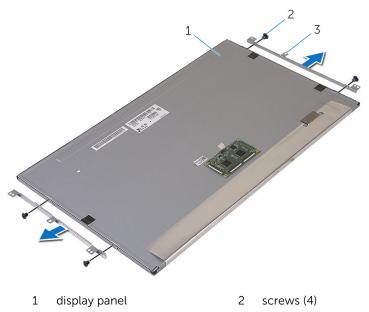

3 brackets (2)

## Replacing the display panel

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### Procedure

- 1 Place the display panel on a flat and clean surface.
- 2 Align the screw holes on the brackets with the screw holes on the display panel.
- 3 Replace the screws that secure the brackets to the display panel.
- 4 Align the screw holes on the brackets with the screw holes on the display bezel and place the display panel on the display bezel.



**NOTE:** Ensure that no cables are placed under the display panel.

- 5 Adhere the cable on the display panel.
- 6 Slide the cables into the connectors on the display panel and close the latches to secure the cables.
- 7 Replace the screws that secure the display assembly to the display bezel.
- 8 Align the screw holes on the middle cover to the screw holes on the display bezel.
- 9 Replace the screws that secure the middle cover to the display bezel.
- **10** Connect the display-backlight cable to the middle cover.
- **11** Connect the power-button cable to the middle cover.
- **12** Adhere the tape to the power-button module.

#### **Post-requisites**

- 1 Replace the stand assembly.
- 2 Replace the microphones.
- 3 Replace the camera.
- 4 Replace the back cover.
- 5 Replace the computer base.

- 6 Replace the <u>wireless card</u>.
- 7 Replace the <u>base cover</u>.

## Removing the control-buttons board




#### Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the <u>wireless card</u>.
- **3** Remove the <u>computer base</u>.
- 4 Remove the <u>back cover</u>.
- 5 Remove the stand assembly.
- 6 Remove the <u>camera</u>.
- 7 Remove the microphones.
- 8 Remove the <u>power-button module</u>.
- 9 Remove the <u>display panel</u>.


#### Procedure

**1** Using a plastic scribe, pry the control-buttons board assembly out of the tabs on the display bezel.

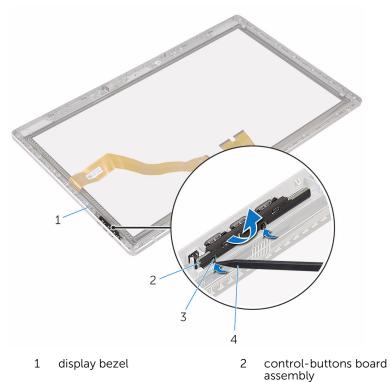

- 3 tabs (2)
- 4 plastic scribe

2 Rotate and release the control-buttons board from the bracket.

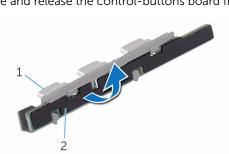

1 bracket

2 control-buttons board

## Replacing the control-buttons board



#### Procedure

- 1 Place the control-buttons board on the buttons bracket.
- 2 Place the control-buttons board assembly into the slot on the display bezel and snap it in place.


#### **Post-requisites**

- **1** Replace the <u>display panel</u>.
- 2 Replace the <u>power-button module</u>.
- **3** Replace the <u>microphones</u>.
- 4 Replace the <u>camera</u>.
- 5 Replace the <u>stand assembly</u>.
- 6 Replace the back cover.
- 7 Replace the <u>computer base</u>.
- 8 Replace the <u>wireless card</u>.
- 9 Replace the <u>base cover</u>.

## **Clearing forgotten passwords**


WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

- 1 Remove the <u>base cover</u>.
- 2 Remove the jumper plug from pins 3 and 4 and replace it on pins 2 and 4.

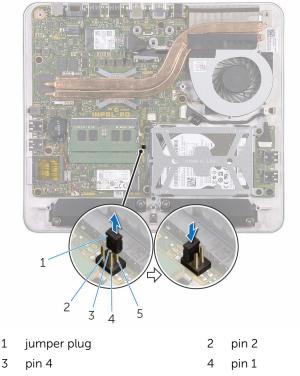

- 5 pin 3
- **3** Replace the <u>base cover</u>.
- **4** Turn on your computer and wait till the operating system is completely loaded.

- **5** Turn off your computer.
- 6 Remove the <u>base cover</u>.
- 7 Remove the jumper plug from pins 2 and 4 and replace it on pins 3 and 4.

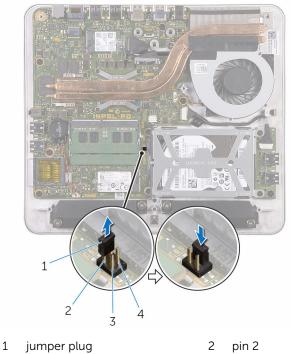


3	pin 1	4	pin 3

8 Replace the <u>base cover</u>.

## **Clearing CMOS settings**


WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before working inside your computer</u>. After working inside your computer, follow the instructions in <u>After working inside your</u> <u>computer</u>. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

- 1 Remove the <u>base cover</u>.
- 2 Remove the jumper plug from pins 3 and 4 and replace it on pins 1 and 3.

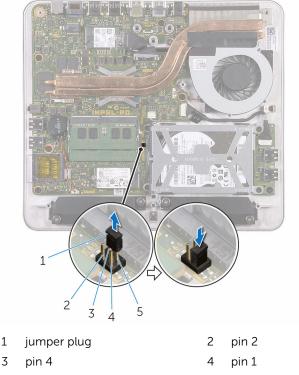

- 5 pin 3
- **3** Replace the <u>base cover</u>.
- 4 Turn on your computer and wait till the operating system is completely loaded.

- **5** Turn off your computer.
- 6 Remove the <u>base cover</u>.
- 7 Remove the jumper plug from pins 1 and 3 and replace it on pins 3 and 4.

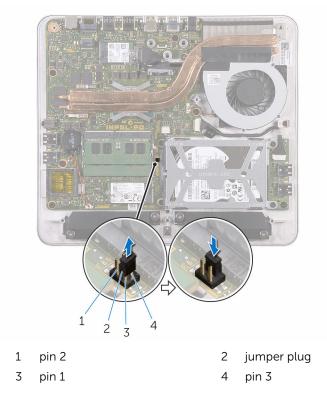

8 Replace the <u>base cover</u>.

## Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board. To flash the BIOS:

- 1 Turn on the computer.
- 2 Go to www.dell.com/support.
- 3 Click or tap **Product support**, enter the Service Tag of your computer, and click Submit.



**NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click or tap Drivers & downloads.
- 5 Select the operating system installed on your computer.
- 6 Scroll down the page and expand **BIOS**.
- 7 Click or tap Download File to download the latest version of the BIOS for your computer.
- 8 After the download is complete, navigate to the folder where you saved the BIOS update file.
- 9 Double-click or double-tap the BIOS update file icon and follow the instructions on the screen

### Getting help and contacting Dell


#### Self-help resources

drivers, software updates, and so on Learn about your operating system,

setting up and using your computer,

data backup, diagnostics, and so on.

You can get information and help on Dell products and services using these self-help resources:

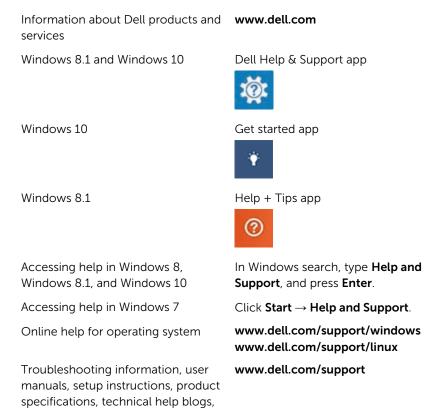

See *Me and My Dell* at www.dell.com/support/manuals.

100

### **Contacting Dell**

To contact Dell for sales, technical support, or customer service issues, see **www.dell.com/contactdell**.



**NOTE:** Availability varies by country and product, and some services may not be available in your country.



**NOTE:** If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.