# Inspiron 13 5000 2-in-1 Service Manual



## Notes, cautions, and warnings



**NOTE**: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2016 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2016-06

Rev. A00

# **Contents**

Before working inside your computer	12
Before you begin	12
Safety instructions	12
Recommended tools	13
Screw list	14
After working inside your computer	15
Removing the base cover	16
Procedure	16
Replacing the base cover	19
Procedure	19
Removing the battery	20
Prerequisites	
Procedure	20
Replacing the battery	22
Procedure	
Post-requisites	22
Removing the memory modules	23
Prerequisites	
Procedure	24
Replacing the memory modules	26
Procedure	
Post-requisites	27

Removing the hard drive	29
Prerequisites	
Procedure	29
Replacing the hard drive	32
Procedure	32
Post-requisites	32
Removing the coin-cell battery	33
Prerequisites	
Procedure	33
Replacing the coin-cell battery	35
Procedure	
Post-requisites	35
Removing the wireless card	36
Prerequisites	36
Procedure	36
Replacing the wireless card	38
Procedure	38
Post-requisites	39
Removing the keyboard daughter-board	d 40
Prerequisites	40
Procedure	40
Replacing the keyboard daughter-board	I42
Procedure	
Post-requisites	42

Removing the speakers	43
Prerequisites	
Procedure	43
Replacing the speakers	45
Procedure	45
Post-requisites	45
Removing the fan	46
Prerequisites	46
Procedure	46
Replacing the fan	48
Procedure	48
Post-requisites	48
Removing the heat sink	49
Prerequisites	
Procedure	49
Replacing the heat sink	51
Procedure	
Post-requisites	51
Removing the power and volume-buttons board	52
Prerequisites	
Procedure	52
Replacing the power and volume-buttons board	54
Procedure	
Post-requisites	54

Removing the status-light board	55
Prerequisites	
Procedure	55
Replacing the status-light board	58
Procedure	
Post-requisites	58
Removing the touch pad	59
Prerequisites	
Procedure	59
Replacing the touch pad	63
Procedure	63
Post-requisites	63
Removing the I/O board	64
Prerequisites	64
Procedure	64
Replacing the I/O board	66
Procedure	66
Post-requisites	66
Removing the display assembly	67
Prerequisites	67
Procedure	67
Replacing the display assembly	71
Procedure	71
Post-requisites	71

Removing the power-adapter port	72
Prerequisites	72
Procedure	72
Replacing the power-adapter port	74
Procedure	74
Post-requisites	74
Removing the system board	75
Prerequisites	75
Procedure	75
Replacing the system board	79
Procedure	79
Post-requisites	79
Entering the Service Tag in the BIOS setup program	80
Removing the palm rest and keyboard assembly	81
Prerequisites	81
Procedure	81
Replacing the palm rest and keyboard assembly	83
Procedure	83
Post-requisites	83
Removing the display panel	84
Prerequisites	84
Procedure	84
Replacing the display panel	87
Procedure	87
Post-requisites	87

Removing the display back-cover and antenna	0.0
assemblyPrerequisites	
Procedure	
Replacing the display back-cover and antenna	0.0
assemblyProcedure	
Post-requisites	
Removing the camera	91
Prerequisites	
Procedure	91
Replacing the camera	93
Procedure	93
Post-requisites	93
Removing the display cable	94
Prerequisites	94
Procedure	92
Replacing the display cable	96
Procedure	96
Post-requisites	96
Removing the sensor board	
Prerequisites	97
Procedure	97
Replacing the sensor board	99
Procedure	99
Post-requisites	99

shing the BIOS	100
chnology and components	101
Audio	
Downloading the audio driver	101
Identifying the audio controller	101
Changing the audio settings	102
Camera	102
Identifying the webcam in device manager	102
Starting the camera application	102
Getting the Dell Webcam Central	103
Display	104
Adjusting the brightness	104
Changing the screen resolution	104
Rotating the display	105
Cleaning the display	106
HDMI	106
Connecting to external display devices	106
Graphics	108
Downloading the graphics driver	
Identifying the display adapter	
Changing the display settings in Intel HD Graphics Control Panel	
Intel WiDi	
Downloading the WiDi application	110
Setting up the wireless display	
USB	
Downloading the USB 3.0 driver	111
Enabling or disabling the USB in BIOS setup program	
Fixing a no-boot issue caused by USB emulation	
Wi-Fi	
Turning on or off Wi-Fi	
Downloading the Wi-Fi driver	

Configuring Wi-Fi	113
Bluetooth	113
Turning on or off Bluetooth	114
Pairing the Bluetooth-enabled devices	114
Removing the Bluetooth device	115
Transferring files between devices using Bluetooth	115
Hard drive	116
Identifying the hard drive	116
Identifying the hard drive in BIOS setup program	117
Media-card reader	117
Browsing a media card	117
Downloading the media-card reader driver	117
Keyboard	118
Changing the keyboard language	118
Keyboard shortcuts	118
Touch pad	119
Identifying the touch pad	120
Touch pad gestures	120
Power adapter	120
Battery	121
Chipset	121
Downloading the chipset driver	121
Identifying the chipset	122
Memory	123
Checking the system memory in Windows	123
Verifying the system memory in BIOS setup program	123
Testing memory using ePSA	123
Processors	123
Identifying the processors in Windows	124
Checking the processor usage in the task manager	124
Operating System	124
Service Tag location	125
Device drivers	125
Intel Dynamic Platform and Thermal Framework	125

Intel Chipset Software Installation Utility	125
Intel HD Graphics driver	
Intel Serial IO Driver	126
Intel Trusted Execution Engine Interface	128
Intel Virtual Button driver	129
Intel Wireless 3165 WiFi and Bluetooth drivers	130
BIOS overview	131
Entering the BIOS setup program	131
Boot menu	131
Boot menu enhancements	131
Timing key sequences	131
System diagnostic lights	132
Getting help and contacting Dell	134
Self-help resources	134
Contacting Dell	135

# Before working inside your computer



NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

### Before you begin

- Save and close all open files and exit all open applications.
- 2 Shut down your computer.

The shut-down instruction varies depending on the operating system installed on your computer.

- Windows 10: Click or tap Start → **②** Power → Shut down.
- Windows 8.1: On the **Start** screen, click or tap the power icon  $\bullet$   $\to$ Shut down
- Windows 7: Click or tap Start → Shut down.



NOTE: If you are using a different operating system, see the documentation of your operating system for shut-down instructions.

- 3 Disconnect your computer and all attached devices from their electrical outlets.
- 4 Disconnect all cables such as telephone cables and network cables, from your computer.
- 5 Disconnect all attached devices and peripherals, such as keyboard, mouse, and monitor, from your computer.
- 6 Remove any media card and optical disc from your computer, if applicable.

## Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.



WARNING: Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory compliance.



WARNING: Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the electrical outlet.



CAUTION: To avoid damaging the computer, ensure that the work surface is flat and clean.



CAUTION: To avoid damaging the components and cards, handle them by their edges, and avoid touching pins and contacts.



↑ CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at www.dell.com/regulatory\_compliance.



CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.



CAUTION: When you disconnect a cable, pull on its connector or on its pull tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, ensure that the ports and connectors are correctly oriented and aligned.



CAUTION: Press and eject any installed card from the media-card reader.

#### Recommended tools

The procedures in this document may require the following tools:

Phillips screwdriver

#### • Plastic scribe

## **Screw list**

The following table provides the list of screws that are used for securing different components to the computer.

Component	Secured to	Screw type	Quantity
Base cover	Palm-rest assembly	M2.5x6	9
Battery	Palm-rest assembly	M2x3.0	4
Hard-drive assembly	Palm-rest assembly	M2x3.5	2
Hard-drive bracket	Hard drive	M3x3	4
Wireless card bracket	Palm-rest assembly	M2x3.5	1
Fan	Palm-rest assembly	M2x3.5	2
Power and volume-buttons board	Palm-rest assembly	M2x3.5	1
Touch-pad bracket	Palm-rest assembly	M2x2	4
Touch pad	Palm-rest assembly	M2x2.5	4
I/O board	Palm-rest assembly	M2x3.5	2
Display assembly	Palm-rest assembly	M2.5x2.5	4
Power adapter port	Palm-rest assembly	M2x3.5	1
System board	Palm-rest assembly	M2x2 Big Head	3
Sensor board	Display panel	M2.5x2.5	1

# After working inside your computer

### Δ

CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.

- 1 Replace all screws and ensure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, or cables you removed before working on your computer.
- 3 Replace any media cards, discs, or any other parts that you removed before working on your computer.
- 4 Connect your computer and all attached devices to their electrical outlets.
- **5** Turn on your computer.

# Removing the base cover




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

#### **Procedure**

1 Close the display and turn the computer over.

**2** Remove the screws that secure the base cover to the palm-rest assembly.

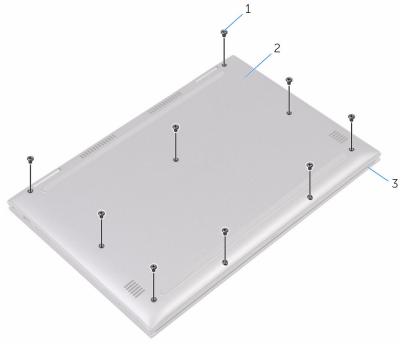

- 1 screws (9)
- 3 palm-rest assembly
- 2 base cover

**3** Using a plastic scribe, release the tabs that secure the base cover to the palm-rest assembly and remove the base cover off the palm-rest assembly.



- 1 plastic scribe
- 3 base cover

2 palm-rest assembly

# Replacing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

#### **Procedure**

- 1 Align the base cover with the palm-rest assembly and snap it into place.
- 2 Replace the screws that secure the base cover to the palm-rest assembly.

# Removing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


## **Prerequisites**

Remove the base cover.

#### **Procedure**

- 1 Disconnect the battery cable from the system board.
- 2 Remove the screws that secure the battery to the palm-rest assembly.

**3** Lift the battery off the palm-rest assembly.

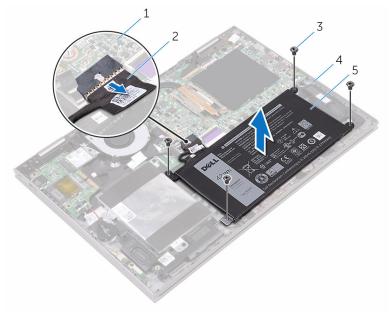

- 1 system board
- 3 screws (4)
- 5 battery

- 2 battery cable
- 4 palm-rest assembly
- **4** Press and hold the power button for five seconds to ground the system board.

# Replacing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

#### **Procedure**

- Align the screw holes on the battery with the screw holes on the palmrest assembly.
- 2 Replace the screws that secure the battery to the palm-rest assembly.
- **3** Connect the battery cable to the system board.

### **Post-requisites**

Replace the base cover.

# Removing the memory modules



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.

#### **Procedure**

1 Lift the Mylar to access the memory module.




1 memory module

2 Mylar

2 Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.

**3** Remove the memory module from the memory-module slot.

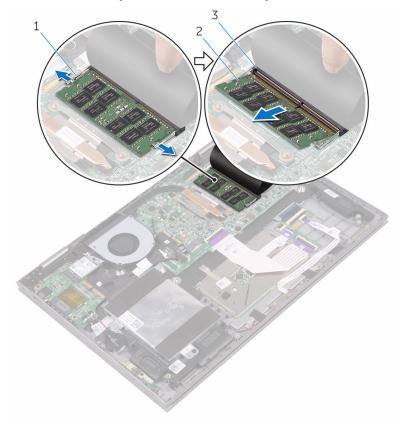

- 1 securing clips (2)
- 3 memory-module slot
- 2 memory module

# Replacing the memory modules




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

#### **Procedure**

- 1 Lift the Mylar to access the memory-module slot.
- 2 Align the notch on the memory module with the tab on the memory-module slot.

- 3 Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.
  - **NOTE:** If you do not hear the click, remove the memory module and reinstall it.

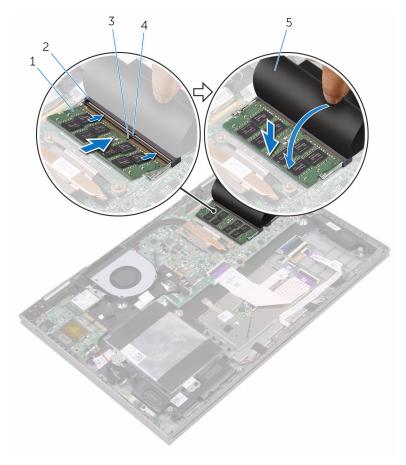

- 1 memory module
- 3 notch
- 5 Mylar

- 2 memory-module slot
- 4 tab

## Post-requisites

1 Replace the <u>battery</u>.

2 Replace the <u>base cover</u>.

# Removing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <a href="Before working">Before working inside your computer</a>. After working inside your computer, follow the instructions in <a href="After working inside your computer">After working inside your computer</a>. For more safety best practices, see the Regulatory <a href="Compliance">Compliance</a> home page at <a href="www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.



CAUTION: To avoid data loss, do not remove the hard drive while the computer is in sleep or on state.


## **Prerequisites**

- **1** Remove the <u>base cover</u>.
- 2 Remove the battery.

#### **Procedure**

- 1 Peel off the tape that secures the hard-drive cable to the palm-rest assembly.
- 2 Using the pull tab, disconnect the hard-drive cable from the system board.
- **3** Remove the screws that secure the hard-drive assembly to the palm-rest assembly.

4 Lift the hard-drive assembly, along with its cable, off the palm-rest assembly.

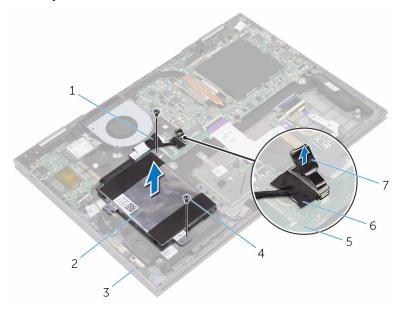

- 1 tape
- 3 palm-rest assembly
- 5 system board
- 7 pull tab


- 2 hard-drive assembly
- 4 screws (2)
- 6 hard-drive cable

5 Disconnect the interposer from the hard-drive assembly.



1 interposer

- 2 hard-drive assembly
- 6 Remove the screws that secure the hard-drive bracket to the hard drive.
- 7 Lift the hard-drive bracket off the hard drive.

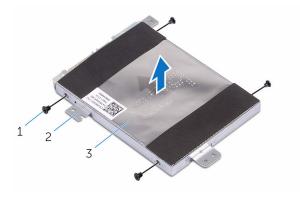

- 1 screws (4)
- 3 hard drive

2 hard-drive bracket

## Replacing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.

#### **Procedure**

- 1 Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.
- 2 Replace the screws that secure the hard-drive bracket to the hard drive.
- **3** Connect the interposer to the hard-drive assembly.
- 4 Align the screw holes on the hard-drive assembly with the screw holes on the palm-rest assembly.
- **5** Replace the screws that secure the hard-drive assembly to the palm-rest assembly.
- **6** Connect the hard-drive cable to the system board.
- 7 Adhere the tape that secures the hard-drive cable to the palm-rest assembly.

## **Post-requisites**

- **1** Replace the <u>battery</u>.
- 2 Replace the base cover.

# Removing the coin-cell battery

Δ

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.



CAUTION: Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.


## **Prerequisites**

- **1** Remove the <u>base cover</u>.
- 2 Remove the battery.

#### **Procedure**

1 Disconnect the coin-cell battery cable from the I/O board.

2 Peel the coin-cell battery off the palm-rest assembly.

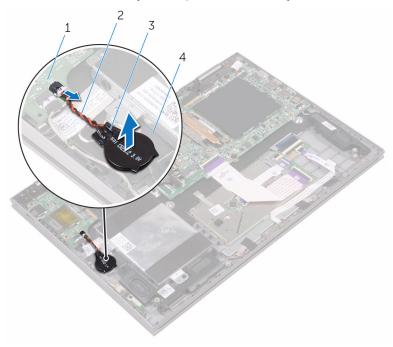

- 1 I/O board
- 3 coin-cell battery

- 2 coin-cell battery cable
- 4 palm-rest assembly

# Replacing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

#### **Procedure**

- 1 Adhere the coin-cell battery to the palm-rest assembly.
- 2 Connect the coin-cell battery cable to the I/O board.

## **Post-requisites**

- 1 Replace the battery.
- 2 Replace the base cover.

# Removing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


### **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.

#### **Procedure**

- 1 Remove the screw that secures the wireless-card bracket to the wireless card.
- **2** Disconnect the antenna cables from the wireless card.

**3** Slide and remove the wireless card from the wireless-card slot.

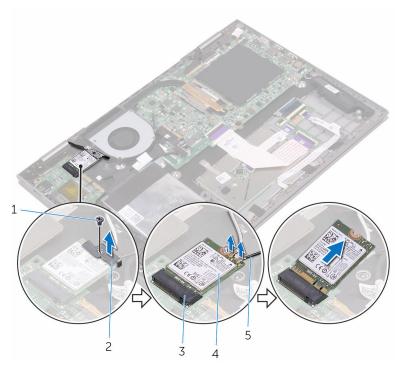

- 1 screw
- 3 wireless-card slot
- 5 antenna cables (2)

- 2 wireless-card bracket
- 4 wireless card

# Replacing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**




CAUTION: To avoid damage to the wireless card, do not place any cables under it.

- Align the notch on the wireless card with the tab on the wireless-card slot.
- 2 Insert the wireless card at an angle into the wireless-card slot.
- 3 Connect the antenna cables to the wireless card.
  The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	White
Auxiliary (black triangle)	Black

**4** Align the screw hole on the wireless card bracket with the screw hole on the wireless card.

**5** Replace the screw that secures the wireless card bracket to the wireless card.

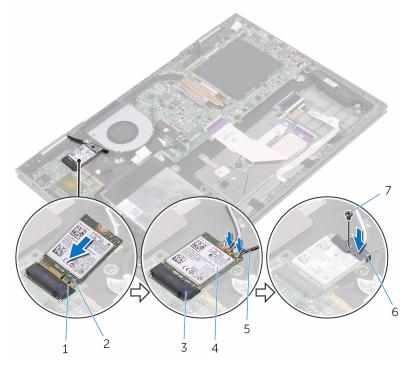

- 1 tab
- 3 wireless-card slot
- 5 antenna cables (2)
- 7 screw

- 2 notch
- 4 wireless card
- 6 wireless card bracket

- 1 Replace the <u>battery</u>.
- 2 Replace the <u>base cover</u>.

# Removing the keyboard daughter-board




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

# **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.

### **Procedure**

1 Open the latches and disconnect the keyboard cable, keyboard daughter-board cable, touch-pad cable, and status-light board-cable from the keyboard daughter-board. **2** Using a plastic scribe, pry the keyboard daughter-board off the palm-rest assembly.

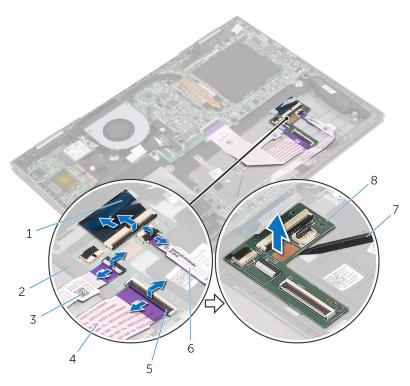

- 1 keyboard cable
- 3 touch-pad cable
- 5 latch
- 7 plastic scribe

- 2 palm-rest assembly
- 4 keyboard daughter-board cable
- 6 status-light board-cable
- 8 keyboard daughter-board

# Replacing the keyboard daughter-board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**

- 1 Adhere the keyboard daughter board on the palm-rest assembly.
- 2 Connect the keyboard cable, keyboard daughter-board cable, touch-pad cable, and status-light board-cable and close the latches to secure the cables.

- 1 Replace the battery.
- 2 Replace the base cover.

# Removing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.


# **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.

### **Procedure**

- 1 Disconnect the speaker cable from the system board.
- Peel off the pieces of tape that secure the speaker cable to the palm-rest assembly.
- **3** Remove the speaker cable from the routing guides on the palm-rest assembly.
- 4 Note the position of the rubber grommets before lifting the speaker.

5 Remove the speakers from the alignment posts and lift the speakers off the palm-rest assembly.

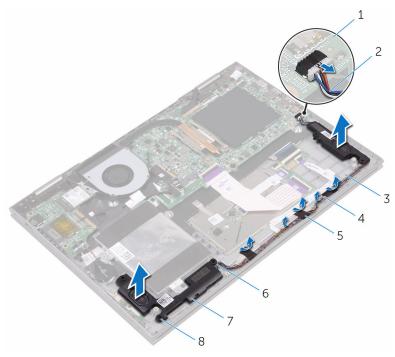

- 1 system board
- 3 palm-rest assembly
- 5 tape (3)
- 7 speakers (2)

- 2 speaker cable
- 4 routing guides
- 6 alignment posts
- 8 rubber grommets (5)

# Replacing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

#### **Procedure**



**NOTE:** The rubber grommets may get pushed out while replacing the speaker. Ensure that the rubber grommets are in their position after placing the speaker on the palm-rest assembly.

- 1 Using the alignment posts, align and place the speakers on the palm-rest assembly.
- 2 Replace the rubber grommets if they are pushed up while replacing the speaker.
- **3** Route the speaker cable through the routing guides on the palm-rest assembly.
- **4** Adhere the pieces of tape that secure the speaker cable to the palm-rest assembly.
- **5** Connect the speaker cable to the system board.

- **1** Replace the <u>battery</u>.
- 2 Replace the base cover.

# Removing the fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.

### **Procedure**

- 1 Remove the screws that secure the fan to the palm-rest assembly.
- 2 Disconnect the fan cable from the system board.

### **3** Lift the fan off the palm-rest assembly.

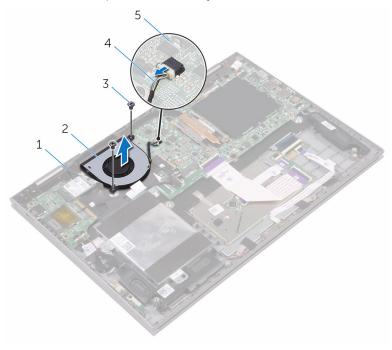

- 1 palm-rest assembly
- 3 screws (2)
- 5 system board

- 2 fan
- 4 fan cable

# Replacing the fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

#### **Procedure**

- 1 Align the screw holes on the fan with the screw holes on the palm-rest assembly.
- 2 Replace the screws that secure the fan to the palm-rest assembly.
- **3** Connect the fan cable to the system board.

- 1 Replace the battery.
- 2 Replace the base cover.

# Removing the heat sink



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



WARNING: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.



CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.


## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.

### **Procedure**

1 In sequential order (as indicated on the heat sink), loosen the captive screws that secure the heat sink to the system board.

### **2** Lift the heat sink off the system board.

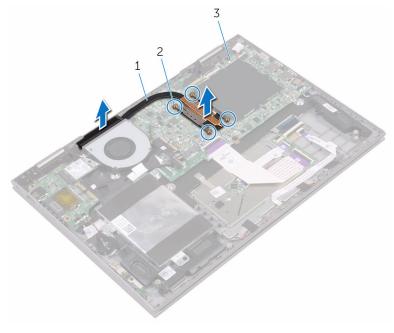

- 1 heat sink
- 3 system board

2 captive screws (4)

# Replacing the heat sink



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.



CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.



**NOTE:** The original thermal grease can be reused if the original system board and heat sink are reinstalled together. If either the system board or the heat sink is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.

### **Procedure**

- Place the heat sink on the system board.
- 2 Align the screw holes on the heat sink with the screw holes on the system board.
- 3 In sequential order (indicated on the heat sink), tighten the captive screws that secure the heat sink to the system board.

- 1 Replace the battery.
- 2 Replace the base cover.

# Removing the power and volume-buttons board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>hard drive</u>.

### **Procedure**

- 1 Peel off the tape that secures the power and volume-buttons board-cable to the palm-rest assembly.
- 2 Disconnect the power and volume-buttons board-cable from the I/O board.
- **3** Remove the power and volume-buttons board-cable from the routing guides on the palm-rest assembly.
- 4 Remove the screw that secures the power and volume-buttons board to the palm-rest assembly.

**5** Lift the power and volume-buttons board off the palm-rest assembly.

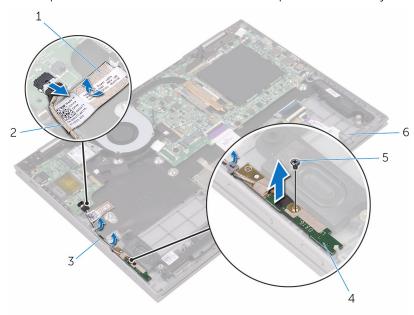

- 1 tape
- 3 routing guides (2)
- 5 screw

- 2 power and volumebuttons board-cable
- 4 power and volumebuttons board
- 6 palm-rest assembly

# Replacing the power and volume-buttons board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**

- Align the screw hole on the power and volume-buttons board with the screw hole on the palm-rest assembly.
- 2 Replace the screw that secures the power and volume-buttons board to the palm-rest assembly.
- **3** Route the power and volume-buttons board-cable through the routing guides on the palm-rest assembly.
- 4 Connect the power and volume-buttons board-cable to the I/O board.
- 5 Adhere the tape that secure the power and volume-buttons board-cable to the palm-rest assembly.

- **1** Replace the <u>hard drive</u>.
- **2** Replace the <u>battery</u>.
- **3** Replace the <u>base cover</u>.

# Removing the status-light board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.

### **Procedure**

- 1 Peel off the pieces of tape securing the speaker cable to the palm-rest assembly.
- 2 Remove the speaker cable from the routing guides on the palm-rest assembly.


**3** Lift the speaker cable off the status-light board.

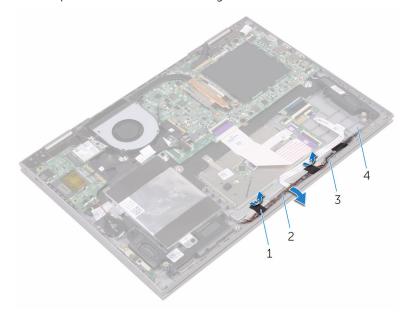

- 1 tape (2)
- 3 routing guides

- 2 speaker cable
- 4 palm-rest assembly
- 4 Open the latch and disconnect the status-light board-cable from the keyboard daughter-board.

**5** Lift the status-light board off the palm-rest assembly.

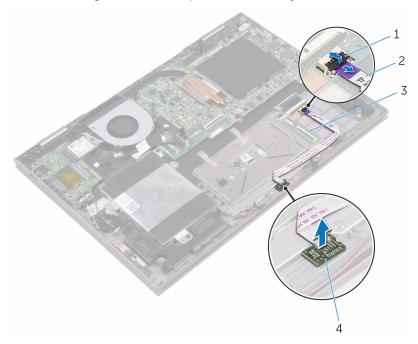

- 1 latch
- 3 keyboard daughter-board
- 2 status-light board-cable
- 4 status-light board

# Replacing the status-light board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**

- 1 Align and place the status-light board in the slot on the palm-rest assembly.
- 2 Slide the status-light board-cable into the connector on the keyboard daughter-board and close the latch to secure the cable.
- 3 Adhere the pieces of tape securing the speaker cable to the palm-rest assembly.

- 1 Replace the battery.
- 2 Replace the base cover.

# Removing the touch pad




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>status-light board</u>.


### **Procedure**

Open the latches and disconnect the keyboard daughter-board cable from the keyboard daughter-board and the system board. 2 Open the latches and disconnect the touch-pad cable from the touch pad and the keyboard daughter-board.

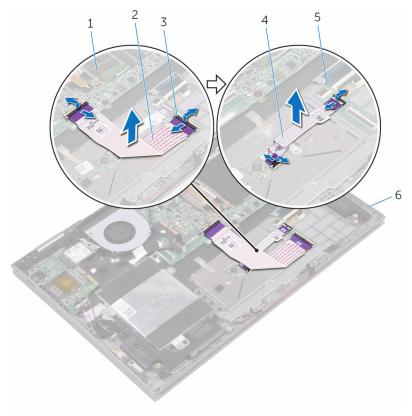

- 1 system board
- 3 latch
- 5 keyboard daughter-board
- 2 keyboard daughter-board cable
- 4 touch-pad cable
- 6 palm-rest assembly
- **3** Peel off the pieces of tape that secure the touch-pad to the palm-rest assembly.
- **4** Remove the screws that secure the touch-pad bracket to the palm-rest assembly.


**5** Lift the touch-pad bracket off the palm-rest assembly.

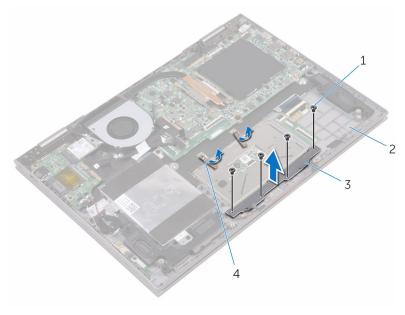

1 screws (4)

- 2 palm-rest assembly
- 3 touch-pad bracket
- 4 tape (2)
- **6** Remove the screws that secure the touch pad to the palm-rest assembly.

### 7 Lift the touch pad off the palm-rest assembly.

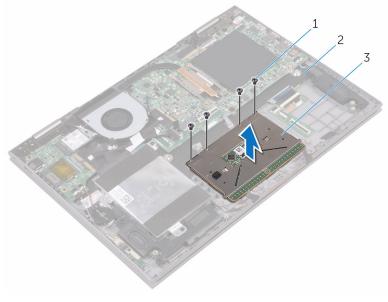

- 1 screws (4)
- 3 touch pad

2 palm-rest assembly

# Replacing the touch pad



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**

- 1 Place the touch pad on the palm-rest assembly.
- 2 Align the screw holes on the touch pad with the screw holes on the palm-rest assembly.
- 3 Replace the screws that secure the touch pad to the palm-rest assembly.
- 4 Align the screw holes on the touch-pad bracket with the screw holes on the palm-rest assembly.
- 5 Replace the screws that secure the touch-pad bracket to the palm-rest assembly.
- **6** Adhere the pieces of tape that secure the touch pad to the palm-rest assembly.
- 7 Slide both ends of the touch-pad cable into their respective connectors on the touch pad and keyboard daughter-board and close the latches to secure the cable.
- **8** Slide the keyboard daughter-board cable into their respective connectors on the system board and keyboard daughter-board and close the latches to secure the cable.

- 1 Replace the status-light board.
- 2 Replace the <u>battery</u>.
- **3** Replace the <u>base cover</u>.

# Removing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


### **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>wireless card</u>.

### **Procedure**

- 1 Peel off the tape that secures the I/O-board cable to the I/O board.
- 2 Disconnect the I/O-board cable from the I/O board.
- 3 Peel off the tape that secures the power and volume-buttons board-cable to the palm-rest assembly.
- 4 Disconnect the power and volume-buttons board-cable from the I/O board.
- 5 Disconnect the coin-cell battery-cable from the I/O board.
- 6 Remove the screws that secure the I/O board to the palm-rest assembly.

### 7 Lift the I/O board off the palm-rest assembly.

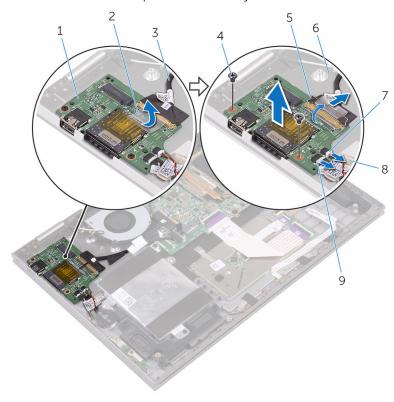

- 1 I/O board
- 3 I/O-board cable
- 5 latch
- 7 coin-cell battery-cable
- 9 power and volume-buttons board-cable
- 2 tape
- 4 screws (2)
- 6 palm-rest assembly
- 8 tape

# Replacing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**

- 1 Place the I/O board on the palm-rest assembly.
- 2 Align the screw hole on the I/O board with the screw hole on the palmrest assembly.
- 3 Replace the screw that secures the I/O board to the palm-rest assembly.
- 4 Connect the power and volume-buttons board-cable and coin-cell battery-cable to the I/O board.
- 5 Connect the I/O-board cable to the I/O board.
- **6** Adhere the tape that secures the power and volume-buttons board-cable to the palm-rest assembly.
- 7 Adhere the tape that secures the I/O-board cable to the I/O board.

- 1 Replace the wireless card.
- 2 Replace the battery.
- **3** Replace the base cover.

# Removing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


# **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>wireless card</u>.

### **Procedure**

1 Peel off the pieces of tape that secure the display cable and touch-screen board-cable to the system board.


2 Open the latches to disconnect the display cable and the touch-screen board-cable from the system board.

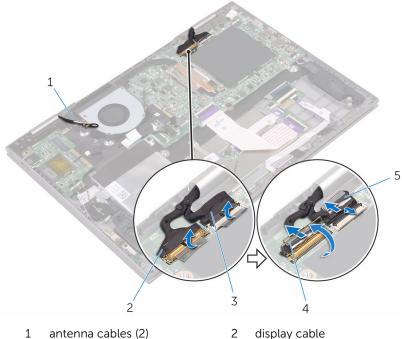

- 1 antenna cables (2)
- 3 touch-screen board-cable
- display cable
- 4 latch

- 5 tape (2)
- 3 Turn the computer over and open the display as far as possible.
  - CAUTION: Place the computer on a soft and clean surface to avoid scratching the display.
- Place the computer face down on a flat surface.

**5** Remove the screws that secure the display assembly to the palm-rest assembly.

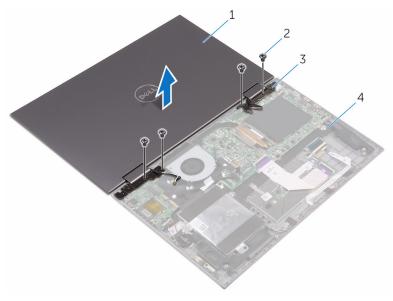

- 1 display assembly
- 3 display hinges (2)

- 2 screws (4)
- 4 palm-rest assembly

Lift the display assembly off the palm-rest assembly.



1 display assembly

# Replacing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

#### **Procedure**



CAUTION: Place the computer on a soft and clean surface to avoid scratching the display.

- 1 Place the display assembly face down on the palm-rest assembly.
- 2 Align the screw holes on the display hinges with the screw holes on the palm-rest assembly.
- **3** Replace the screws that secure the display assembly to the palm-rest assembly.
- 4 Close the display and turn the computer over.
- 5 Slide the display cable and the touch-screen board-cable into their respective connectors on the system board and close the latches to secure the cables.
- **6** Adhere the pieces of tape that secure the display cable and the touch-screen board-cable to their respective connectors on the system board.

- 1 Replace the <u>wireless card</u>.
- 2 Replace the battery.
- **3** Replace the <u>base cover</u>.

# Removing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the wireless card.
- 4 Remove the display assembly.

#### **Procedure**

- 1 Disconnect the power-adapter port-cable from the system board.
- 2 Remove the screw that secures the power-adapter port to the palm-rest assembly.

**3** Lift the power-adapter port off the palm-rest assembly.

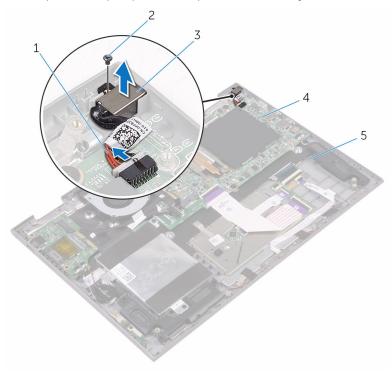

- 1 power-adapter port-cable
- 3 power adapter port
- 5 palm-rest assembly
- 2 screw
- 4 system board

# Replacing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Procedure**

- 1 Place the power-adapter port into the slot on the palm-rest assembly.
- 2 Align the screw hole on the power-adapter port with the screw hole on the palm-rest assembly.
- **3** Replace the screw that secures the power-adapter port to the palm-rest assembly.
- **4** Connect the power-adapter port-cable to the system board.

- 1 Replace the display assembly.
- 2 Replace the wireless card.
- **3** Replace the <u>battery</u>.
- 4 Replace the base cover.

## Removing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.



**NOTE:** Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.


## **Prerequisites**

- 1 Remove the <u>base cover</u>.
- 2 Remove the battery.
- **3** Remove the memory modules.
- 4 Remove the fan.
- **5** Remove the heat sink.

#### **Procedure**

1 Peel off the pieces of tape that secure the display cable and touch-screen board-cable to the system board.


2 Peel off the tape that secures the I/O-board cable to the system board.

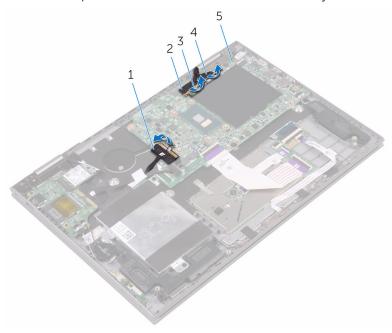

- 1 I/O-board cable
- 3 tape (3)
- 5 system board

- 2 display cable
- 4 touch-screen cable
- **3** Open the latches to disconnect the display cable and the touch-screen board-cable from the system board.
- **4** Open the latch to disconnect the I/O-board cable from the system board.
- **5** Disconnect the power-adapter cable and the speaker cable from the system board.
- **6** Open the latch and disconnect the keyboard daughter-board cable from the system board.

7 Disconnect the hard-drive cable from the system board.

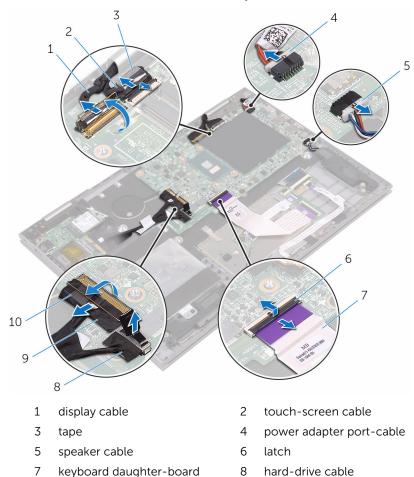


**8** Remove the screws that secure the system board to the palm-rest assembly.

10 tape

cable

I/O-board cable

**9** Lift the system board off the palm-rest assembly.

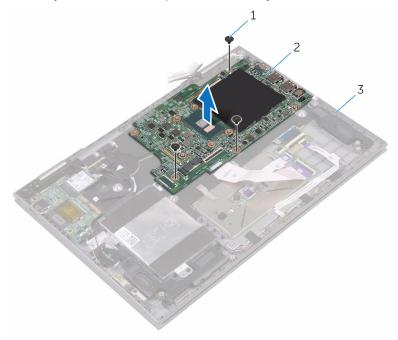

- 1 screw
- 3 palm-rest assembly
- 2 system board

## Replacing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.

#### **Procedure**

- 1 Align the screw holes on the system board with the screw holes on the palm-rest assembly.
- 2 Replace the screw that secures the system board to the palm-rest assembly.
- 3 Slide the I/O-board cable into the system-board connector close the latch to secure the cable.
- 4 Adhere the tape that secures the I/O-board cable to the system board.
- 5 Connect the power-adapter port-cable and the speaker cable to the system board.
- **6** Slide the keyboard daughter-board cable into the connector on the system board and close the latch to secure the cable.
- 7 Connect the hard-drive cable to the system board.
- 8 Slide the display cable and the touch-screen board-cable into their respective connectors and close the latches to secure the cables.
- **9** Adhere the pieces of tape that secure the display cable and touch-screen board-cable to the system board.

## **Post-requisites**

**1** Replace the <u>heat sink</u>.

- 2 Replace the <u>fan</u>.
- **3** Replace the <u>memory modules</u>.
- 4 Replace the battery.
- **5** Replace the <u>base cover</u>.

## **Entering the Service Tag in the BIOS setup program**

- **1** Turn on or restart your computer.
- **2** Press F2 when the Dell logo is displayed to enter the BIOS setup program.
- 3 Navigate to the Main tab and enter the Service Tag in the Service Tag Input field.

# Removing the palm rest and keyboard assembly




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- 3 Remove the memory modules.
- 4 Remove the coin-cell battery.
- 5 Remove the hard drive.
- **6** Remove the wireless card.
- 7 Remove the keyboard daughter-board.
- 8 Remove the touch pad.
- 9 Remove the fan.
- 10 Remove the heat sink.
- 11 Remove the I/O board.
- 12 Remove the power and volume-buttons board.
- **13** Remove the <u>status-light board</u>.
- **14** Remove the <u>speakers</u>.
- 15 Remove the display assembly.
- **16** Remove the power-adapter port.
- 17 Remove the system board.

## **Procedure**

After performing the steps in prerequisites we are left with the palm-rest and keyboard assembly.

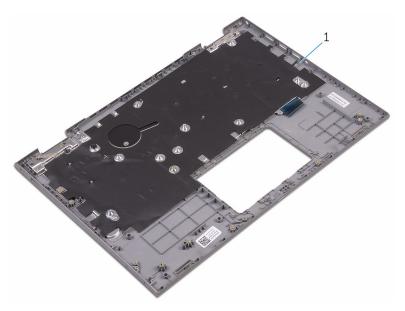

1 palm rest

# Replacing the palm rest and keyboard assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Procedure**

Place the palm-rest and keyboard assembly on a flat surface with the keyboard facing down.

- 1 Replace the system board.
- 2 Replace the <u>power-adapter port</u>.
- **3** Replace the display assembly.
- 4 Replace the speakers.
- 5 Replace the status-light board.
- 6 Replace the <u>power and volume-buttons board</u>.
- 7 Replace the I/O board.
- **8** Replace the heat sink.
- **9** Replace the <u>fan</u>.
- 10 Replace the touch pad.
- 11 Replace the keyboard daughter-board.
- 12 Replace the wireless card.
- 13 Replace the hard drive.
- **14** Replace the coin-cell battery.
- 15 Replace the memory modules.
- 16 Replace the battery.
- **17** Replace the base cover.

## Removing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>display assembly</u>.

## **Procedure**

1 Remove the display cable from the routing guides inside the hinge covers.

2 Using a plastic scribe, pry the display-panel assembly off the display back-cover and antenna assembly.



- 1 plastic scribe
- 3 routing guides
- 5 hinge covers

- 2 display back-cover
- 4 display cable
- 6 display panel
- **3** Turn over the display-panel assembly.
- 4 Remove the <u>camera</u>.

Remove the <u>sensor board</u>.After performing the above steps, we are left with the display panel.



1 display panel

## Replacing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**

- 1 Place the display panel on a flat surface.
- 2 Replace the sensor board.
- **3** Replace the <u>camera</u>.
- 4 Turn over the display-panel assembly.
- 5 Route the display cable through the routing guides inside the hinge covers.
- **6** Align the display-panel assembly with the display back-cover and antenna assembly and gently snap the display-panel assembly into place.

- 1 Replace the display assembly.
- 2 Replace the battery.
- **3** Replace the <u>base cover</u>.

## Removing the display backcover and antenna assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>display assembly</u>.
- 4 Follow the procedure from step 1 to 2 in "Removing the display panel".

## **Procedure**

After performing the steps in prerequisites we are left with the display back-cover and antenna assembly.



display back-cover and antenna 2 antenna cables assembly

## Replacing the display backcover and antenna assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Procedure**

Place the display back-cover and antenna assembly on a flat surface.

- **1** Replace the <u>display panel</u>.
- 2 Replace the display assembly.
- **3** Replace the battery.
- 4 Replace the base cover.

## Removing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>display assembly</u>.
- **4** Follow the procedure from step 1 to step 3 in "Removing the display panel".


## **Procedure**



CAUTION: Place the display-panel assembly on a soft and clean surface to avoid scratching the display.

1 Using a plastic scribe, pry the camera module off the display panel.

2 Turn the camera over and peel off the tape to disconnect the camera cable from the camera module.

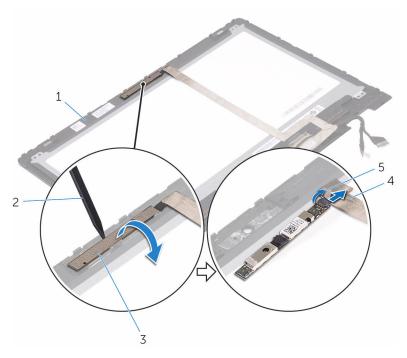

- 1 display panel
- 3 camera module
- 5 tape

- 2 plastic scribe
- 4 camera cable

## Replacing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**

- 1 Connect the camera cable to the camera module.
- 2 Adhere the tape that secures the camera cable to the camera module.
- 3 Using the alignment post place the camera module on the display panel and snap it into place.

- 1 Follow the procedure from step 4 to step 6 in "Replacing the display panel".
- 2 Replace the display assembly.
- **3** Replace the <u>battery</u>.
- 4 Replace the base cover.

## Removing the display cable



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.


## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>display assembly</u>.
- 4 Follow the procedure from step 1 to step 3 in "Removing the display panel".
- **5** Remove the camera.

## **Procedure**

- Peel off the tape and open the latch to disconnect the display cable from the display panel.
- 2 Peel off the sensor-board cable tape and disconnect the sensor-board cable.
- **3** Open the connector latch and disconnect the display cable.
- 4 Note the display cable routing and remove the display cable from the routing guides on the display panel.

## **5** Lift the display cable off the display panel.

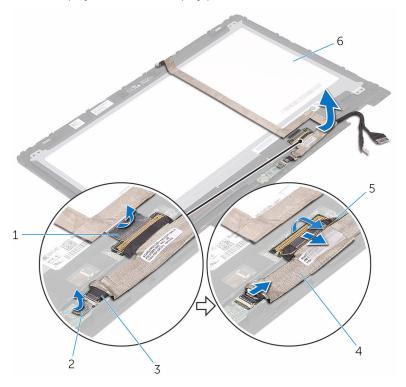

- 1 tape
- 3 sensor-board cable
- 5 latch

- 2 sensor-board cable tape
- 4 display cable
- 6 display panel

## Replacing the display cable



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

### **Procedure**

- 1 Route the display cable through the routing guides on the display panel.
- 2 Slide the display cable into the connector and press down the latch to secure the cable.
- 3 Slide the sensor-board cable into the connector on the sensor board and press down the latch to secure the cable.
- 4 Adhere the sensor-board cable tape.
- **5** Adhere the tape that secures the display cable to the display panel.

- 1 Follow the procedure from step 4 to step 6 in "Replacing the display panel".
- 2 Replace the display assembly.
- **3** Replace the camera.
- 4 Replace the battery.
- 5 Replace the base cover.

## Removing the sensor board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at <a href="https://www.dell.com/regulatory\_compliance">www.dell.com/regulatory\_compliance</a>.

## **Prerequisites**

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>display assembly</u>.
- **4** Follow the procedure from step 1 to step 3 in "Removing the display panel".


## **Procedure**



CAUTION: Place the display-panel assembly on a soft and clean surface to avoid scratching the display.

- 1 Remove the screw that secures the sensor board to the display panel.
- 2 Peel off the tape and open the latch to disconnect the sensor-board cable from the sensor board.

**3** Lift the sensor board off the display panel.

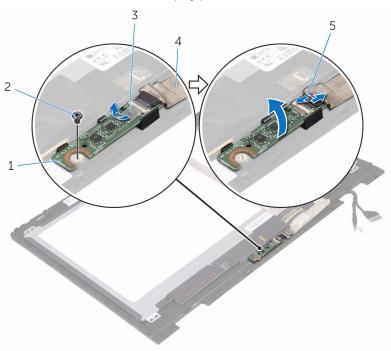

- 1 sensor board
- 3 tape
- 5 latch

- 2 screw
- 4 sensor-board cable

## Replacing the sensor board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory\_compliance.

### **Procedure**

- 1 Align the screw hole on the sensor board to the display panel and snap the sensor board in place.
- 2 Slide the sensor-board cable into the slot on sensor board and press down the latch to secure the cable.
- **3** Adhere the tape on the sensor-board connector to secure the cable.
- 4 Replace the screw that secures the sensor board to the display panel.

- 1 Follow the procedure from step 4 to step 6 in "Replacing the display panel".
- 2 Replace the <u>display assembly</u>.
- **3** Replace the battery.
- 4 Replace the base cover.

## Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board. To flash the BIOS:

- 1 Turn on your computer.
- **2** Go to www.dell.com/support.
- 3 Click or tap Product support, enter the Service Tag of your computer, and then click or tap Submit.
  - **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click or tap **Drivers & downloads** → **Find it myself**.
- **5** Select the operating system installed on your computer.
- 6 Scroll down the page and expand BIOS.
- 7 Click or tap **Download** to download the latest version of the BIOS for your computer.
- **8** After the download is complete, navigate to the folder where you saved the BIOS update file.
- **9** Double-click or double-tap the BIOS update file icon and follow the instructions on the screen.

## **Technology and components**

## **Audio**

The Inspiron-5378 is shipped with Realtek ALC3253 with Waves MaxxAudio Pro, which is the utility to adjust various audio settings.



**NOTE:** The audio drivers are already installed when you receive your computer.

#### Downloading the audio driver

- **1** Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click or tap Product support, enter the Service Tag of your computer and then click or tap Submit.
  - **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click or tap Drivers & downloads → Find it myself.
- 5 Scroll down the page and expand Audio.
- 6 Click or tap **Download** to download the audio driver for your computer.
- **7** After the download is complete, navigate to the folder where you saved the audio driver file.
- 8 Double-click or double-tap the audio driver file icon and follow the instructions on the screen to install the driver

#### Identifying the audio controller

- On the taskbar, click or tap the search box, and then type Device Manager.
- 2 Click or tap Device Manager.

The **Device Manager** window is displayed.

3 Expand Sound, video and game controllers to view the audio controller.

# Before installation ✓ Sound, video and game controllers After installation ✓ Sound, video and game controllers Intel(R) Display Audio Realtek Audio

## Changing the audio settings

- 1 On the taskbar, click or tap the search box, and then type Dell Audio.
- 2 Click or tap **Dell Audio** and change the audio settings as required.

## Camera

The Inspiron 13-5378 is shipped with an integrated 0.92 megapixel high-speed camera with a maximum of 1280 X 720 HD resolution at 30 FPS. The camera has built-in digital-array microphones.



**NOTE:** You must replace the camera module if you encounter any issues with the built-in microphones.

**Infrared camera – optional** - Allows you to video chat, capture photos, and record videos. Depth-sensing feature of the camera enhances security when paired with Windows Hello.

#### Identifying the webcam in device manager

- On the taskbar, click or tap the search box, and then type Device Manager.
- 2 Click or tap Device Manager.

The **Device Manager** window is displayed.


3 Expand Imaging Devices.



## Starting the camera application

1 On the taskbar, click or tap the search box, and then type Camera.

#### 2 Click or tap Camera.

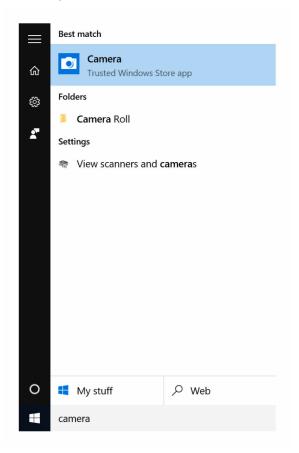

## **Getting the Dell Webcam Central**

A CD is shipped along with your computer, which contains the Dell Webcam Central software. If you do not have the software, you can download it by registering through My Account on the Dell website.



**NOTE:** The Dell Webcam Central is not available for download from the support site or the resource CD.


## Display

The Inspiron 13-5378 is shipped with the following display options:

- 13.3-inch HD WLED touch with 1366 X 768 resolution
- 13.3-inch FHD WLED touch screen with 1920 X 1080 resolution

#### Adjusting the brightness

- 1 Right-click or touch and hold on your desktop and select **Display settings**.
- 2 Drag or swipe the **Adjust brightness level** slider to adjust the brightness.

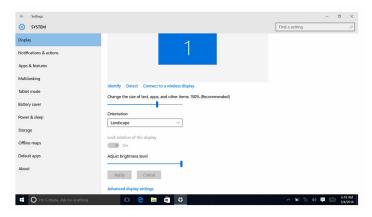


You can press F11 to decrease brightness and F12 to increase brightness.

## Changing the screen resolution


- 1 Right-click or touch and hold on your desktop and select **Display** settings.
- 2 Click or tap Advanced display settings.
- 3 Select the appropriate resolution from the drop-down list.

#### 4 Click or tap Apply.

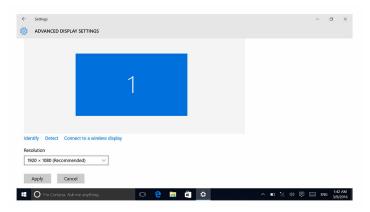

## Rotating the display

- 1 Right-click or touch and hold on your desktop.
- 2 Select **Graphics Options** → **Rotation** and select from the following options:
  - Rotate to 0 Degrees
  - Rotate to 90 Degrees
  - Rotate to 180 Degrees
  - Rotate to 270 Degrees

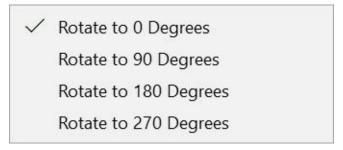

The display can also be rotated using the following key combinations:

- Ctrl + Alt + Up arrow key (Rotate to 0 Degrees)
- Ctrl + Alt + Right arrow key (Rotate to 90 Degrees)
- Ctrl + Alt + Down arrow key (Rotate to 180 Degrees)
- Ctrl + Alt + Left arrow key (Rotate to 270 Degrees)

## Cleaning the display



CAUTION: Do not use substances such as alcohol, chemicals, or household cleaners for cleaning the display.



CAUTION: To avoid damaging the display, do not apply force when cleaning and wipe off any remaining liquid after cleaning.



**NOTE:** A commercial display cleaning kit should be used for cleaning. If unavailable, use a soft, damp microfiber cloth lightly sprayed with distilled water.

- 1 Turn off your computer and display before cleaning.
- 2 Gently wipe the display in circular motions to remove any dust or dirt particles.
- **3** Let the display dry thoroughly before turning it on.

## **HDMI**

The Inspiron 13-5378 supports HDMI to connect a TV or another HDMI-in enabled device. It provides video and audio output. The HDMI port is located on the left side of your computer.



**NOTE:** Appropriate converters (sold separately) are required to connect standard DVI and DisplayPort devices.

## Connecting to external display devices

- 1 Connect the HDMI cable to your computer and the external display.
- **2** Press F8 to display the different modes.

- **3** Select one of the following display modes:
  - PC screen only
  - Duplicate
  - Extend
  - Second screen only
  - NOTE: For more information, see the document that shipped with your display device.




## **Graphics**

The Inspiron 13-5378 is shipped with the following video controllers:

- Intel HD Graphics 610 Intel Celeron and Pentium (Shared system memory)
- Intel HD Graphics 620 Intel Core i3/i5/i7 (Shared system memory)
- Intel Iris Graphics 640 Intel Core i7 (Shared system memory)

#### Downloading the graphics driver

- **1** Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click or tap **Product Support**, enter the Service Tag of your computer and click or tap **Submit**.

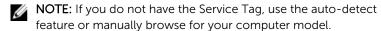

- 4 Click or tap **Drivers & downloads** → **Find it myself**.
- **5** Scroll down the page and expand **Video**.
- **6** Click or tap **Download** to download the graphics driver for your computer.
- **7** After the download is complete, navigate to the folder where you saved the graphics driver file.
- **8** Double-click or double-tap the graphics driver file icon and follow the instructions on the screen to install the driver.

#### Identifying the display adapter

- On the taskbar, click or tap the search box, and then type Device Manager.
- 2 Click or tap **Device Manager**.


The **Device Manager** window is displayed.

3 Expand Display adapters.



# Changing the display settings in Intel HD Graphics Control Panel

1 Right-click or touch and hold on the desktop and select **Graphics**Properties to launch the **Intel HD Graphics Control Panel**.

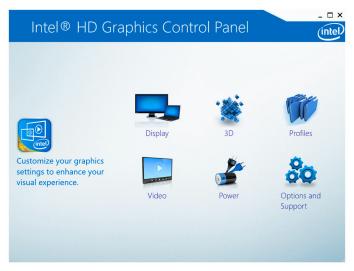

- 2 Click or tap **Display**.
- **3** Change the display settings as required.

## Intel WiDi

The wireless display feature allows you to share your computer display with a compatible TV without using cables. You must connect a wireless display adapter to your TV before setting up the wireless display. To check if your TV supports this feature, see the documentation that is shipped with the TV. The following table provides the basic system requirements for a wireless display.

Processor 2nd generation Intel Core i3, i5, i7

Video Intel HD Graphics

Controller

WLAN card Intel 2230 or Intel 6150

Operating

System

Windows 7 or later

Driver

Download and install the latest driver for "Intel Wireless." Display Connection Manager" available at www.dell.com/

support

## Downloading the WiDi application

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click or tap **Product Support**, enter the Service Tag of your computer and click or tap Submit.



**NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- Click or tap **Drivers & downloads** → **Find it myself**. 4
- 5 Scroll down the page and expand **Video**.
- 6 Click or tap **Download** to download the Intel WiDi application for your computer.
- 7 After the download is complete, navigate to the folder where you saved the WiDi application file.
- 8 Double-click or double-tap the application icon and follow the instructions on the screen to install the application.

## Setting up the wireless display

1 Turn on your computer.



**NOTE:** Ensure that Wi-Fi is enabled.

- 2 Connect the wireless display adapter to the TV.
- 3 Turn on the TV and the wireless display adapter.
- 4 Select the appropriate video source for your TV, such as HDMI1, HDMI2, or S-Video.
- 5 Double-click or double-tap the Intel Wireless Display icon on the desktop.
  - The Intel Wireless Display window is displayed.
- Click or tap Scan for available displays. 6
- 7 Select your wireless display adapter from the **Detected Wireless Displays** list.
- 8 Enter the security code that appears on your TV.

## **USB**

The following table shows the USB ports available in Inspiron 13-5378.

Ports	Location	
USB 3.0 port	Left side	
USB 3.0 port with PowerShare	Left side	
USB 2.0 port	Right side	



**NOTE:** USB 3.0 needs the driver to be installed before it can detect any USB devices

## Downloading the USB 3.0 driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- Click or tap **Product Support**, enter the Service Tag of your computer 3 and click or tap Submit.



**NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- Click or tap **Drivers & Downloads** → **Find it myself**.
- 5 Scroll down the page and expand Chipset.
- Click or tap **Download** to download the USB 3.0 driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved USB 3.0 driver file.
- 8 Double-click or double-tap the USB 3.0 driver file icon and follow the instructions on screen to install the driver.

#### Enabling or disabling the USB in BIOS setup program

- 1 Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.
  - The BIOS setup program is displayed.
- 3 On the left pane, select **Settings** → **System Configuration** → **USB** Configuration.

The USB configuration is displayed on the right pane.

- 4 Select the Enable External USB Port check box to either enable or disable it respectively.
- **5** Save the system setup settings and exit.

## Fixing a no-boot issue caused by USB emulation

Sometimes the computer does not boot to the operating system when USB devices are connected to the computer during startup. This behavior occurs because the computer is looking for bootable files in the USB devices. Follow these steps to fix the no-boot issue:

- **1** Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.
  - The BIOS setup program is displayed.
- 3 On the left pane, select **Settings** → **System Configuration** → **USB Configuration**.
  - The USB configuration is displayed on the right pane.
- 4 Clear the **Enable Boot Support** check box to disable it.
- **5** Save the settings and exit.

## Wi-Fi

The Inspiron 13-5378 is shipped with Wi-Fi 802.11ac.

#### Turning on or off Wi-Fi



**NOTE:** There is no physical switch to enable or disable Wi-Fi. It has to be done through computer settings.

- 1 Swipe-in from the right edge of the display, or click or tap the **Action**Center icon on the task bar to access the Action Center
- 2 Click or tap Wi-Fi to turn Wi-Fi on or off.


## Downloading the Wi-Fi driver

- **1** Turn on your computer.
- **2** Go to www.dell.com/support.

- 3 Click or tap Product Support, enter the Service Tag of your computer, and then click or tap Submit.
  - **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click or tap **Drivers & downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Network**.
- 6 Click or tap **Download** to download the Wi-Fi driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the Wi-Fi driver file
- **8** Double-click or double-tap the driver file icon and follow the on-screen instructions to install the driver.

## **Configuring Wi-Fi**

- 1 Turn on Wi-Fi. For more information, see <u>Turning on or off Wi-Fi</u>.
- 2 Swipe-in from the right edge of the display, or click or tap the **Action** Center icon on the task bar to access the Action Center.
- 3 Right-click or touch and hold Wi-Fi, and then click or tap Go to settings. A list of available networks is displayed.
- 4 Select your network and click or tap **Connect**.

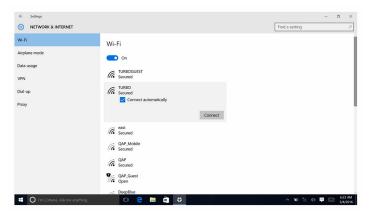

NOTE: Type the network security key, if prompted.

## **Bluetooth**

The Inspiron 13-5378 is shipped with Bluetooth 4.0 and Bluetooth 4.1 (optional).

## Turning on or off Bluetooth




**NOTE:** There is no physical switch to enable or disable Bluetooth. It has to be done through the computer settings.


- 1 Swipe-in from the right edge of the display, or click or tap the **Action**Center icon on the task bar to access the Action Center.
- 2 Click or tap **Bluetooth** to turn Bluetooth on or off.

## Pairing the Bluetooth-enabled devices

- 1 Turn on Bluetooth. For more information, see <u>Turning on or off</u> Bluetooth.
- 2 Swipe-in from the right edge of the display, or click or tap the **Action**Center icon on the task bar to access the Action Center.
- 3 Right-click or touch and hold **Bluetooth**, and then click or tap **Go to settings**.
- **4** Select the required Bluetooth device for pairing.
- 5 Click or tap **Pair** to pair the bluetooth devices.

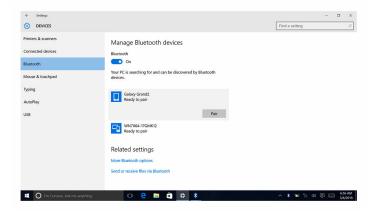


6 Click or tap Yes to confirm the passcodes on both the devices.

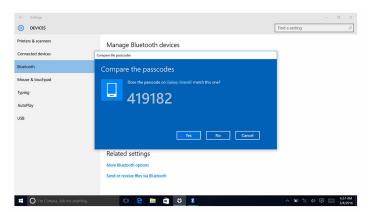

## Removing the Bluetooth device


- Swipe-in from the right edge of the display, or click or tap the Action Center icon on the task bar to access the Action Center.
- 2 Right-click or touch and hold Bluetooth, and then click or tap Go to settings.
- 3 Click or tap the device you want to remove, and click or tap Remove device.

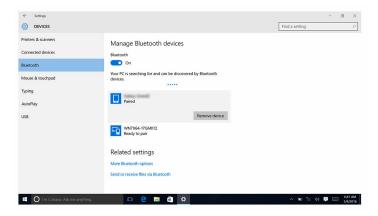

## Transferring files between devices using Bluetooth

1 Swipe-in from the right edge of the display, or click or tap the **Action**Center icon on the task bar to access the Action Center.

- 2 Right-click or touch and hold Bluetooth, and then click or tap Go to settings.
- **3** Select your Bluetooth device.
- 4 Click or tap Send or receive files via Bluetooth.
- 5 In the **Bluetooth File Transfer**window, click or tap **Send files**, and then select the file you want to transfer.

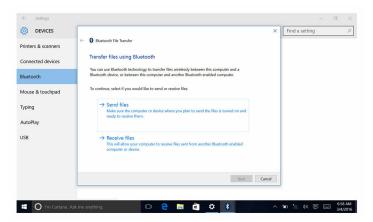

## Hard drive

The following table shows the hard-drive options available in Inspiron 13-5378.

Capacity	Dimensions
HDD	2.5-inch drive
SSD	2.5-inch drive

## Identifying the hard drive

- On the taskbar, click or tap the search box, and then type Device Manager.
- 2 Click or tap Device Manager.
  The Device Managerwindow is displayed.
- 3 Expand Disk drives.



## Identifying the hard drive in BIOS setup program

- **1** Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.

A list of hard drives are displayed under the **System Information** in the **General** group.

## Media-card reader

The Inspiron 13-5378 has one SD-card slot located on the right side of your computer.

## Browsing a media card

- Insert the media card with the metal contacts facing down.The card will auto-play and a notification appears on the screen.
- **2** Follow the instructions on the screen.

## Downloading the media-card reader driver

- **1** Turn on your computer.
- **2** Go to <u>www.dell.com/support</u>.
- 3 Click or tap Product Support, enter the Service Tag of your computer, and then click or tap Submit.
  - **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click or tap **Drivers & Downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Chipset**.
- **6** Click or tap **Download** to download the media-card reader driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the media-card reader driver file.
- **8** Double-click or double-tap the card-reader driver file icon and follow the instructions on the screen to install the driver.

## Keyboard

The Inspiron 13-5378 is shipped with a backlit keyboard.

## Changing the keyboard language

- 1 Click or tap Start
- 2 Click or tap Settings 🛱.
- 3 Click or tap Time & language → Region & language.
- 4 Click or tap Add a language.
- 5 Choose the language you want to add and select a country for the language.
- **6** Under **Languages** click or tap the language that you want to set as the default language.
- 7 Click or tap Set as default.

## **Keyboard shortcuts**

Keys	Description
F1 <sub>* X</sub>	Mute audio
F2 •	Decrease volume
F3 (1)	Increase volume
F4	Play previous track/chapter
F5 ▶Ⅱ	Play/Pause
F6 <b>▶</b>	Play next track/chapter
F8 🚉	Switch to external display
F9 P	Search
F10	Toggle keyboard backlight

Keys	Description
F11 🐵	Decrease brightness
F12	Increase brightness
Fn + PrtScr	Turn off/on wireless
Fn + B	Pause/Break
Fn + Insert	Sleep
Fn + S	Toggle scroll lock
Fn + H	Toggle between power and battery- status light/hard-drive activity light
Fn + R	System request
Fn + Ctrl	Open application menu
Fn + Esc A	Toggle Fn-key lock
Fn + End →	End
Fn + ←Home	Home
Fn + PgDn	Page down
Fn + TPgUp	Page up

# Touch pad


The Inspiron 13-5378 is shipped with a Precision touch pad.

A precision touch pad is a new class of input device that provides high precision pointer input and gesture functionality. Precision touch pads interact with the operating system directly without a driver.

The operating system handles the overall functionality of the touch pad and there are no separate drivers available for download.

## Identifying the touch pad

- On the taskbar, click or tap the search box, and then type Device Manager.
- Click or tap Device Manager.The Device Manager window is displayed.
- 3 Expand Mice and Other Pointing Devices.

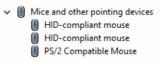

## Touch pad gestures

Gesture	Procedure	Result
Tap to click	Tap on the touch pad.	Selects an item
Tap, tap-slide to highlight or drag	Tap, tap-slide on the touch pad	Highlights text, and drags and drops an item
Slide to scroll	Place two fingers on the touch pad, and then slide.	Scrolls the page. Pages can scroll left and right, up and down, or both.
Pinch or stretch to zoom	Place two fingers on the touch pad and move them toward each other or away from each other	Zooms in (stretch) or zooms out (pinch) on the touch pad.
Swipe for Action Center	Swipe in from the right edge	Opens the Action Center. Swipe again to hide the Action Center.
Swipe for adding new desktop	Swipe in from the left edge	Click or tap New <b>New desktop</b> to add a new desktop

## Power adapter

The Inspiron 13-5378 is shipped with a 45 W power adapter.



WARNING: When you disconnect the power adapter cable from the computer, pull on its connector, not the cable itself. When disconnecting cable, keep it evenly aligned to avoid bending any connector pins. When connecting the cable, ensure that the port and the connector are correctly oriented and aligned.



WARNING: The power adapter works with electrical outlets worldwide. However, power connectors and power strips vary among countries. Using an incompatible cable or improperly connecting the cable to the power strip or electrical outlet may cause fire or equipment damage.



**NOTE:** Depending on the region, two or three pin adapters are available. Please verify part numbers from SPMD before replacing the power adapter.

## **Battery**

The Inspiron 13-5378 is shipped with 4-cell "smart" lithium-ion (56 WHr) battery.



**NOTE:** Batteries are covered for a period of one year from the invoice date unless stated otherwise in the invoice.

## Chipset

The chipset is virtually divided into two sections — Northbridge and Southbridge. All computer components communicate with the CPU through the chipset.

The Inspiron 13-5378 is shipped with the chipset that is integrated in the 7th generation Intel Core i3/i5/i7 processors.

## Downloading the chipset driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click or tap **Product Support**, enter the Service Tag of your computer, and then click or tap **Submit**.



**NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- Click or tap **Drivers & downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Chipset**.

- 6 Click or tap **Download** to download the appropriate chipset driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the chipset driver file.
- **8** Double-click or double-tap the chipset driver file icon and follow the instructions on the screen to install the driver.

## Identifying the chipset

- On the taskbar, click or tap the search box, and then type Device Manager.
- 2 Click or tap Device Manager.
  The Device Manager window is displayed.
- 3 Expand System devices.



## Memory

The Inspiron 13-5378 has two SODIMM (RAM) slots, which are accessible by removing the base cover. Your computer supports 4 GB, 8 GB, 12 GB, and 16 GB dual-channel DDR4 memory of up to 2133 MHz.

## Checking the system memory in Windows

- 1 Click or tap Start
- 2 Select **Settings** .
- 3 Click or tap System → About.

## Verifying the system memory in BIOS setup program

- **1** Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.
- 3 On the left pane, select Settings → General → System Information. The memory information is displayed on the right pane.

## Testing memory using ePSA

- **1** Turn on or restart your computer.
- 2 Press F12 after the Dell logo is displayed on the screen to access the boot menu.
- 3 Use the arrow keys to highlight the Diagnostics menu option and press Enter.
- **4** Follow the instructions on the screen to complete the ePSA Pre-boot System Assessment (PSA).
  - **NOTE:** If the operating system logo appears, wait until you see the desktop. Turn off your computer and try again.

## **Processors**

The Inspiron 13-5378 is available with the following processor options:

- 7th generation Intel Core i3/i5/i7
- Intel Celeron Dual Core

Intel Pentium Dual Core


## Identifying the processors in Windows

- On the taskbar, click or tap the search box, and then type Device Manager.
- Click or tap Device Manager.The Device Manager window is displayed.
- 3 Expand Processors.



## Checking the processor usage in the task manager

- 1 Right-click or double-tap on the taskbar.
- 2 Click or tap Task Manager.
  The Task Manager window is displayed.
- **3** Click or tap **Performance** tab to display processor performance details.

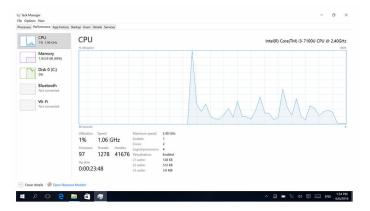

## **Operating System**

The Inspiron 13-5378 is shipped with the Windows 10 factory installation.

## **Service Tag location**

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

## **Device drivers**

## **Intel Dynamic Platform and Thermal Framework**

In the Device Manager, check if the Intel Dynamic Platform and Thermal Framework is installed.

Install the driver updates from www.dell.com/support.

```
✓ Imple(R) Dynamic Platform and Thermal Framework
Imple(R) Dynamic Platform and Thermal Framework Generic Participant
Imple(R) Dynamic Platform and Thermal Framework Generic Participant
Imple(R) Dynamic Platform and Thermal Framework Memory Participant
Imple(R) Dynamic Platform and Thermal Framework Memory Participant
Imple(R) Dynamic Platform and Thermal Framework Processor Participant
Imple(R) Dynamic Platform and Thermal Framework Processor Participant
Imple(R) Dynamic Platform and Thermal Framework Processor Participant

Imple(R) Dynamic Platform and Thermal Framework Processor Participant

Imple(R) Dynamic Platform and Thermal Framework Processor Participant

Imple(R) Dynamic Platform and Thermal Framework Processor Participant

Imple(R) Dynamic Platform and Thermal Framework Processor Participant

Imple(R) Dynamic Platform and Thermal Framework Processor Participant

Imple(R) Dynamic Platform and Thermal Framework Platform

Imple(R) Dynamic Platform and Thermal Framework Platform

Imple(R) Dynamic Platform Platform

Imple(R) Dynamic Platform Platform

Imple(R) Dynamic Platf
```


## **Intel Chipset Software Installation Utility**

In the Device Manager, check if the chipset driver is installed. Install the Intel chipset updates from <a href="https://www.dell.com/support">www.dell.com/support</a>.



## Intel HD Graphics driver

In the Device Manager, check if the video driver is installed. Install the video driver updates from <a href="https://www.dell.com/support">www.dell.com/support</a>.



#### **Intel Serial IO Driver**

In the Device Manager, check if the Intel Serial IO Driver is installed. Install the driver updates from <a href="https://www.dell.com/support">www.dell.com/support</a>.

- → Image Human Interface Devices
  - Converted Portable Device Control device
  - GPIO Buttons Driver
  - GPIO Dock Mode Indicator Driver
  - GPIO Laptop or Slate Indicator Driver
  - HID PCI Minidriver for ISS
  - HID-compliant consumer control device
  - HID-compliant system controller
  - HID-compliant touch pad
  - HID-compliant touch screen
  - HID-compliant vendor-defined device
  - 🛺 HID-compliant vendor-defined device
  - HID-compliant vendor-defined device

  - All Hib-compliant vendor-defined device
  - HID-compliant wireless radio controls
  - I2C HID Device
  - Microsoft Input Configuration Device
  - Portable Device Control device
  - Sideband GPIO Buttons Injection Device
  - USB Input Device
  - W USB Input Device



## **Intel Trusted Execution Engine Interface**

In the device manager, check if the Intel Trusted Execution Engine Interface driver is installed.

Install the driver updates from www.dell.com/support.



## Intel Virtual Button driver

Check if the Intel Virtual Button driver is installed by looking at Device Manager under System devices (shown below).

Install the driver update from www.dell.com/support.



#### Intel Wireless 3165 WiFi and Bluetooth drivers

In the Device Manager, check if the network card driver is installed. Install the driver updates from <a href="https://www.dell.com/support">www.dell.com/support</a>.



In the Device Manager, check if the Bluetooth driver is installed. Install the driver updates from www.dell.com/support.



## **BIOS** overview

The BIOS manages data flow between the computer's operating system and attached devices such as hard disk, video adapter, keyboard, mouse, and printer.

## **Entering the BIOS setup program**

- **1** Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.

You can change the user-defined settings in BIOS setup program.

#### **Boot menu**

The Inspiron 13-5378 includes a one-time boot menu. By using this feature, you can change the sequence of devices that your computer attempts to boot from, for example, floppy, CD-ROM, or hard drive.

#### **Boot menu enhancements**

The boot menu enhancements are as follows:

- **Easier Access** Press F12 to access the boot selection menu.
- User Prompting The user is prompted to use the keystroke on the BIOS screen.
- Diagnostics Options The boot menu includes the ePSA diagnostic options.

## Timing key sequences

The keyboard is not the first device initialized by Setup. As a result, if you press a keystroke too early, the keyboard is locked out. In such case, a keyboard error message is displayed on the screen, and you cannot restart your computer with the Ctrl+Alt+Del key combination.

To prevent the keyboard from locking, wait until the keyboard is initialized completely. The keyboard is initialized if one of the following occurs:

- The keyboard lights flash.
- The F2=Setup prompt appears at the top right corner of the screen during boot.

# System diagnostic lights

**Power and battery-status light/hard-drive activity light:** Indicates the battery-charge status or the hard-drive activity.



**NOTE:** Press Fn+H to toggle this light between power and battery-status light and hard-drive activity light.

#### Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

#### Power and battery-status light

Indicates the power and battery-charge status.

**Solid white** – Power adapter is connected and the battery has more than 5 percent charge.

**Amber** – Computer is running on battery and the battery has less than 5 percent charge.

#### Off

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 5 percent charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light blinks amber along with beep codes indicating failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different light patterns, what they indicate, and the suggested solutions.

Light pattern	Problem description	Suggested solution
2,1	CPU failure	Replace the system board.
2,2	System board: BIOS and ROM failure	Flash latest BIOS version. If problem persists, replace the system board.
2,3	No memory or RAM detected	Confirm that the memory module is installed properly. If

Light pattern	Problem description	Suggested solution
		problem persists, replace the memory module.
2,4	Memory or RAM failure	Replace the memory module.
2,5	Invalid memory installed	Replace the memory module.
2,6	System board or chipset error	Replace the system board.
2,7	LCD failure	Replace the LCD.
3,1	CMOS battery failure	Replace the CMOS battery.
3,2	PCI or video card or chip failure	Replace the CMOS battery.
3,3	Recovery image not found	Reimage the system.
3,4	Recovery image found but invalid	Reimage the system.

The computer may emit a series of beeps during start-up if the errors or problems cannot be displayed. The repetitive beep codes help the user troubleshoot problems with the computer.

Camera status light: Indicates whether the camera is in use.

- Solid white Camera is in use.
- Off Camera is not in use.

Caps Lock status light: Indicates whether Caps Lock is enabled or disabled.

- Solid white Caps Lock enabled.
- Off Caps Lock disabled.

# Getting help and contacting Dell

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Information about Dell products and

www.dell.com

services

Windows 8.1 and Windows 10 Dell Help & Support app



Windows 10

Get started app



Windows 8.1

Help + Tips app



Accessing help in Windows 8, Windows 8.1, and Windows 10

Accessing help in Windows 7

Online help for operating system

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

Learn about your operating system, setting up and using your computer, data backup, diagnostics, and so on.

In Windows search, type Help and Support, and press Enter.

Click Start → Help and Support.

www.dell.com/support/windows www.dell.com/support/linux

www.dell.com/support

See Me and My Dell at www.dell.com/support/manuals.

# **Contacting Dell**

To contact Dell for sales, technical support, or customer service issues, see <a href="https://www.dell.com/contactdell">www.dell.com/contactdell</a>.



**NOTE:** Availability varies by country and product, and some services may not be available in your country.



**NOTE:** If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.